

## **Magnum Millennium 2002**

### **Export modification**

Turn on the radio. It will come up on the 10 m band (28.000-29.699 MHz).

Press the FUNC button, then press and hold down for 5 seconds the FREQUENCY SELECTOR SWITCH. The band indicator (A-J) will appear on the screen. To change bands, push and release the FREQUENCY SELECTOR SWITCH. Band E is the normal 40 channel CB band. To toggle between frequency and channel display press FUNC, then press and quickly release the CHANNEL SELECTOR SWITCH. When the channel numbers are displayed, there will be a number also displayed to the right of the band. This number is the last digit of the frequency display.

Note that every time the radio is turned on, it will default to 10 m mode.