

HANDHELD RADIO SCANNER

Quick Start Guide

TRX-1

START HERE!

Package Contents:



Scanner



Antenna



Protective TPU Case with 2 Inserts



Swivel Belt Clip



USB Cable

Also Included:

- MicroSD Card
- User Guide

See the User Guide for complete instructions



WHISTLER

INSTALL BATTERIES

1

Rechargeable Battery **Alkaline Battery**

Battery Type Selector

A low battery warning sounds every 30 seconds (default setting) when the batteries are low.

- Slide open the battery compartment cover.
- Set the Battery Type Selector:
 - **ALKA** – Alkaline
 - **NI-MH** – Rechargeable Ni-MH
- Install four AA batteries, matching the polarity symbols (+ and -).
- Replace the cover.

CONNECT ANTENNA

2

- Align the antenna slots with the tabs on the antenna jack.
- Press the antenna down over the jack and turn the antenna's base clockwise.

STEP-BY-STEP PROGRAMMING

3

- Press the **Power** button.
- Use the **▲/▼/◀/▶** to set the date and time. Press **SEL** to save.
- Select Browse Library.
- Select country.
- Select first letter of State/Province.
- Select State/Province.
- Select Counties/Cities.
- Select first letter of County.
- Select County.
- Select Data Type **NOTE:** Police/Fire and Emergency services will be in "Categories" for smaller towns, "Systems" for larger ones.
- Select desired agency, category or system available for the county.
- Select desired subcategory. Investigate listings by pressing **▶** to go deeper into that selection. When the cursor switches from the right side of the screen to the left, you are at the bottom of a category. **NOTE:** When selecting a System, check at least one of the "Sites" in range, then go further into Categories to find objects.
- Use the **SEL** button to check boxes for services you wish to monitor. Press **SEL** to un-check a selected service and at anytime press **◀** to go back. Once all desired objects have been checked, press **MENU**.
- Select Import Selected.
- Select desired Scanlist location for selected objects and press **◀** to save.
- Press **SEL** to continue to main menu.
- Select Scanlists from main menu. Use the **▲/▼/◀/▶** to rename the scanlist if desired. Confirm box beside desired scanlist is checked.
- Repeat steps to add additional scanlists, or select Scan from the Main Menu to begin scanning.

NOTE: When traveling or for quick programming, refer to location based, ZIP code programming, of the User Guide.