

SC180

**100-Channel
Programmable
Twin Turbo
Hand-Held
Sports
Scanner**



OPERATING GUIDE

Precautions

Before you use this scanner, please read and observe the following:

■ **WARNING!**

Uniden **DOES NOT** represent this unit to be waterproof. To reduce the risk of fire or electrical shock, **DO NOT** expose this unit to rain or moisture.

■ **IMPORTANT!**

Be sure to use only the supplied earphone, or a stereo headset of the proper impedance (32 Ω). Use of an incorrect earphone or stereo headset may be potentially hazardous to your hearing.

■ **WARNING:**

Set the Volume to a comfortable audio level coming from the speaker before plugging in the supplied earphone or a stereo headset of the proper impedance (32 Ω). Otherwise you might experience some discomfort or possible hearing damage if the Volume suddenly becomes too loud because of the Volume Control or Squelch Control setting. This may be particularly true of the type of earphone that is placed in the ear canal.

■ **NICKEL-CADMIUM BATTERY WARNING**


- This equipment contains a Nickel-Cadmium Battery.
- Cadmium is a chemical known to the State of California to cause cancer.
- The Nickel-Cadmium Battery contained in this equipment may explode if disposed of in a fire.
- **Do not** short circuit the battery.
- **Do not** charge the Nickel-Cadmium Battery used in this equipment with any other AC Adapter/Charger other than the one designed to charge this battery (AD-70U). Using another charger may damage the battery, or cause the battery to explode.

■ **Nickel-Cadmium Battery Disposal**

Nickel-Cadmium Batteries Must Be Disposed Of Properly. Read the Nickel-Cadmium Battery Disposal package insert for important information.

Uniden® and Bearcat® are registered trademarks of Uniden America Corporation.

Sportcat™ is a trademark of Uniden America Corporation.

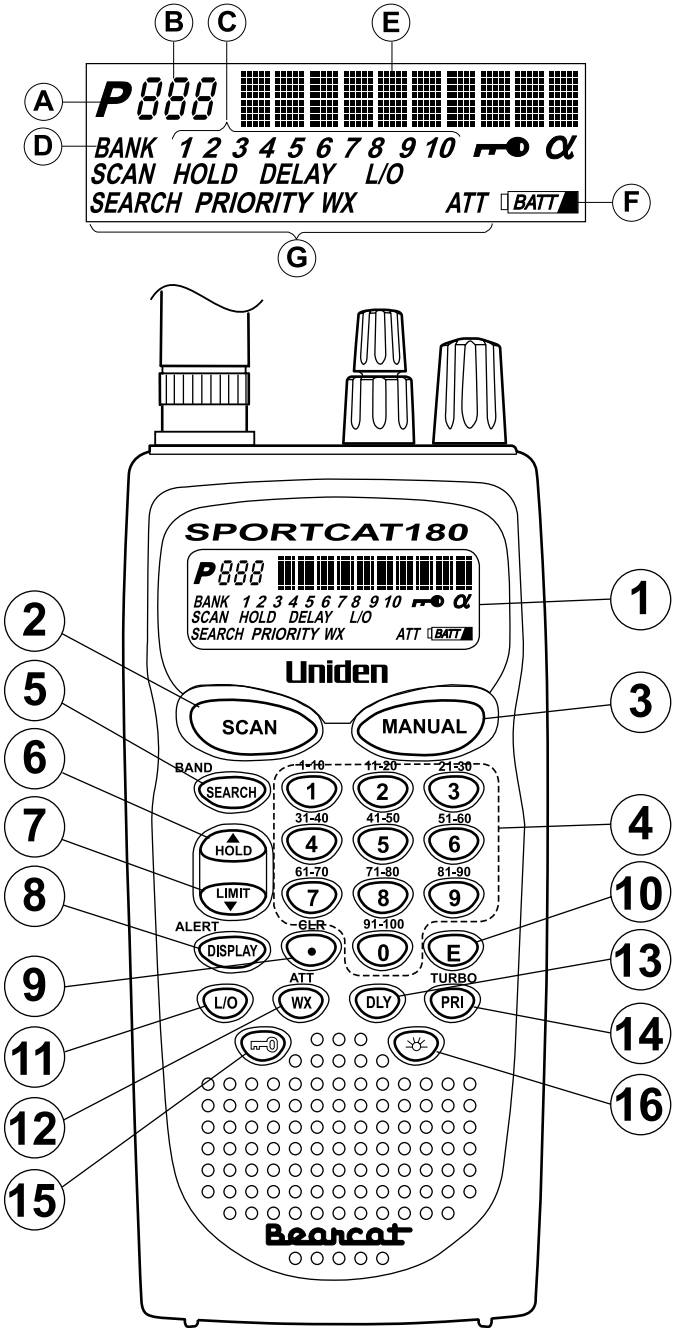

Contents

| | |
|---|-----------|
| About Your New SportCat | 2 |
| What is Scanning? | 2 |
| What is Searching? | 2 |
| Important Notice | 3 |
| Types of Communication | 3 |
| Where to Obtain More Information | 4 |
| Unpacking | 4 |
| Feature Highlights | 5 |
| Controls and Indicators | 6 |
| Top View | 6 |
| Front View | 6 |
| Setup | 10 |
| Charging the Battery Pack | 10 |
| Mounting the Flexible Antenna | 10 |
| Installing the Belt Clip | 11 |
| Using the Earphone | 11 |
| Operation Overview | 12 |
| Programming Channels | 14 |
| Programming By Manual Entry | 14 |
| Deleting a Stored Frequency | 15 |
| Programming SEARCH | 15 |
| Programming Channels with Alpha Characters | 16 |
| Alert Beep Setting | 17 |
| Scanning | 18 |
| Bank Scanning | 18 |
| Priority Scan | 19 |
| Delay | 19 |
| Locking Out Channels | 20 |
| Looking for "Locked Out" Channels | 20 |
| Weather Channel Scanning | 21 |
| Searching | 22 |
| Band Search | 22 |
| Limit Search | 22 |
| Search Skip Frequency | 23 |
| Care and Maintenance | 24 |
| Replacing the Battery Pack | 24 |
| Location | 25 |
| Cleaning | 25 |
| Repairs | 25 |
| Birdies | 26 |
| Proper Care of Your Scanner | 26 |
| Optional Accessories and Replacement Parts | 27 |
| Troubleshooting | 28 |
| Technical Specifications | 29 |

About Your New SportCat


The **SportCat**[™] is a brand new state-of-the-art information radio with automatic scanning capabilities. It can store frequencies such as sporting events, police, fire/emergency, and other communications into 10 banks of 10 channels each. And you can scan all 100 channels at super fast Turbo Scan speed.

With the **SportCat**, you can do a fast search for active frequencies on all 12 preprogrammed bands. In the VHF bands (29-54MHz and 137-174MHz) you can also use super fast Turbo Search.

What is Scanning?


Unlike standard AM or FM radio stations, most two-way communications (listed below) do not transmit continuously. The **SportCat** scans programmed channels at the rate of nearly 100 channels per second until it finds an active frequency.

Scanning stops on an active frequency, and remains on that channel as long as the transmission continues. When the transmission ends, the scanning cycle resumes until another transmission is received. Or, you can select an optional Delay so the scanner stays on the channel for 2 more seconds after the transmission stops, waiting for another transmission, before resuming scanning.

While the **SportCat** is scanning channels it is in "SCAN Mode". When you stop the scanning with , it is in "MANUAL Mode".

What is Searching?

The **SportCat** can search each of 12 preprogrammed bands to find active frequencies. This is different from scanning, because you can search for frequencies that have not been programmed into your **SportCat**. You can also search within the range of frequencies you have programmed before. You can set the direction of searching as well as the speed. The Turbo Search feature, new for Uniden scanners, can search VHF bands at up to 3 times the normal speed.

When the **SportCat** is searching for active frequencies, it is in "SEARCH Mode" or "TURBO SEARCH Mode". When you stop the search with , it is in "SEARCH HOLD Mode". With both Turbo Scan and Turbo Search, your **SportCat** is truly a Twin Turbo Scanner.

Important Notice

- This scanning radio has been manufactured so that it will not tune to the radio frequencies assigned by the FCC for cellular telephone usage. The Electronic Communications Privacy Act of 1986, as amended, makes it a federal crime to intentionally intercept cellular or cordless telephone transmissions or to market this radio when altered to receive them.
- The installation, possession, or use of this scanning radio in a motor vehicle may be prohibited, regulated, or require a permit in certain states, cities, and/or local jurisdictions.
Your local law enforcement officials should be able to provide you with information regarding the laws in your community.
- Changes or modifications to this product not expressly approved by Uniden, or operation of this product in any way other than as detailed by this Operating Guide, could void your authority to operate this product.

Types of Communication

You will be able to monitor communication such as:

- » Automobile, boat, and marathon races
- » Golf tournaments
- » Traffic information
- » Police and fire department (including rescue and paramedics)
- » NOAA and Canadian weather broadcasts (10 preprogrammed channels)
- » Land transportation, such as trucking firms, buses, taxis, tow trucks, and railroads
- » Marine and amateur radio.
- » Aircraft
- » Public Service 800 MHz band

And many more in the following 12 Bands:

| RANGE (MHz) | STEP (kHz) | BAND | SUBJECT |
|------------------------|-----------------------|-------------|---------------------------|
| 29.0000-29.9950 | 5 | NFM | 10 Meter Amateur Band |
| 30.0000-49.9950 | 5 | NFM | VHF Low Band |
| 50.0000-54.0000 | 5 | NFM | 6 Meter Amateur Band |
| 108.0000-136.9875 | 12.5 | AM | AM Aircraft |
| 137.0000-143.9950 | 5 | NFM | Military Land Mobile |
| 144.0000-147.9950 | 5 | NFM | 2 Meter Amateur Band |
| 148.0000-174.0000 | 5 | NFM | VHF High Band |
| 406.0000-419.9875 | 12.5 | NFM | Federal Govt. Land Mobile |
| 420.0000-449.9875 | 12.5 | NFM | 70 cm Amateur Band |
| 450.0000-469.9875 | 12.5 | NFM | UHF Standard Band |

| RANGE (MHz) | STEP (kHz) | BAND | SUBJECT |
|------------------------|-----------------------|-------------|------------------------------|
| 470.0000-512.0000 | 12.5 | NFM | UHF "T" Band |
| 806.0000-823.9875 | 12.5 | NFM | Public Service "800" Band |
| 849.0125-868.9875 | 12.5 | NFM | |
| 894.0125-956.0000 | 12.5 | NFM | |

Important! *The SportCat will not tune within the Cellular Telephone Band.*

Where to Obtain More Information

The Bearcat Radio Club and other similar hobby clubs have publications, information on computer bulletin boards, and even contests for the radio enthusiasts. See the enclosed pamphlets for more information. Additional information is also available through your local library.

Unpacking

Carefully check the contents against this list:

- **SportCat** Twin Turbo Sports Scanner
- Rubber Antenna
- AC Adapter/Charger (AD-70U)
- Earphone
- Belt Clip with 2 Screws
- Battery (BP-180)
- This Operating Guide
- Frequency Directories Order Form and Betty Bearcat Club Information
- SportCat Frequency Guide
- Nickel-Cadmium Battery Disposal Notice
- Product Registration Form

If any items are missing or damaged, call the Uniden parts department at the number below.

Please read this Operating Guide thoroughly before operating the scanner.

Uniden Parts Department

(800) 554-3988

Hours are 8:30 a.m. to 5:00 p.m. Central Time

Monday to Friday

We can also be reached on the web at


www.uniden.com

Feature Highlights

- ◆ **Twin Turbo Scan & Search** — This lightning-fast technology enables the **SportCat** to scan nearly 100 channels per second. Search speed is selectable between 100 and 300 steps per second. (300 steps per second only in bands with 5 kHz steps.) Because the frequency coverage is so large (see previous section for band listing), very fast scanning and searching are essential. That is why we combined our latest technology — Twin Turbo — into the **SportCat**.
- ◆ **100 Channels** You can program each of these memory channels to store one frequency.
- ◆ **12 Bands, 10 Banks** Includes 12 Bands, with Aircraft and 800 MHz. 10 Banks of 10 channels each are useful for storing similar frequencies in order to maintain faster scanning cycles.
- ◆ **29 MHz - 956 MHz** Indicates the range of frequencies that can be searched within the bands of your scanner.
(*Note: The frequency coverage is not totally continuous from 29.0 MHz to 956 MHz.*)
- ◆ **10 Priority Channels** You can assign *one* Priority Channel in each Bank. Assigning priority channels allows you to keep track of activity on your most important channel(s) while monitoring other channels for transmissions. (Priority Channels are initially set in the first channel in each Bank.)
- ◆ **Weather Channels** Lets your scanner function as a weather information radio.
- ◆ **Memory Backup** The stored channels are retained in memory permanently.
- ◆ **Programmable Alpha Characters** You can program up to 100 channels with alphabetical characters for easy reference.
- ◆ **Band Search** You can search within the preprogrammed bands.
- ◆ **Limit Search** You can search within a specific range of frequencies.
- ◆ **VFO Search** You can search by using the VFO control.
- ◆ **Alert Beep** If the **SportCat** finds a transmission on a channel you have preset, it beeps twice.
- ◆ **Auto Light** The **SportCat** can turn on its backlight automatically when it finds a transmission if this function is activated.

Controls and Indicators

Top View

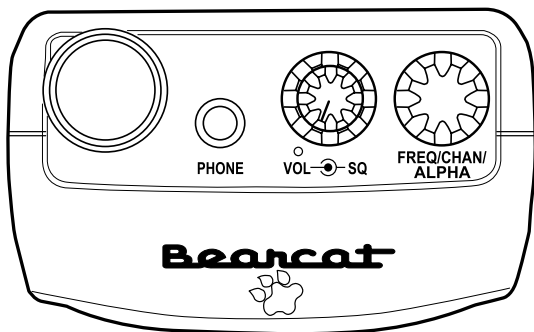

Antenna Connector

Connect the rubber antenna to the BNC connector and turn clockwise until it locks.

Earphone Jack

Plug the supplied earphone into this jack for private listening. When the earphone is connected, the internal speaker is disconnected.

Note the warning on the Inside Front Cover and on page 11.

SQUELCH Control

Adjust this control to set the scan threshold and to eliminate the background rushing noise heard in the absence of an incoming signal. See the Operation Overview Section for adjustment procedures.

ON-OFF/ VOLUME Control

Use this control to turn the scanner on or off, and to adjust the volume.

VFO Control


Use this control to select channels in Manual mode, select the band for Band Search, and select frequencies in Band/Limit Search mode. You can also use this to program Alpha Name characters.

Front View

(Refer to the illustration on page iii)

1. LCD DISPLAY — The liquid crystal display (LCD) shows the current channel and frequency. It also displays the mode, status, and bank indicators.

- A. Priority Channel Indicator** — **P** appears when the scanner stops on a Priority Channel.

- B. Channel Number** — Indicates the current channel that the scanner is on.
- C. Memory Bank Numbers** — Each Memory Bank consists of 10 channels that you can select or deselect during scanning operation, using the numeric keypad. When you select a Bank, its number appears on the display. When you deselect a Bank, its number disappears from the display. When you press  to stop scanning, only the Bank of the current channel appears.
- D. Bank Indicator** — Appears with the Bank Numbers (1~10).
- E. Frequency Indicator** — Indicates the frequency being received by the scanner, or Alpha Name, etc.
- F. Low Battery Indicator** — Appears on the display when the Battery Pack is low and needs recharging.
- G. Mode/Function Indicators** — *(Only the active mode(s)/function(s) are displayed during operation.)*

SCAN Indicates SCAN Mode.

SEARCH Indicates SEARCH Mode. Flashes when in TURBO SEARCH Mode.

PRIORITY Indicates PRIORITY SCAN is activated.

HOLD Indicates SCAN HOLD or SEARCH HOLD Mode.

DELAY Indicates DELAY is activated.

L/O In SCAN Mode, indicates the channel shown is “Locked Out”. In SEARCH Mode, indicates the frequency shown is “Locked Out”.

WX Indicates WEATHER SCAN Mode.

 
ATT Appears when the Attenuator function is set.






Indicates the keypad is locked.





















Appears when the display mode is Alpha Name mode.

2. Press  to start scanning all programmed channels that are not locked out. (**SCAN** moves across the display during scanning.)

3. In SCAN or SEARCH Mode, press  to stop scanning. (**HOLD** appears on the display.)
In Manual mode, press  to step up the channel.
4. **NUMERIC KEYPAD** — Use these keys to program a channel for scanning. Also use to access a channel directly with . During SCAN Mode, use these keys to select or deselect any of the 10 memory banks. (Only the selected bank indicator(s) appear on the display.)

Note: *You cannot deactivate all 10 banks at the same time.*

| Key | Bank | Channel |
|---|------|----------|
|  | 1 | 1 - 10 |
|  | 2 | 11 - 20 |
|  | 3 | 21 - 30 |
|  | 4 | 31 - 40 |
|  | 5 | 41 - 50 |
|  | 6 | 51 - 60 |
|  | 7 | 61 - 70 |
|  | 8 | 71 - 80 |
|  | 9 | 81 - 90 |
|  | 10 | 91 - 100 |

5. Press /**BAND** to start Limit search.
Press and hold /**BAND** to select the band for band search. Then press /**BAND** again to start band search.
6. Press  to stop Band search, Limit search and WX scan. Also, press it to move to next higher channel or frequency. Press and hold  to change the search direction to upper side.
7. In Limit search, input the frequency and press  to program the lower/higher frequency. Press  to stop Band search, Limit search, and WX scan. Also, press it to move to next lower channel or frequency. Press and hold  to change the search direction to lower side.

8. Press **DISPLAY** / **ALERT** to change the display mode when you program frequency or Alpha characters. Press and hold **DISPLAY** / **ALERT** to set the Alert Beep function in Manual mode.
9. Use **◉** / **CLR** to enter the decimal point when programming a frequency into a channel. If you make an entry error, press **◉** / **CLR** before the **E** key to erase the entry, and start over. Also, use **◉** / **CLR** to clear the error message display.
10. Press **E** to store a displayed frequency and Alpha characters into any displayed channel.
11. Press **L/O** to “Lock Out” or prevent scanning of the displayed channel, including Priority Channels. (**L/O** appears on the display.) To unlock a channel, press **L/O** again. **L/O** can be used in Scan or SEARCH Modes.
12. There are 10 Preprogrammed NOAA weather channels. Press **WX** / **ATT** to find the active NOAA weather channel in your area. **WX** appears on the display in Weather Mode. If you want to set or reset the Attenuator function, press and hold **WX** / **ATT**.
13. Press **DLY** to turn ON or OFF the automatic 2-second delay during scanning or searching for active frequencies. (When delay is activated, **DELAY** appears on the display.) In this mode, when the scanner monitors an active frequency, searching or scanning will not resume until transmission stops for 2 seconds.
14. While Scanning, press **PRI** / **TURBO** to activate the PRIORITY SCAN function. (**PRIORITY** appears on the display.) While Searching, press **PRI** / **TURBO** to toggle between 100 steps and 300 steps per second. (When in TURBO SEARCH is activated. **SEARCH** flashes on the display.)
15. Press and hold **⏏** until **⏏** appears on the display. This disables the keypad and VFO control and prevents any accidental key entries. To enable the keypad, press and hold **⏏** until **⏏** disappears from the display.
16. Press **☀** to turn the LCD Back light on and off. Press and hold **☀** for 2 seconds to make the scanner turn the LCD Back Light on when a transmission is found (Auto Light function).

Setup

The **SportCat** comes with a rechargeable Nickel-Cadmium Battery Pack. When fully charged, this Battery Pack will supply up to 12 hours of dependable use. (With the Squelch control in “closed” position.)

Before using the **SportCat** for the first time, or whenever the **LOW BATTERY** Indicator appears on the LCD display, you should fully charge the Battery Pack.

Note: *When the Battery Pack is low, the Low Battery Indicator will start to blink. After about 10 minutes, the scanner will shut itself off to prevent the battery from becoming completely discharged.*

Before charging, you must first install the Battery Pack according to the steps below.

Charging the Battery Pack

1. Plug the AC Adapter/Charger (AD-70U) into the Charging Jack located on the left side of the **SportCat**. You can use the scanner while it is charging.)

WARNING! Use only the supplied AC Adapter/ Charger. Any other AC adapter or external power plug having over-voltage or reversed polarity can cause overheating or damage to the circuitry.

2. Plug the AC Adapter/Charger into a standard AC outlet.

To fully charge the battery, leave the Adapter/Charger connected for 14 to 16 hours.

3. When charging is complete, disconnect the Adapter/Charger from the AC outlet and from the Battery Pack.


Note: *Disconnect the AC Adapter/Charger from the unit during a power failure.*

Mounting the Flexible Antenna

Place the end of the antenna onto the BNC connector on top of the scanner and turn clockwise until tight.

Installing the Belt Clip

1. Place the Belt Clip on the mounting area on the back of the scanner, making sure the holes in the clip line up with the threads in the back of the scanner.

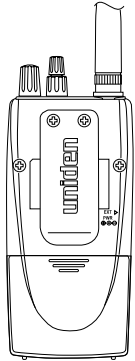

2. Insert the 2 screws into the corresponding holes and tighten.

CAUTION: Do not tighten the screws too tight. You could damage the case or clip.

Using the Earphone

The PHONE jack at the top of the **SportCat** is a standard 3.5mm stereo phone jack. You can use either the supplied earphone, or a stereo headset of the proper impedance (32 Ω). The output of this jack is monaural audio, but you will hear it in both headphones of a stereo headset.

IMPORTANT!

Be sure to use only the supplied earphone, or stereo headset of the proper impedance (32 Ω). Use of an incorrect earphone or stereo headset may be potentially hazardous to your hearing.

WARNING: To avoid discomfort or possible hearing damage, be sure to set the Volume Control before plugging in the earphone or proper headphones. A sudden opening of the Squelch may cause unexpected loud audio.

Operation Overview

Note: Before operating the **SportCat** for the first time, make sure you have fully charged the Battery Pack.

1. Before turning on the scanner, rotate the Squelch Control fully clockwise.
2. Turn the scanner on by rotating the On-Off/Volume Control clockwise until you hear a click. Turn the Volume Control a small amount clockwise to a low listening level.
3. You should hear either a “rushing” noise or some communications. If you are monitoring a transmission, wait until it stops before adjusting the Squelch Control.
4. Readjust the volume to a comfortable listening level.
5. Turn the Squelch Control counterclockwise *just* until the rushing noise disappears. At the squelch threshold, any incoming signal just slightly stronger than the noise will open the squelch. Any communication that is received will open the Squelch, and stop scanning or Searching.

Note: If squelch is set too tight, that is, too far **counterclockwise** from the threshold point, a much stronger signal is required to open the squelch. If squelch is set on a point **clockwise** from the threshold, you will hear a constant sound (noise, if no signal is present.) The scanner will not scan.


The **SportCat** has 100 memory channels, each of which can be programmed to store one frequency. The channels are divided into ten 10-channel banks, useful for storing similar frequencies in order to maintain faster scanning cycles.

You can monitor communication in one of three ways:

- **BANK SCAN** If you have programmed channels, you can scan all programmed channels in the selected bank(s), except locked out channels. When the scanner stops on an active frequency, it remains on that channel as long as the transmission continues. When the transmission stops, the SportCat resumes scanning. If the Delay Function is on, the scanner remains on the same channel for 2 more seconds, waiting for a responding transmission. If there is no responding transmission within 2 seconds, the scanning cycle resumes.


Any channels that are not programmed (000.0000) are skipped during scan.

When the **SportCat** is in SCAN Mode, the display will look something like this:

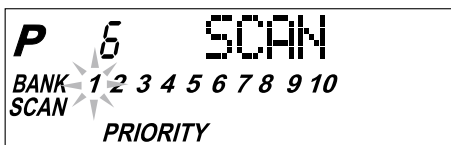




- **SEARCH** The Search function is *different* from Scan. When you select a frequency band to search, the scanner searches for any active frequency within the lower and upper limits of the band. Also, when you program frequency range, you can search within the frequency range. When an active frequency is found, the scanner stops on that frequency as long as the transmission lasts. If the Delay Function is on, the scanner remains on the same channel for 2 more seconds, waiting for a responding transmission. If there is no responding transmission within 2 seconds, the search cycle resumes.

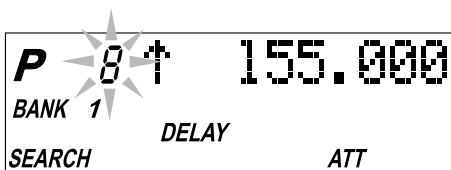When the **SportCat** is on SEARCH Mode, the display will look something like this:



Programming Channels

Before you can scan, you must program the channels within a bank. You can store one frequency per channel, up to 100 channels.

Note: If  appears on the display (keypad Locked), unlock the keypad by pressing and holding  until  disappears.


There are two ways to program a channel:


- Manually select a channel and frequency, using the numeric keypad. You can determine the frequencies you want from the Betty Bearcat (or similar) Frequency Book (optional), or from the Sports Activity Frequency Book (included).
- Search a band to find an active frequency, and then directly store it into a channel

A. Programming By Manual Entry

1. Select a frequency from the appropriate Frequency Directory.

Example: Program 125.2500 MHz into Channel 18.


2. Make sure the scanner is in the SCAN Mode. If it is in the SEARCH Mode, press .


3. Press  to stop scanning.


4. Press    to go to Channel 18.

5. Enter the frequency number using the numeric keypad. (Be sure to include the decimal point.)

     .

If you make a mistake and want to clear the entry, press  twice and re-enter the frequency.

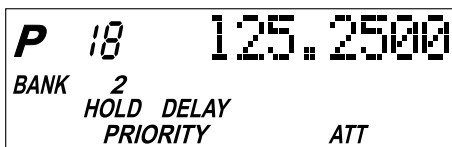


6. Press  to store the entry. The frequency on the display will blink twice to confirm the programming.

- If that frequency is already stored in another channel, you will hear a “beep”, and the other channel number will appear on the display. If you want to store the frequency in the selected channel (18) as well, press **(E)** again. The frequency will blink twice to confirm the programming. Or, you can press **(•)** and enter another frequency for the currently selected channel.

Note: Any frequency already stored in any channel will automatically be replaced by the new one.

- If you try to enter a frequency that is outside one of the 12 Bands, you will hear a “beep”, and the word “Error” appears on the display.

Press **(•)** and re-enter the correct frequency.

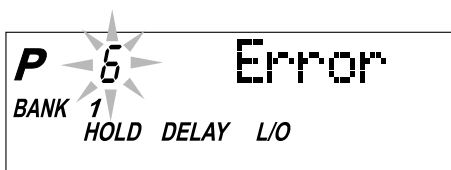

- To program another channel, repeat the above procedures.

Deleting a Stored Frequency

To delete a frequency from a channel:

- Display the channel and frequency that is to be deleted.
- Press **(0)** on the numeric keypad.
- Press **(E)**. The current channel is erased, and the display shows **000.0000**.


Note: That channel will be skipped during scanning.

B. Programming SEARCH

The Search feature enables you to rapidly search for active frequencies within the specified band limits. When an interesting frequency is found, you can store it into a channel using the procedure below. For more information about SEARCH Mode, see the section titled “Searching”.

- Press and hold **(SEARCH)**/**BAND** to enter the BAND SEARCH Mode.

- Press and hold the **SEARCH** / **BAND** key to display the preprogrammed Search Bands. Use the **HOLD** and **LIMIT** keys or VFO control until you see the Band you want.

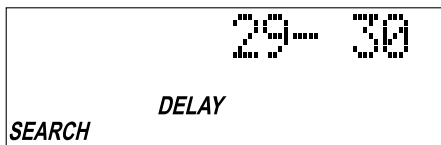


- Wait for at least 2 seconds or press **SEARCH** / **BAND** for Search to begin. If you wish to change the search direction, press and hold **HOLD** or **LIMIT** to search in an up or down direction.
- When Search stops on a desired frequency, press **HOLD** to stay on that frequency. The next available empty channel to store the frequency will be blinking on the display.
- To store the displayed frequency into that channel, press **E**. The frequency will blink twice to confirm the programming.
- To store the displayed frequency into another channel:
 - Select the channel number with the numeric keys, and press **HOLD**. The selected channel will appear on the display. The frequency currently stored in the channel will appear for 2 seconds and then will be replaced by the frequency located from the search.
 - Press **E**. The frequency will blink twice to confirm the programming.

Programming Channels with Alpha Characters

Use this feature to name channels (up to 100 channels) for easy reference.

- Select the channel.
- Press **DISPLAY** / **ALERT** to go to the Alpha Name display, "α" appears on the display.
- Press **E**. The Edit cursor flashes.

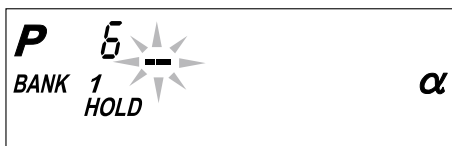

Note: If the frequency of the channel has not been programmed, you cannot program the Alpha Name on the channel.

- To select the edit position, press **HOLD** to move the Edit cursor to the right or **LIMIT** to move it to the left.
- Select the character using VFO Control. Turn clockwise to move 0 - 9, A - z and other characters and stop the control at the letter you wish to store.
- Repeat the steps 4 and 5 for all the characters you want to program.




- When you complete the input, press **E**. The words you have programmed flash twice.



Alert Beep Setting

When a transmission occurs on a channel on which you have set the Alert Beep function, 2 beeps will let you know that your “favorite” channel has been received.


You can set this function for each channel. Select a channel, then press and hold **DISPLAY** / **ALERT** to set this function on a channel in Manual mode.

 appears on the display. (Except Alpha Name display)

You cannot set this function for the channels which have not programmed before.

Scanning

Bank Scanning





1. If **SCAN** is not indicated on the display, press  .
The **SportCat** should begin scanning.



The indicators for the selected Banks (1 through 10) appear on the display. The indicator of the Bank currently being monitored flashes. While the **SportCat** is scanning, the word **SCAN** moves across the display.

Scanning stops on any active channel that is not “Locked Out”, and displays the Channel Number and frequency or Alpha Name. Scanning resumes automatically after the transmission stops.

2. You can deselect any bank(s) from being scanned by entering the number of the bank. The deselected bank indicator(s) disappear from the display, and those channels will not be scanned. This procedure helps to speed up the scanning cycle.

Note: *One Bank must always be active. You cannot deactivate all 10 banks at the same time. If you try to deactivate all 10 Banks, Bank 1 will automatically be active.*

3. To restore any bank for scanning, just enter its number again. The bank indicator will reappear on the display.
4. To stop scanning any time, press  . (**HOLD** appears on the display.) The scanner remains on the displayed channel, and only the bank indicator for that channel appears. Press  , to resume scanning.
5. When you are stopped at a channel, you can press  to step down a channel, or  to step up a channel. Press and *hold* either key to rapidly step through the channels.

Note: *You do not skip a locked out (“L/O”) channel when you use  or .*

To access a specific channel:

1. Press **MANUAL**.
2. Enter the channel number using the numeric keys.
3. Press **MANUAL** again.

Priority Scan

The **SportCat** has 10 Priority Channels, 1 per Bank. Initially these are the first channel in each Bank. (e.g. Channel 1, Channel 11, Channel 21, and so on.) In priority scan mode, the scanner checks the Priority Channel(s) every 2 seconds during the Scan cycle. If a transmission is received, the scanner will stop at that channel. If the Priority Channel in any Bank is "Locked Out", it will be skipped during scanning.

You can move the Priority to any other channel in a Bank as follows:

1. Go directly to that channel using any of the methods described above.
2. Press and hold **PRI** for at least 2 seconds. You will hear "two beeps," and **P** will appear on the display to the left of the new channel number. That channel will now be the Priority Channel for that Bank. (The **P** will no longer appear for the previous Priority Channel.)

To activate Priority Scan, press **PRI**. The **PRIORITY** indicator will appear at the bottom of the display. To deactivate Priority Scan, press **PRI** again. The **PRIORITY** indicator will disappear from the bottom of the display.

Delay

Normally the scanner will resume scanning when a transmission stops. If you want to remain on a channel until a responding transmission is received, activate the DELAY feature. This feature can be active in SCAN, MANUAL, SEARCH, and WEATHER Modes.

1. Press **DLY**. The **DELAY** indicator appears on the display. The scanner will now pause 2 seconds after transmission stops before resuming scanning.
2. Press **DLY** again to deactivate Delay. The **DELAY** indicator disappears from the display.

Locking Out Channels

You may have programmed certain channels that you do not want to hear every time you scan. These might be channels that are busy a major portion of the time, causing the scanner to stop at the channel(s) often enough to interrupt the scan cycle. You can Lock Out those channels so they are not scanned.


1. Go directly to the channel using any of the methods described above.
2. Press **L/O**. **L/O** appears on the display.

That channel is now “Locked Out” of the scanning cycle.

To include the channel back in the scanning cycle:

1. Go directly to the desired channel.
2. Press **L/O**. The **L/O** indicator now disappears from the display, and the channel is no longer “Locked Out”.

You can lock out any or all of the Priority Channels in the same way as other channels. If you lock out all Priority Channels you will see this message:

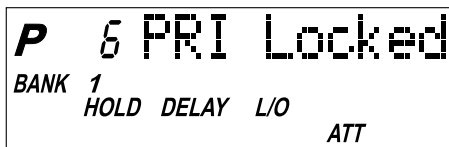

```
P 6 PRI Locked
BANK 1
HOLD DELAY L/O
ATT
```

You can also remove **L/O** from all “Locked Out” channels in the selected Scan Banks (those appearing on the display.) Press and hold **L/O** for at least 2 seconds. You will hear 2 beeps and all channels except empty channels (000.0000MHz) are returned to the scanning cycle in the selected Scan Banks.

Note: Any “Locked Out” channels in Banks that are *deselected* are still “Locked Out”.

Looking for “Locked Out” Channels

During scanning, you will not see “Locked Out” channels. To look for “Locked Out” channels, first press **MANUAL** to stop scanning. Then use **HOLD** or **LIMIT** to step through the Bank. You will see **L/O** on the display to indicate a “Locked Out” channel.

Weather Channel Scanning

The **SportCat** is designed to search for your local NOAA weather channel(s) from 10 preprogrammed NOAA channels.

1. Press **(WX)/ATT** to begin Weather scan. **WX** appears at the lower side of the display and the word **SCAN** moves across the display.
2. When the Weather scan finds an active channel in your area, the scanner stops at that frequency.
3. To stay at that frequency, press **(HOLD)** or **(LIMIT)**. To resume Weather scan, press **(WX)/ATT**.

It is possible for you to hear more than one Weather broadcast in your area. If the broadcast sounds weak and distant, press **(WX)/ATT** again to look for a closer station. Or, press **(HOLD)** or **(LIMIT)** to move to another station.

4. To exit Weather Mode, press **(SCAN)**, **(MANUAL)** or **(SEARCH)/BAND**.

Note: All weather channels transmit continuous broadcasts. Once the Weather scan stops on a transmission, it will remain on that channel. Weather scan will not resume automatically. You must press **(WX)/ATT** again to reactivate scanning.

In some parts of the country, you may not be able to monitor weather broadcasts, such as in low-lying areas. Normally a higher location will improve the reception.

Searching

Band Search

The **SportCat** has 12 Preprogrammed Search Bands. You can search any of these Bands to find desired frequencies if you do not have a Frequency Directory handy, or if new stations have been added since the Directory was published.

1. Press and hold **SEARCH**/**BAND** to enter the Band Search Mode. Then the upper and lower limits of the band currently selected are displayed.
2. Use VFO control, **HOLD** or **LIMIT** to select the band you wish to search.
3. Wait for about 2 seconds and the **SportCat** will begin searching that Band. Or, press **SEARCH**/**BAND** again to begin.
4. During a Search, press **PRI**/**TURBO** to activate TURBO SEARCH. This increases the Search Speed to 300 steps per second in those bands that have 5 kHz steps. (See the table on page for the Band Chart.) When you activate TURBO SEARCH, the SEARCH indicator flashes. Press **PRI**/**TURBO** again to deactivate TURBO SEARCH.
5. Press **HOLD** at any time to stop the search on a frequency. Press **SEARCH**/**BAND** to resume searching.
6. When Search is stopped, you can press **HOLD** or **LIMIT** to move up or down 1 frequency step. (See the table on page for the step size for each Band.)

Limit Search


In Limit Search mode, you can search within the frequency range you have set.

To use this function, you must set the lower/higher frequency of your search range first.


Setting the Frequencies



1. Press **MANUAL**.
2. Enter the lower limit of your search range.
3. Press **LIMIT**.

4. Enter the higher limit of your search range.

5. Press .

Using the Limit Search

1. Press /**BAND** to enter Limit Search mode.


2. Press  or  to stop searching. ("HOLD" appears on the display.)

VFO search


You can search by using VFO control.

1. In Manual mode, enter the frequency by using the number keypad and turn VFO control.


-- OR --

In Band Search or Limit Search, press  then enter the frequency by using the number keypad, and turn the VFO control.


"V" appears on the display.

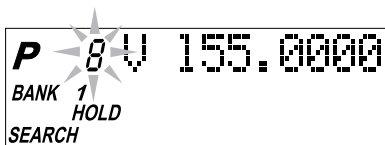

2. Turn the VFO control clockwise to move up the frequency step, and turn the VFO control counter-clockwise to move down the frequency step.

3. When you wish to store frequency or change the channel, you need not press  first.

 Search Skip Frequency.


The scanner may stop at certain frequencies during Search that you do not want to hear. You can program up to 50 Skip Frequencies into the **SportCat**. When the scanner stops at one of these frequencies during Search, press . That frequency is now "memorized" and will be skipped during any Search. The scanner will then search to find other active frequencies. If you enter the 51st frequency, the 1st one is overwritten.

Care and Maintenance


Replacing the Battery Pack

1. Turn the On-Off/Volume Control OFF.

2. Turn the scanner over so you are looking at the back. If the Belt clip is attached, remove it by taking out the two screws.

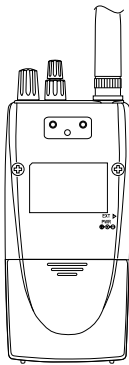


3. Press in on the ribbed area and slide the Battery Cover down and off.

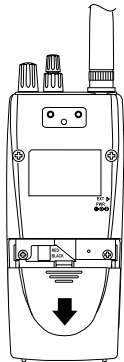


4. Carefully unplug the Battery pack and lift it out of the case. You may need to exert slight pressure toward the top of the scanner as you slide the Battery Pack out of the case.

5. Carefully plug in the new Battery Pack, observing the proper polarity. (The **RED** wire should be on the upper side as you plug it in.) Although the plug is keyed to reduce the chance of inserting it in wrong, make sure the wires are in the correct position before pushing it in all the way. **DO NOT FORCE THE PLUG.**

6. Insert the Battery Pack by placing the bottom in the case first. Make sure it is seated within the case before replacing the Battery Cover.

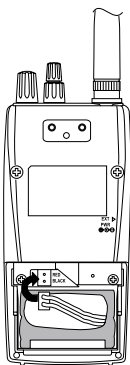

7. Replace the Battery Cover by putting the two tabs in the corresponding opening and sliding it upward until it locks in place.

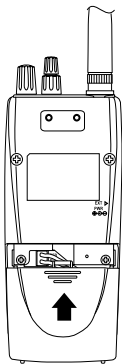

Location

- If strong interference or electrical noise is received, relocate the scanner or its antenna away from the source of the noise. A higher elevation, if possible, may provide better reception.
- **Do not** use the scanner in high-moisture environments such as the kitchen or bathroom.
- Avoid placing the unit in direct sunlight or near heating elements or vents.
- **Do not** plug the scanner into an outlet controlled by a wall switch as prolonged periods without power will cause scanner memory loss.

Cleaning

- Disconnect the power to the unit before cleaning.
- Clean the outside of the scanner with a mild detergent.
- To prevent scratches, **do not** use abrasive cleaners or solvents. Be careful not to rub the LCD window.
- **Do not** use excessive amounts of water.

Repairs

Do not attempt any repair. The scanner contains no serviceable parts. Contact the Uniden Customer Service Center or take it to a qualified repair technician.

Birdies

All scanners are subject to receiving undesired signals or birdies. If your scanner stops during SEARCH Mode and no sound is heard, it may be receiving a birdie. Birdies are internally generated signals inherent in the electronics of the scanner. Use the Search Skip feature to skip the unwanted frequencies.

Proper Care of Your Scanner

Use only the AC Adapter/Charger that came with your scanner.

Do not leave the AC Adapter/Charger plugged in for long periods.

Avoid placing the scanner in direct sunlight or near heating elements or vents.

Also, do not subject the scanner to continuous sub-zero temperatures. If the scanner is exposed to temperatures below -5°F or above 140°F, the liquid crystal display may temporarily cease to function properly, or can become permanently damaged.

Optional Accessories and Replacement Parts

The following optional accessories and replacement parts for your **SportCat** are available from your local Uniden Dealer or through the Uniden Customer Service Center by calling: 1-800-297-1023, 7:00 AM to 7:00 PM Central Time, Monday through Friday.

| ITEM | PART NO. |
|---|----------|
| Spare Battery Pack | BP-180 |
| Replacement Rubber Antenna | AT-218 |
| Earphone | EP-009 |
| AC Adapter/Charger | AD-70U |
| Straight Cigarette Lighter Power Cord (fused) | UA-502 |
| Coiled Cigarette Lighter Power Cord (fused) | UA-502A |
| Belt Clip with 2 screws | BCK-150 |
| SportCat Sports Frequency Guide | FB-150 |
| SportCat Operating Guide | OMSC180 |

Troubleshooting

If your **SportCat** is not performing properly, try the steps listed below.

| PROBLEM | SOLUTION |
|---------------------|---|
| Scanner won't work. | Check the power connections. Check the volume and squelch. Make sure the power switch is turned on. |
| Improper reception. | Check the antenna connection. You may be in a fringe area. Reposition the scanner. |
| Scan won't stop. | Adjust the Squelch Control. Check the antenna connection. It is possible that none of the programmed frequencies are active at the time. Try Band Search. |
| Scan won't start. | Make sure there are some programmed channels. Adjust the Squelch Control. |
| Search won't start. | Adjust the Squelch Control. |
| Keypad won't work. | Check the Keypad Lock. |

If you still cannot get satisfactory results and want additional information, or to return the unit for service, please call or write the Uniden Parts and Service Division. The address and phone number are listed in the Warranty (at the end of this manual).

Technical Specifications

Receiver Type: Triple Conversion Superheterodyne

Channels: 100

Banks: Total 10 Banks
10 Channels each

WX: 10 Programmed Channels (All NOAA Weather Service and three Canadian weather service)

Search Bands: 12 Preprogrammed Search bands (NFM or AM)

| No. | RANGE (MHz) | BAND | STEP (kHz) |
|-----|-------------------|------|------------|
| 1 | 29.0000-29.9950 | NFM | 5 |
| 2 | 30.0000-49.9950 | NFM | 5 |
| 3 | 50.0000-54.0000 | NFM | 5 |
| 4 | 108.0000-136.9875 | AM | 12.5 |
| 5 | 137.0000-143.9950 | NFM | 5 |
| 6 | 144.0000-147.9950 | NFM | 5 |
| 7 | 148.0000-174.0000 | NFM | 5 |
| 8 | 406.0000-419.9875 | NFM | 5 |
| 9 | 420.0000-449.9875 | NFM | 12.5 |
| 10 | 450.0000-469.9875 | NFM | 12.5 |
| 11 | 470.0000-512.0000 | NFM | 12.5 |
| 12 | 806.0000-823.9875 | NFM | 12.5 |
| | 849.0125-868.9875 | NFM | 12.5 |
| | 894.0125-956.0000 | NFM | 12.5 |

Scan Rate: 100 channels per sec.

Search Rate: 100 steps per sec.(Normal Search Mode)
300 steps per sec.(Turbo Search Mode)

Scan Delay: 2 seconds

Audio Output: 180 mW nominal into 8 internal speaker
38 mW nominal into 32 stereo
headphones
9 mW nominal into 64 supplied earphone

Antenna: Rubber antenna included

Operating Temperature: - 20°C (- 4°F) to + 60°C (+ 140°F)

Size: 2-1/2" (W) x 1-3/4" (D) x 11-3/4" (H)
(with antenna attached)
65 mm (W) x 39.5 mm (D) x 296.5 mm (H)
(w/antenna w/o belt clip)

Weight: 0.71 lb. (320 g)

Power Requirements: 4.8V DC (internal battery or
AC Adapter/Charger)

*Certified in accordance with FCC Rules and Regulations
Part 15 Subpart C as of date of manufacture.*

*Features, specifications, and availability of optional
accessories are all subject to change without notice.*

One Year Limited Warranty

WARRANTOR: UNIDEN AMERICA CORPORATION (“Uniden”)

ELEMENTS OF WARRANTY: Uniden warrants, for one year, to the original retail owner, this Uniden Product to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

WARRANTY DURATION: This warranty to the original user shall terminate and be of no further effect 12 months after the date of original retail sale. The warranty is invalid if the Product is (A) damaged or not maintained as reasonable or necessary, (B) modified, altered, or used as part of any conversion kits, sub-assemblies, or any configurations not sold by Uniden, (C) improperly installed, (D) serviced or repaired by someone other than an authorized Uniden service center for a defect or malfunction covered by this warranty, (E) used in any conjunction with equipment or parts or as part of any system not manufactured by Uniden, or (F) installed or programmed by anyone other than as detailed by the Operating Guide for this product.

STATEMENT OF REMEDY: In the event that the product does not conform to this warranty at any time while this warranty is in effect, warrantor will repair the defect and return it to you without charge for parts, service, or any other cost (except shipping and handling) incurred by warrantor or its representatives in connection with the performance of this warranty. THE LIMITED WARRANTY SET FORTH ABOVE IS THE SOLE AND ENTIRE WARRANTY PERTAINING TO THE PRODUCT AND IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES OF ANY NATURE WHATSOEVER, WHETHER EXPRESS, IMPLIED OR ARISING BY OPERATION OF LAW, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow this exclusion or limitation of incidental or consequential damages so the above limitation or exclusion may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This warranty is void outside the United States of America.

PROCEDURE FOR OBTAINING PERFORMANCE OF WARRANTY: If, after following the instructions in this Operating Guide you are certain that the Product is defective, pack the Product carefully (preferably in its original packaging). Include evidence of original purchase and a note describing the defect that has caused you to return it, The Product should be shipped freight prepaid by traceable means, or delivered, to warrantor at:

**Uniden America Corporation
Parts and Service Division
4700 Amon Carter Blvd.
Ft. Worth, TX 76155
1-800-297-1023; Mon-Fri; 8am-5pm Central**

COVERED UNDER ONE OR MORE OF THE
FOLLOWING U.S. PATENTS:

| | | | | |
|-----------|-----------|-----------|-----------|-----------|
| 4,219,821 | 4,270,217 | 4,398,304 | 4,409,688 | 4,455,679 |
| 4,461,036 | 4,521,915 | 4,597,104 | 4,627,100 | 4,841,302 |
| 4,888,815 | 4,932,074 | 4,947,456 | 5,014,348 | 5,199,109 |
| 5,408,692 | 5,428,826 | 5,438,688 | 5,448,258 | 5,465,402 |
| 5,471,660 | 5,483,684 | 5,548,832 | 5,551,071 | 5,642,424 |
| 5,710,992 | 5,600,233 | 5,530,296 | 5,574,995 | 5,577,076 |
| 5,598,430 | 5,600,223 | | | |

Uniden[®]

Bearcat[®]