

Please download DJ-V17 manual for better quality. Operations of V17/V27/V47 are all common.

ALINCO

VHF/UHF FM TRANSCEIVER

DJ-V17 T/E/R/TFH DJ-V27 T DJ-V47 T/E/T1/T2

Instruction Manual



Thank you for purchasing your new Alinco transceiver. This instruction manual contains important safety and operating instructions. Please read this manual carefully before using the product and keep it for future reference.

ALINCO, INC.

NOTICE / Compliance Information Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



**Tested to Comply
With FCC Standards
FOR HOME OR OFFICE USE**

Information in this document is subject to change without notice or obligation. All brand names and trademarks are the property of their respective owners. Alinco cannot be liable for pictorial or typographical inaccuracies. Some parts, options and/or accessories are unavailable in certain areas. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

VHF/UHF FM Transceiver DJ-V17T/DJ-V27T/DJ-V47T

These devices comply with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Manufacturer:

ALINCO, INC.
Shin-Dai building 9th Floor 2-6, 1-Chome
Dojimahama, Kita-ku, Osaka 530-0004 JAPAN



Conformity Information

Alinco, Inc. Electronics Division hereby declare on our sole responsibility that the product(s) listed below comply the essential requirements of the Directive 1999/5/EC, The council of 3/9/99 on Radio Equipment and Telecommunication Terminal Equipment and the mutual recognition of their conformity and with the provisions of Annex, after having performed the required measurements at Notified Bodies per Standards, and relative certificate(s) or document(s) can be reviewed at <http://www.alinco.com/Ce/>

DJ-V17E: VHF FM Transceiver 144.000~145.995MHz

DJ-V47E: UHF FM Transceiver 430.000~439.995MHz









This device is authorized for use in all EU and EFTA member states. An operator's license is required for this device.

Copyright © All rights reserved. No part of this document may be reproduced, copied, translated or transcribed in any form or by any means without the prior written permission of Alinco, Inc., Osaka, Japan, English Edition Printed in Japan.








Warning





To prevent any hazard during operation of Alinco's radio product, in this manual and on the product you may find symbols shown below. Please read and understand the meanings of these symbols before starting to use the product.

 Danger	This symbol is intended to alert the user to an immediate danger that may cause loss of life and property if the user disregards the warning.
 Alert	This symbol is intended to alert the user to a possible hazard that may cause loss of life and property if the user disregards the warning.
 Caution	This symbol is intended to alert the user to a possible hazard that may cause loss of property or injure the user if the warning is disregarded.
	Alert symbol. An explanation is given.
	Warning symbol. An explanation is given.
	Instruction symbol. An explanation is given.





Alert

■ Environment and condition of use






-  It is recommended that you check local traffic regulations regarding the use of radio equipment while driving. Some countries prohibit or apply restrictions for the operation of radios and mobile- phones while driving.
-  Do not use this product in close proximity to other electronic devices, especially medical ones. It may cause interference to those devices.
-  Keep the radio out of the reach of children.
-  In case a liquid leaks from the product, do not touch it. It may damage your skin. Rinse with plenty of cold water if the liquid contacted your skin.
-  Never operate this product in facilities where radio products are prohibited for use such as aboard aircraft, in airports, in ports, within or near the operating area of business wireless stations or their relay stations.
-  Use of this product may be prohibited or illegal outside of your country. Be informed in advance when you travel.
-  The manufacturer declines any responsibilities against loss of life and/or property due to a failure of this product when used to perform important tasks like life-guarding, surveillance, and rescue.

-  Do not use multiple radios in very close proximity. It may cause interference and/or damage to the product(s).
-  Risk of explosion if battery is replaced with an incorrect type. Dispose of, or recycle used batteries according to your local regulations.
-  The manufacturer declines any responsibilities against loss of life and property due to a failure of this product when used with or as a part of a device made by third parties.
-  Use of third party accessory may result in damage to this product. It will void our warranty for repair.




■ Handling this product





-  Be sure to reduce the audio output level to minimum before using an earphone or a headset. Excessive audio may damage hearing.
-  Do not open the unit without permission or instruction from the manufacturer. Unauthorized modification or repair may result in electric shock, fire and/or malfunction.
-  Do not operate this product in a wet place such as shower room. It may result in electric shock, fire and/or malfunction.
-  Do not place the product in a container carrying conductive materials, such as water or metal in close proximity to the product. A short-circuit to the product may result in electric shock, fire and/or malfunction.

■ About chargers



-  Do not use adapters other than having the specified voltage. It may result in electric shock, fire and/or malfunction.
-  Do not plug multiple devices using an adapter into a single wall outlet. It may result in overheating and/or fire.
-  Do not handle adapter with a wet hand. It may result in electric shock.
-  Securely plug the adapter into the wall outlet. Insecure installation may result in short-circuit, electronic shock and/or fire.
-  Do not use the adapter if the plug or socket contacts are dirty. Overheating and/or short-circuiting may result in fire, electric shock and/or damage to the product.

■ About power supply

-  Use only appropriate, reliable power supply of correct voltage and capacity.
-  Do not connect cables in reverse polarity. It may result in electric shock, fire and/or malfunction.
-  Do not plug multiple devices including the power supply into a single wall outlet. It may result in overheating and/or fire.

-  Do not handle a power supply with a wet hand. It may result in electric shock.
-  Securely plug the power supply to the wall outlet. Insecure installation may result in short-circuiting, electronic shock and/or fire.
-  Do not plug the power supply into the wall socket if the contacts are dirty. Short-circuit and/or overheating may result in fire, electric shock and/or damage to the product.
-  Do not modify or remove fuse-assembly from the DC cable. It may result in fire, electric shock and/or damage to the product.


■ Cigar-lighter cable

-  Do not use the cable at any other than the specified voltage. It may result in electric shock, fire and/or malfunction.
-  Do not handle cigar cable with a wet hand. It may result in electric shock.


■ In case of emergency

In case of the following situation(s), please turn off the product, switch off the source of power, then remove or unplug the power-cord. Please contact your local dealer of this product for service and assistance. Do not use the product until the trouble is resolved. Do not try to troubleshoot the problem by yourself.

- When a strange sound, smoke and/or strange odor comes out of the product.
- When the product is dropped or the case is broken or cracked.
- When a liquid penetrated inside.
- When a power cord (including DC cables, AC cables and adapters) is damaged.






-  For your safety, turn off then remove all related AC lines to the product and its accessories from the wall outlet if a thunderstorm is likely.

■ Maintenance






-  Do not open the unit and its accessories. Please consult with your local dealer of this product for service and assistance.

Caution





■ Environment and condition of use

-  Do not use the product in proximity to a TV or a radio. It may cause interference or receive interference.
-  Do not install in a humid, dusty or insufficiently ventilated place. It may result in electric shock, fire and/or malfunction.
-  Do not install in an unstable or vibrating position. It may result in electric shock, fire and/or malfunction when/if the product falls to the ground.
-  Do not install the product in proximity to a source of heat and humidity such as a heater or a stove. Avoid placing the unit in direct sunlight.
-  Be cautious of a dew formation. Please completely dry the product before use when it happens.

■ About transceiver

-  Be cautious of the whip antenna when carried in your shirt-pocket etc. It may make contact with your eye and cause injury.
-  Do not connect devices other than specified ones to the jacks and ports on the product. It may result in damage to the devices.
-  Turn off and remove the power source (AC cable, DC cable, battery, cigar cable, charger adapter etc.) from the product when the product is not in use for extended period of time or in case of maintenance.
-  Never pull the cord alone when you unplug AC cable from the wall outlet.
-  Use a clean, dry cloth to wipe off dirt and condensation from the surface of the product. Never use thinner or benzene for cleaning.

■ About power supply

-  Use only reliable power supply of specific DC output range and be mindful of the polarity of the cable and DC-jack.
-  Always turn off the power supply when connecting or disconnecting the cables.
-  When using an external antenna, make sure that the antenna ground is not common with the ground of the power supply.
-  When a unit is powered from an external DC power source (adapter, power supply, cigar-plug etc.), make sure that this power supply has approval to the level of IEC/EN 60950-1.

■ Lightning

Any person is not safe outdoor during thunderstorm and lightning. This condition is getting worse if somebody keeps a hand-held radio; chances of being hit by lightning are doubled since lightning may hit a radio antenna as well. At this time, there is no hand-held radio having any kind of protection against lightning current (which is higher than 10 kA.). Note also that no car provides adequate protection of its passengers or drivers against lightning as well. Therefore, Alinco will not take responsibility for any danger associated with using its hand-held radios outdoor or inside the car during lightning.

■ Limited Power Source

Adhering to the requirement of the following warning ensures compliance of the transceiver with the safety standard for information technology equipment, EN 60950-1. Please note that the transceiver enclosure only provides mechanical protection of its internal parts; it will not contain a fire within the device if the fire starts under certain fault conditions. Alinco will not take responsibility for any fire hazard associated with powering the transceiver or charging its batteries using a power source which does not belong to the limited power sources in the meaning of EN 60950-1. Excluded from possible use with the transceiver are most car cigarette lighters and some DC (AC/DC) power supplies. Make sure that the power supply used with the transceiver is a limited power source.

■ Water-proof

The IEC 60529/IPX7 is an European system of test specification standards for classifying the degrees of protection provided by the enclosures of electrical equipment. An IPX7 designation means that the unit withstands immersion in one meter (approx 3ft) of still water for up to 30 minutes.

The factory guarantees this grade for 1 year provided all the jack covers are properly and securely closed. However, please understand that this unit is NOT an IPX7 COMPLIANT, but compatible; we have tested and approved at our engineering stage that this product meets the requirement of IPX7 but we do not test it unit-by-unit at the factory before delivery. Please understand that water-pressure such as washing the unit with running water may cause damage to the unit and voids warranty. Never immerse the unit uselessly under the water (V/UHF signal does not propagate in water at all). If the unit is dropped in water, please pick it up immediately and wipe with a clean dry cloth. Use only specified water-proof accessories when the unit is intended for use in rainy/wet conditions.

Introduction

Thank you very much for purchasing this excellent Alinco transceiver. Our products are ranked among the finest in the world. This radio has been manufactured with state of the art technology and it has been tested carefully at our factory. It is designed to operate to your satisfaction for many years under normal use.

PLEASE READ THIS MANUAL COMPLETELY TO LEARN ALL THE FUNCTIONS THE PRODUCT OFFERS. WE MADE EVERY ATTEMPT TO WRITE THIS MANUAL TO BE AS COMPREHENSIVE AND EASY TO UNDERSTAND AS POSSIBLE. IT IS IMPORTANT TO NOTE THAT SOME OF THE OPERATIONS MAY BE EXPLAINED IN RELATION TO INFORMATION IN PREVIOUS CHAPTERS. BY READING JUST ONE PART OF THE MANUAL, YOU RISK NOT UNDERSTANDING THE COMPLETE EXPLANATION OF THE FUNCTION.

Contents

NOTICE / Compliance Information Statement	2
Warning	4
Introduction	9
Contents	10
1.Features	13
1.1 Accessories.....	13
2.Accessories	14
2.1 Installations.....	14
2.1.1 Antenna.....	14
2.1.2 Hand Strap.....	14
2.1.3 Belt Clip.....	14
2.1.4 Battery Pack.....	15
2.1.5 Prevent Short Circuiting the Battery Pack.....	17
2.1.6 Dry Cell Case (optional).....	18
2.1.7 Battery-Level Icon.....	19
3.Names and Operations of Parts	20
3.1 Names and Operations of Keys and Ports.....	20
3.2 Keypad.....	22
3.3 Display (LCD).....	23
4.Basic Operation	24
4.1 Turning On the Power.....	24
4.2 Adjusting the Audio Output (Volume).....	25
4.3 Adjusting the Squelch.....	25
4.4 Setting the Frequency in the VFO Mode.....	25
4.4.1 Setting the Frequency.....	25
4.4.2 Setting the Tuning Step.....	27
4.4.3 Shift Direction and Offset Frequency Settings.....	27
4.5 Memory Mode.....	28
4.5.1 How to Program Memory Channel(s).....	28
4.5.2 Recalling a Memory Channel.....	28
4.5.3 Deleting a Memory Channel.....	28
4.5.4 Programming a Repeater-Access Function Setting.....	29
4.5.5 Programmable Parameters in Memory Channels.....	29
4.6 Call-Channel Mode.....	30

4.7 Receiving.....	30
4.7.1 Monitor Function.....	30
4.8 Transmitting.....	31
4.8.1 Selecting the Output Level.....	31
5.Useful Functions	32
5.1 Scan Modes.....	32
5.1.1 VFO-Scan.....	32
5.1.2 Memory-Scan.....	32
5.1.3 Setting Skip Channels.....	33
5.2 Keylock.....	33
5.3 Tone-Burst.....	33
5.4 Naming Memory Channels.....	34
5.4.1 Setting Name-Tag.....	34
5.4.2 Using the Channel Name Function.....	34
5.5 Auto-Power-Off (APO).....	34
5.5.1 Setting APO.....	34
5.5.2 APO Operation.....	34
5.6 Time-Out-Timer (TOT).....	35
5.6.1 Setting TOT.....	35
5.6.2 TOT Operation.....	35
5.7 Lamp.....	35
6.Selective Calling	36
■ Selective Calling Operations.....	36
6.1 Tone Squelch (TSQ).....	36
6.1.1 Setting the Tone Squelch.....	36
6.1.2 Switching Off the Tone Squelch.....	37
6.1.3 To Differentiate the ENC/DEC Tones.....	37
6.1.4 Tone Squelch Operation.....	37
6.2 DCS.....	37
6.2.1 Setting the DCS.....	37
6.2.2 Changing the DCS Code.....	38
6.2.3 Switching Off DCS.....	38
6.2.4 DCS Operation.....	38
6.2.5 DET Mode in DCS Operation.....	38
6.3 DTMF Tone Encoding.....	39
6.4 Auto Dialer.....	40
6.4.1 Setting the Auto Dialer.....	40
6.4.2 Generating the Auto Dialer Codes.....	40
6.4.3 Redial.....	41

7.Special Functions.....	42
7.1 ATT (Attenuator).....	42
7.2 Battery Refresh	42
7.3 Repeater-Access.....	43
8.Set Mode.....	44
8.1 Set Mode Operation	44
8.2 Entering the Set Mode	44
8.3 Available Parameters	45
8.3.1 Menu 1 Battery Save (BS) Function	45
8.3.2 Menu 2 Timer/Busy Scan Setting	45
8.3.3 Menu 3 Beep Function	45
8.3.4 Menu 4 Tone-Burst Frequency Setting	45
8.3.5 Menu 5 Clock Shift Setting	46
8.3.6 Menu 6 Busy Channel Lockout Setting	46
8.3.7 Menu 7 TOT Penalty Time	47
8.3.8 Menu 8 DTMF WAIT Time.....	47
8.3.9 Menu 9 DTMF Burst/Pause Time	47
8.3.10 Menu 10 DTMF First Digit Burst Time.....	48
8.3.11 Menu 11 Battery Charge Function	48
8.3.12 Menu 12 Battery Type Setting	49
9.Cloning and Packet Operation	50
9.1 Cloning.....	50
9.1.1 Cable Connection	50
9.1.2 Master/Slave Units	50
9.1.3 Master Unit Operation	51
9.1.4 Slave Unit Operation	51
9.2 Packet Operation.....	52
9.2.1 Packet Operation Connections	52
10.Maintenance and Reference.....	53
10.1 Troubleshooting	53
10.2 Resetting	54
10.3 Options.....	56
10.3.1 Microphone/Speaker Cable (EDS-10).....	57
10.3.2 Battery Packs.....	57
10.3.3 Using the Chargers	58
11.Specifications	64

1. Features

This transceiver has the following main features.

- High-grade waterproof compatible to IPX7 * (submersible 1m/3feet for 30min.) and rugged body
- 39 CTCSS tone squelch
- 104 DCS digital code squelch
- Time-Out-Timer
- Alphanumeric display
- 4 tone-burst tones (1750, 2100, 1000, 1450Hz)
- 9 auto dial memories easily accessed from the DTMF keypad with redial function
- Direct frequency entry from the DTMF keypad
- A quick "Repeater-Access" function
- Refresh function for rechargeable battery reconditioning
- Cable Cloning

* Please read page 8 for more details.

1.1 Accessories

- Ni-MH battery pack EBP-65 (7.2V 700mAh)
- EDC-146 (AC 120V) wall charger (T version)
- EDC-147 (AC 230V) wall charger (E/TFH/R version)/EDC-148 (U.K. models)
- Flexible whip antenna EA0141 (DJ-V17T/E version)
- Flexible whip antenna EA0142 (DJ-V17TFH/R version)
- Flexible whip antenna EA0143 (DJ-V47T/E version)
- Flexible whip antenna EA0144 (DJ-V47T2 version)
- Flexible whip antenna EA0152 (DJ-V47T1 version)
- Flexible whip antenna EA0160 (DJ-V27T)
- Belt clip
- Hand strap
- Instruction manual

* Accessories may differ depending on the version you have purchased.

Please contact your local dealer for details of standard accessories and the warranty-policy before purchase.


2. Accessories

2.1 Installations

2.1.1 Antenna

■ Attaching the Antenna

1. Hold the antenna by its base.
2. Align the grooves at the base of the antenna with the protrusions on the antenna connector.
3. Slide the antenna down and turn it clockwise until it stops.
4. Confirm that the antenna is securely connected.

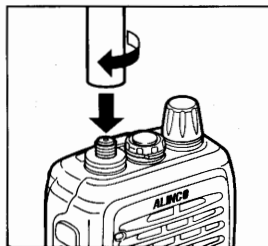

NOTE:


This antenna has been designed very flexible. It is softer than conventional ones but not a defect.

■ Removing the Antenna

Turn the antenna counter-clockwise to disconnect the antenna.

2.1.2 Hand Strap


Attach the hand strap as shown. There are two ways to attach it.

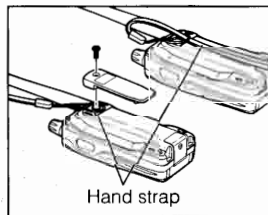

2.1.3 Belt Clip

■ Attaching the Belt Clip

1. Put the belt clip on the back of the unit, and turn the screw clockwise until it stops.
2. Confirm that the belt clip is securely attached.

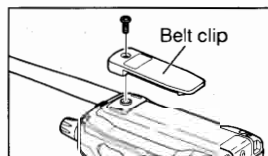

■ Removing the Belt Clip


Turn the screw counter-clockwise to remove the belt clip.

2.1.4 Battery Pack

For the specifications and the charging procedures, please refer to "Battery Packs"(page 57) and "Using the Chargers"(page 58).


■ Attaching the Battery Pack

Align the catches on the battery pack with the grooves on the unit, and close the latch until it clicks.

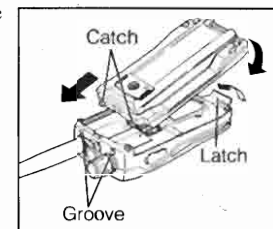

■ Removing the Battery Pack

Push the latch in the direction of the arrow, and pull out the battery pack.

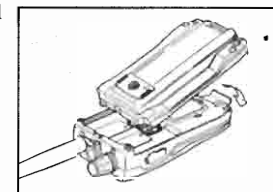

⚠ Caution

- The battery pack isn't fully charged when shipped. It must be charged before use.
- Charging should be conducted in a temperature range of 0°C to +40°C (+32°F to +104°F).
- Don't modify, dismantle, incinerate or immerse the battery pack in the water as this can be dangerous.
- Never short-circuit the battery pack terminals, as this can cause damage to the equipment or lead to heating of the battery which may cause burns.
- Unnecessary prolonged charging (overcharging) can deteriorate battery performance.
- The battery pack should be stored in a dry place where temperature is in -10°C to +45°C (-14°F to +113°F) range. Temperatures outside this range can cause the battery liquid to leak. Exposure to prolonged high humidity can cause corrosion of metal components.
- Battery-packs are a consuming part. When its operating time becomes considerably short after a normal charge, please consider that the pack is exhausted and replace it with a new one.
- The battery pack is recyclable. Check with your local waste officials for details on recycling options or proper disposal in your area.

⚠ Caution

- Li-ion battery packs can't be charged using DC-jack on the unit (Only Ni-MH battery packs can be charged).
- Risk of explosion, generation of heat or leak of chemicals inside if the battery is replaced by an incorrect type. Use always the recommended types of batteries in this manual only.

■ Charging the Battery Pack Using DC-Jack on the Unit

The unit can charge the EBP-65 and EBP-66 optional Ni-MH battery packs by supplying DC power through the DC-jack on the unit using EDC-146/147/148 wall chargers or an optional DC power supply (DC 12V~DC 16V, 1A or more: IEC/EN 60950-1 compliant) and a DC cable such as EDC-37.

1. Attach the battery pack by referring to "Battery Pack" (page 15).

2. Connect the AC adapter plug to the DC-jack on the unit then connect the charger's adapter to the wall outlet.

* AC adapter may look different.


3. Turn on the unit and set the battery charge parameters. Please refer to "Set Mode" (page 44) then:


* "Battery Charge Function" (page 48)

Select CHG-ON.

* "Battery Type Setting" (page 49)

Select BATT-NI.


4. After completing the settings, a flashing  appears on the display. Make sure the icon is flashing then turn off the unit. It takes about 10 hours/30hours for EBP-65/66 respectively to complete the charge.

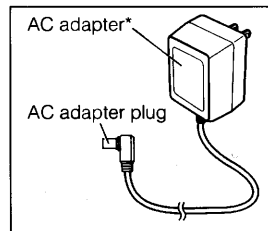

IMPORTANT NOTE:


While this function is activated, without attaching a battery pack or the remaining battery level is below the usable range, the unit turns on by just connecting the DC source such as an adapter or a DC cable (without operating the power key).

NOTE:

- Please read the general safety instructions included in the optional accessories to correctly and safely use them.
- EDC-146/147/148 can't be used as the adapter for operation. These adapters are for charging purposes only.
- Chargers can't perform the correct charge when the AC voltage is unstable.
-  flashes even EBP-65/66 aren't attached. To avoid short-circuit, never activate this function when the pack isn't attached to the unit.
- Li-ion battery packs can't be charged in this way.

2.1.5 Prevent Short Circuiting the Battery Pack


Be extra cautious when carrying the rechargeable battery pack; short circuiting will produce surge current possibly resulting in fire.

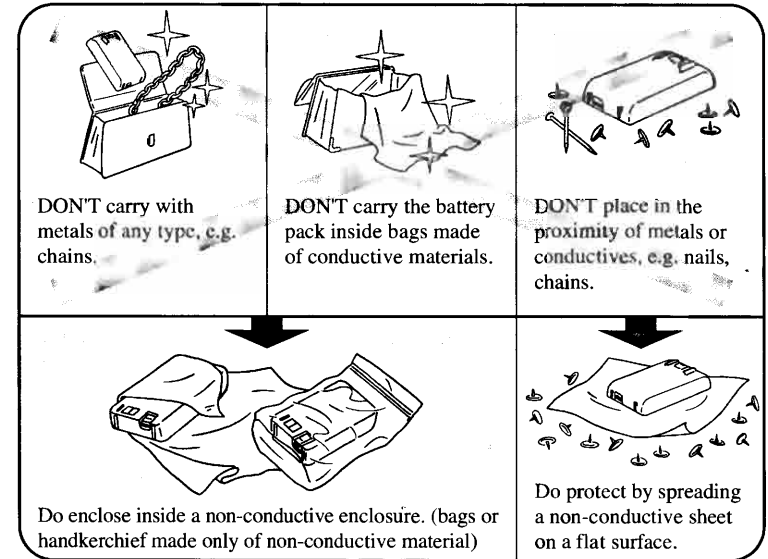

2.1.6 Dry Cell Case (optional)


An EDH-34 is available for operation with using AA cells.

Lift up the catches ① on the top of the case to remove the cover.

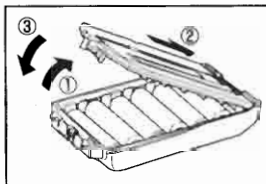

Place 6 AA cells, then close the cover in order of ② then ③. Be sure that the cover is securely closed.

Use high-performance AA cells such as Alkaline or Oxryde cells.

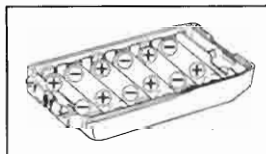

Caution About Handling Dry Cell Case:

- This dry cell case isn't water-proof.
- Be extra-cautious to the polarity of the cells (+)/(-). Misplacing cells may result in leak, fire or explosion.
- Use new batteries of the same type and brand when placing them.
- Use of rechargeable cells is prohibited and the manufacturer declines any responsibilities for damages/injuries that may cause to the users and their properties.
- It is recommended to clean the battery contacting terminals with a clean dry cloth from time to time.
- Risk of explosion if batteries are replaced by an incorrect type.
- Batteries are recyclable. Please check the local rules for proper recycle/disposal in your area.




Caution About Battery Charge Function:

The battery charge function is on by default. With this function on and the dry cells installed, connecting the optional external power supply(stabilized power supply, cigarette lighter cable, AC adapter, etc.) to the DC-jack on the unit may send current through the dry cells, resulting in battery leak, heat or explosion. Referring to "Menu 11 Battery Charge Function" on page 48, be sure to set this function off (select CHG-OFF) when the unit is equipped with the dry cells. However, there is no danger even if CHG-ON is selected as long as no external power supply is connected to the unit.

2.1.7 Battery-Level Icon

During the operation, a black battery icon indicates that the battery-level is in usable range. When it turns to empty, please charge the pack or replace the cells with new ones.




Battery-level icon

- The battery is in usable condition.
- Battery-level is low. Replace or charge the pack.

3. Names and Operations of Parts


3.1 Names and Operations of Keys and Ports

■ Top and Front

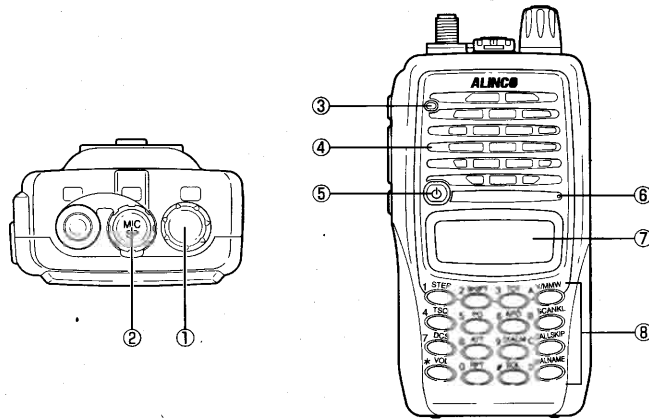


①	Dial	Rotate the dial to select the frequency of operation, memory channel, offset frequency, tone frequency, DCS code, Set mode settings, and the characters for name-tags. Rotating the dial while pressing the FUNC key increases or decreases the frequency in 1MHz order.
②	Microphone/ Speaker jack	For an optional speaker/Mic connection. Securely close the cover for water-proof while the accessory isn't in use.
③	TX/RX lamp	Lights green when the squelch is unmuted. Lights red during transmission.
④	Speaker	A speaker is built in.
⑤	Power key	Press the power key down for approximately one second to turn on/off the unit.
⑥	Microphone	Speak into the microphone from a distance of about 5cm (2").
⑦	Display (LCD)	Refer to "Display" (page 23).
⑧	Keypad	Refer to "Keypad" (page 22).

■ Side

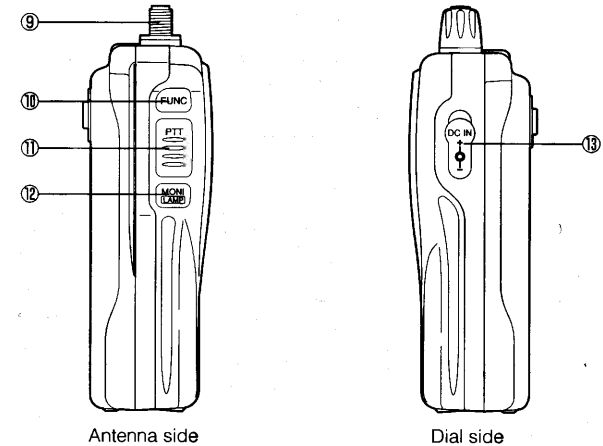

⑨	SMA Antenna Connector	Attach the whip antenna. If you plan to use an optional antenna, select one that is tuned to the operating frequency.
⑩	FUNC key	The FUNC key is used in combination with the other keys to access the various functions of the unit. To enter the Set mode to set operating parameters, press the FUNC key continuously for about 2 seconds.
⑪	PTT key	Press the PTT key to transmit, release to receive.
⑫	MONI key	When the MONI key is pressed, the squelch unmutes regardless of the TSQ/DCS setting. Pressing the MONI key after pressing the FUNC key illuminates display for about 5 seconds. Pressing the MONI key while pressing the PTT key transmits a tone-burst signal.
⑬	DC-IN jack	Connect an external power source of DC 7.0V~DC 16.0V at 2A or more. An optional EDC-36 cigar-cable is available for mobile operation. EBP-65/66 packs can be charged using this jack (page 16).


3.2 Keypad

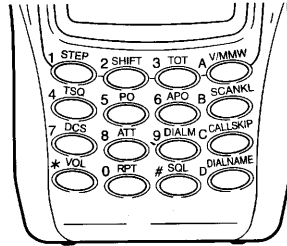

key	Without pressing the FUNC key.	While F appears after the FUNC key is pressed.
1 STEP	Inputs* 1.	Channel step setting (page 27).
2 SHIFT	Inputs 2.	Offset frequency setting (page 27).
3 TOT	Inputs 3.	Time-Out-Timer setting (page 35).
4 TSD	Inputs 4.	Tone Encode / Tone Squelch setting (page 36).
5 PO	Inputs 5.	Hi / Low power setting (page 31).
6 APO	Inputs 6.	Auto-Power-Off setting (page 34).
7 DCS	Inputs 7.	DCS (digital code squelch) setting (page 38).
8 ATT	Inputs 8.	ATT (Attenuator) setting (page 42).
9 DIALM	Inputs 9.	Auto dialer memory setting (page 40).
0 RPT	Inputs 0.	Repeater-Access function setting (page 43).
A V/M/M/W	Switches between the VFO and Memory mode (page 25).	Memory programming (page 28).
B SCANKL	Start/Stop scanning (page 32).	Key / Frequency lock setting (page 33).
C CALLSKIP	Access the Call channel (page 30).	Memory channel skip setting (page 33).
D DIALNAME	Auto dialer operation (page 40).	Naming memory channels setting (page 34).
# SQL	SQL adjustment (page 25).	N/A
* VOL	Audio level adjustment (page 25).	N/A

* The numeric keys can be used for direct VFO frequency input within the product's operating range. DTMF tones are generated by pressing the keys during transmissions.

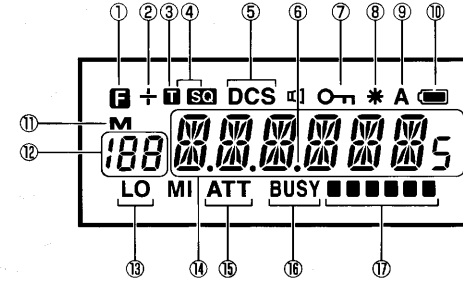

3.3 Display (LCD)



①	F	Appears when the FUNC key is pressed.
②	+	Indicates the shift (+/-) direction.
③	T	Appears when setting the CTCSS tone encoder.
④	T SQ	Appears when setting the tone squelch.
⑤	DCS	Appears when setting the DCS.
⑥	.	Displays the frequency and scan operation.
⑦	O-T	Displayed when the frequency or the keypad is locked.
⑧	*	Appears when the Repeater-Access function is activated.
⑨	A	Appears when Auto-Power-Off function is activated.
⑩		Indicates battery-level. The black icon flashes when the battery charge function is on.
⑪	M	Displayed when in the Memory mode.
⑫	188	Displays the memory channel No.
⑬	LO	Displayed when the transmission output is in LOW setting.
⑭		Displays the operating frequencies, name-tags and parameters in the setting mode.
⑮	ATT	Appears when the attenuator is activated.
⑯	BUSY	Appears when the squelch is unmuted.
⑰		Indicates the receiving signal (S-meter) and transmission output levels (Power-meter).

4. Basic Operation

4.1 Turning On the Power

Hold the  key down for a second. To turn off the power, hold the  key down until the display turns off.

default frequencies

<DJ-V17>

T/E




TFH/R




<DJ-V27>

T




<DJ-V47>


T



E



T1



T2





NOTE:

This manual has been edited based on DJ-V17E.
Frequency display may vary depending on the model you have purchased.

4.2 Adjusting the Audio Output (Volume)

- There are 21 audio output levels (00~20).
- The default setting is level 00. There is no audio output at this status.

1. Press the  key. The level is displayed on the LCD.




2. Rotate the dial to increase or decrease the level.
As the setting value increases, the audio becomes louder.


3. Press any key except for the MONI key or just leave it for 5 seconds to automatically complete the setting.

4.3 Adjusting the Squelch

Squelch is a function that eliminates the noise when no signals are being received.

- There are 11 squelch levels (00~10).
- The default setting is Level 00.

1. Press the  key. The squelch level is displayed on the LCD.



2. Rotate the dial to increase or decrease the squelch level. Set to the lowest level that the noise is cut.


3. Press any key except for the MONI key or just leave it for 5 seconds to automatically complete the setting.

4.4 Setting the Frequency in the VFO Mode

The factory default of this unit is the VFO mode. The VFO mode allows you to change the frequency and operating parameters by using the dial and key operations.

4.4.1 Setting the Frequency

■ To Select the VFO Mode

The  key switches between the VFO and Memory mode each time the key is pressed.

"M" is displayed on the LCD when the unit is in the Memory mode.

■ Selecting the Operating Frequency

Rotate the dial clockwise to increase the frequency by one tuning step.
Rotate the dial counter-clockwise to decrease it by one tuning step.

■ To Quickly Change the Frequency

Press the FUNC key, and while **F** is displayed on the screen, rotate the dial to increase or decrease (depending on the direction of rotation) the frequency by 1MHz order.

■ Entry from the Keypad

Use the numeric keys to set the frequency. It accepts valid numbers only.

1) ie: 145.210 MHz

1. Input the 100MHz digit by pressing 1 STEP
2. Input the 10MHz digit by pressing 4 TSO
3. Input the 1MHz digit by pressing 5 PO
4. Input the 100kHz digit by pressing 2 SHIFT
5. Input the 10kHz digit by pressing 1 STEP

2) ie: 445.210 MHz

1. Input the 100MHz digit by pressing 4 TSO
2. Input the 10MHz digit by pressing 4 TSO
3. Input the 1MHz digit by pressing 5 PO
4. Input the 100kHz digit by pressing 2 SHIFT
5. Input the 10kHz digit by pressing 1 STEP


Depending on the tuning step, entry may be required to the 1kHz digit.

The relationship between the tuning step and entry-completion digit is shown in the following chart. The setting will be completed automatically when the last digit is correctly entered and a high-tone beep sounds.

Tuning step	Entry completion digit	Final digit selection
5.0kHz	1kHz	Accept 0 or 5 as valid number.
10.0kHz	10kHz	Accept any of 0 to 9 keys.
12.5kHz	10kHz	When you input the 10kHz digit, the 1kHz digit is set automatically as follows. 0---00.0, 1---12.5, 2---25.0, 3---37.5, 4---invalid, 5---50.0, 6---62.5, 7---75.0, 8---87.5, 9---invalid
15.0kHz	10kHz	Auto-complete after the 10kHz digit entry.
20kHz	10kHz	Auto-complete after the 10kHz digit entry.
25kHz	10kHz	When you input the 10kHz digit, the 1kHz digit is set automatically as follows. 0---00.0, 2---25.0, 5---50.0, 7---75.0 Other entries are invalid.
30kHz	10kHz	Auto-complete after the 10kHz digit entry.

4.4.2 Setting the Tuning Step

1. Press the FUNC key in the VFO mode, and while **F** is displayed, press the 1 STEP key to display the current tuning step.
2. Rotate the dial to select the desired tuning step.



3. Press any key except for the MONI key to complete setting.


NOTE:

- Tuning step can't be changed in the Memory mode.
- When the tuning step is changed from 5kHz, 10kHz, 15kHz, 20kHz or 30kHz to 12.5kHz and 25kHz or vice versa, the operating frequency and the shift width automatically suite to the new setting.

4.4.3 Shift Direction and Offset Frequency Settings

In conventional repeater systems, a signal received on one frequency is retransmitted on another frequency. The difference between these two frequencies is called the offset frequency. The selectable offset frequency of this unit is from 0 to 99.995MHz.

1. Press the FUNC key, and while **F** is displayed, press the 2 SHIFT key to display the current offset frequency and shift direction settings.
2. Each time the 2 SHIFT key is pressed the shift direction changes as indicated below.
A (-) means that the TX frequency is lower than the RX frequency.
A (+) means vice versa.



3. Rotate the dial while the shift frequency is being displayed.
Clockwise: each click increases the frequency by one tuning step.
Counter-clockwise: each click decreases the frequency by one tuning step.
Press the FUNC key and rotate the dial to increase or decrease the frequency in 1MHz steps.
4. Press any key except for the MONI or FUNC key to complete setting.

NOTE:

- Please refer to "Selective Calling" (page 36) to set the CTCSS/DCS tones usually required for conventional Repeater-Accesses.
- If the offset frequency is set to exceed the transmitting frequency range of this unit, "OFF" appears on the display and a beep sounds when the PTT key is pressed. You can not transmit in this state.

4.5 Memory Mode

This mode allows recalling and operating the preprogrammed frequency or setting in the memory channels. This unit provides up to 200 memory channels, 1 CALL channel and 1 Repeater-Access function memory.

4.5.1 How to Program Memory Channel(s)

1. Select a frequency and operating parameters to be programmed in the VFO mode. Programmable parameters are explained later. Press the $\overset{A}{\text{VMMW}}$ key. "M" appears on the display.
2. Press the FUNC key to display **F**.
3. Rotate the main dial to select the desired memory channel number while **F** is displayed. An empty channel is shown with a flashing "M". Select C for CALL channel programming. "rP ALLFREQ" is explained later.
4. By pressing the $\overset{A}{\text{VMMW}}$ key again while **F** is on the display, a beep sounds and programming is completed.
5. Pressing the FUNC then $\overset{A}{\text{VMMW}}$ key while **F** is displayed on the programmed channel will delete the memory data and it becomes available for reprogramming.

4.5.2 Recalling a Memory Channel

1. Select the Memory mode by pressing the $\overset{A}{\text{VMMW}}$ key. "M" and channel number appear on the display to indicate that the unit is in the Memory mode. Repeat to switch between the Memory and VFO modes.
2. Select a memory channel.
Rotating the main dial will increase or decrease a memory channel number.

4.5.3 Deleting a Memory Channel

1. Select the Memory mode by pressing the $\overset{A}{\text{VMMW}}$ key.
2. Rotate the dial to select the memory channel No. that you wish to delete.
3. Press the FUNC key, and while **F** is displayed on the LCD, press the $\overset{A}{\text{VMMW}}$ key. A beep sounds, then "M" flashes on the display.

NOTE:

When "M" is flashing in step 3 (when the memory contents are displayed as is on the display), it is still possible to cancel the operation by pressing the FUNC key, and while **F** is displayed on the LCD, press the $\overset{A}{\text{VMMW}}$ key. After changing channels or modes, this is no longer possible.

4.5.4 Programming a Repeater-Access Function Setting

The "Repeater-Access" function is to set the desired shift and tone parameters to the current operating frequency by just 2 key-touches.

Please set the parameters to be applied to the Repeater-Access function here.

1. Enter the Memory mode (by pressing the $\overset{A}{\text{VMMW}}$ key if necessary).
2. Rotate the dial to select MrpALLFRQ.
3. Set the most commonly used Repeater-Access parameters by referring to "Repeater-Access" (page 43). The parameters can be programmed in this memory are marked * in the chart 4.5.5 below. By activating the Repeater-Access function these settings are applied to the operating frequency regardless of the VFO/Memory/CALL modes, by temporary replacing the current parameters.
4. After programming is completed, press the FUNC key then press the $\overset{A}{\text{VMMW}}$ key while MrpALLFRQ is displayed to store the edited parameters.
5. Rotate the dial to operate in the Memory mode by selecting channels or press the $\overset{A}{\text{VMMW}}$ key for VFO mode operation.

NOTE:

- You can not communicate in the "rP ALLFRQ" channel.
- The "rP ALLFRQ" channel is skipped during scanning. You can not delete or convert this memory to other purposes.

4.5.5 Programmable Parameters in Memory Channels

The following parameters can be stored in each of the memory channels.


- Frequency
- Skip channel setting
- Busy channel lockout (BCLO)
- Transmission power (H/L)
- Battery save setting
- Clock Shift setting
- Alphanumeric channel tag
- Attenuator Level
- Offset frequency *
- Shift direction (+/-) *
- Tone encoder frequency *
- Tone decoder frequency *
- Tone encoder/decoder setting (TSQ) *
- DCS code *
- DCS setting *

NOTE:



Only parameters marked "*" are programmable in Repeater-Access function memory.


4.6 Call-Channel Mode

This mode is used to recall a most frequently used memory channel (stored in MC channel) with a single key-touch.

1. Press the  key.

"C" is displayed on the LCD, and the channel programmed in MC is recalled.



2. Press the  key again or the  key in the Call mode to return to original operating mode (VFO/memory).



IMPORTANT NOTE:

- The dial and direct key-entry of frequency/memory channel are blocked in the Call mode.
- It is possible to temporary change the offset and CTCSS/DCS related parameters in the Call mode.
- The Scan function is deactivated in the Call mode.
- The CALL channel reprogramming is possible but it can't be deleted from the memory channel mode.

4.7 Receiving

1. Turn on the unit.
2. Press the  key and rotate the dial to adjust the audio level as necessary.
3. Press the  key and rotate the dial to adjust the squelch level.
4. Select the frequency that you wish to operate by using the dial or the keypad.
When a signal is received on the frequency that you selected, **BUSY** and S-meter are displayed on the LCD, then the received signal can be heard. The green RX indicator also lights at this time.

4.7.1 Monitor Function

In case the receiving signal is weak and the audio is intermittently cut off by the squelch, press the MONI key. As long as this key is pressed, the squelch including TSQ/DCS unmutes making the audio easier to hear.

- The squelch is unmuted while the MONI key is pressed, regardless of the squelch level setting.
- This function unmutes the squelch even if the DCS and Tone Squelch functions are set.



4.8 Transmitting

1. Select the frequency that you wish by using the dial or keypad.
2. Press the PTT key.
The red TX indicator turns on while transmitting.
3. While holding down the PTT key, speak into the unit at normal voice from the distance of 5cm (2").
4. Release the PTT key to receive.

IMPORTANT NOTE:



- To transmit a tone-burst signal, press the MONI key while holding down the PTT key.
- Speaking too loud, too close or too far from the unit may distort the audio.
- This unit is equipped with a special kind of cloth over the built-in microphone for water proof. For this reason, a slight change of tone may happen when you use accessories like external microphones, but this is not abnormal.
- "OFF" appears on the display and a beep sounds when the PTT key is pressed with the TX frequency set out of the TX range. You can not transmit in this state.

4.8.1 Selecting the Output Level

Press the FUNC key, and while  is displayed on the LCD, press the  key to switch between high and low transmission power output.

When the low power output is selected, "LO" is displayed on the LCD (nothing is displayed when the high power is selected).

The initial setting is low power.

The Power-meter display is  when transmitting at the low power, and  when transmitting at the high power.

IMPORTANT NOTE:

The output level can't be altered while transmitting.

5. Useful Functions

5.1 Scan Modes

The scan function automatically searches the receiving signals. There are 2 modes for scan-resume condition.

- Busy Scan: The scan stops when a signal is detected, stays until the signal is gone then resumes scanning.
- Timer Scan: The scan stops when a signal is detected, and resumes scanning after 5 seconds regardless of receiving status.

During scanning, the 1MHz decimal point (•) on the frequency display flashes.



Press any key other than the MONI key to stop scanning.

Scanning starts in the direction of the last dial operation (up or down).



NOTE:

Please refer to the Set mode to switch the setting between Timer and Busy scan modes (page 45).

5.1.1 VFO-Scan

1. Use the  key to select the VFO mode.
2. Press the  key to start scanning. The unit scans in accordance with the order of one step.
3. Rotate the dial clockwise/counter-clockwise to change the scan direction. VFO-scan scans the entire frequency range.
4. Press any key other than the MONI key to stop scanning.

5.1.2 Memory-Scan



1. Use the  key to select the Memory mode.
2. Press the  key to start memory scanning.
3. Rotate the dial clockwise/counter-clockwise to change the scan direction. Memory-scan scans all programmed memory channels.
4. Press any key other than the MONI key to stop scanning.

NOTE:

Please set the squelch level correctly before scanning, even in the TSQ scanning the normal squelch level adjustment is required to activate this function.

5.1.3 Setting Skip Channels

You can select the memory channels that you wish to skip during the memory-scan.

- Press the FUNC key in the Memory mode, and while  is displayed, press the  key to set the currently selected memory channel as a skip channel.



Use the same procedure to clear the skip channel setting.

- The 10MHz decimal point appears for memory channels that are set as skip channels.

NOTE:

The Call channel and Repeater-Access memory are automatically skipped during scanning.

5.2 Keylock

Press the FUNC key, and while  is displayed, press the  key to set the Keylock function on, and repeat the same to quit.

When the Keylock is on, the  is displayed on the LCD.

When the Keylock is on, other than the following, all operations are blocked.

- * PTT
- * LAMP
- * MONI
- * VOL
- * SQL
- * Tone-burst
- * POWER ON/OFF
- * DTMF tone

NOTE:

Keylock function can't be activated on the Repeater-Access function memory channel.

5.3 Tone-Burst

This function is to generate an audible tone to access repeaters mostly used in Europe.

- To output the tone-burst tone, press the MONI key while holding down the PTT key. The tone is transmitted as long as the MONI key is pressed. The initial setting for the tone-burst tone is 1750Hz, but this can be changed in the Set mode (page 45).
- While transmitting the tone-burst tone, the CTCSS/DCS tone is temporary suspended.

5.4 Naming Memory Channels

In the Memory mode, it is possible to display up to 6 alphanumeric characters (Name-tag) instead of conventional frequency display.

5.4.1 Setting Name-Tag

1. Select the memory channel.
2. Press the FUNC key, and while **F** is displayed press the $\overset{\text{DOALNAME}}{\text{O}}$ key.
3. [A] flashes on the display.
4. Rotate the dial to select a character to be the first digit.
5. Press the $\overset{\text{DOALNAME}}{\text{O}}$ key to input the next character. The previous character will stop flashing.
6. Repeat the same sequence as necessary.
Press the $\overset{\text{CALLSKIP}}{\text{O}}$ key during setting to delete all characters.
7. Press any key (except MONI, $\overset{\text{CALLSKIP}}{\text{O}}$, $\overset{\text{DOALNAME}}{\text{O}}$) to complete the setting.

5.4.2 Using the Channel Name Function

- Programmed memory channels are displayed with alphanumeric characters. The channel number is displayed as it normally is.
- Press the FUNC key to display the frequency display for 5 seconds. Pressing certain keys during this 5 sec period may immediately recall the alphanumeric display, while other keys access their allocated functions.

5.5 Auto-Power-Off (APO)

This function prevents an useless battery consumption.

5.5.1 Setting APO

Press the FUNC key, and while **F** is displayed on the LCD, press the $\overset{\text{APO}}{\text{O}}$ key. **A** is displayed on the LCD, and the Auto-Power-Off function is set. Repeat the same to turn it off.

- The initial setting for the APO function is off.

5.5.2 APO Operation

- After having activated the APO and about 30 minutes elapse without any key-operation, the unit turns off automatically alerting with beep sounds. The time to Auto-Power-Off is determined by the last key operation only, not the last signal received.

5.6 Time-Out-Timer (TOT)

This function automatically stops transmission when a preset time is elapsed.

5.6.1 Setting TOT

1. Press the FUNC key, and while **F** is displayed on the LCD, press the $\overset{\text{TOT}}{\text{O}}$ key. T-OFF is displayed on the LCD.
 2. Rotate the dial to change the TOT setting time.
The maximum setting for the TOT time is 450 seconds.
- OFF → 30 → 60 → 90 → ----- → 450
 (unit: seconds)
3. Press any key other than the MONI key to complete the setting.

5.6.2 TOT Operation

When the preset time is about to be elapsed, a beep sounds to alert that the unit is forced to quit transmitting. Release PTT key to quit transmitting otherwise the TOT penalty may be activated. Refer to page 47 for TOT penalty time setting.

5.7 Lamp

Press the FUNC key, and while **F** is displayed on the LCD, press the MONI key to illuminate the display and DTMF keypad.

- The backlight automatically switches off if there is no key operation for 5 seconds.
- Pressing any key other than the LAMP key extends the LAMP function for another 5 seconds.
- Turning on the power while pressing the MONI key illuminates the backlight permanently. Repeat the same to turn it off.
- When the lamp is set for the "permanent-on" position, pressing the FUNC key then the MONI key to turn on/off the backlight.

NOTE:

The LAMP function consumes battery. The "permanent-on" position is recommended only for the operation using an external power source.

6. Selective Calling


■ Selective Calling Operations

- To communicate only with selected stations, use either the Tone Squelch or the DCS function.
- The Tone Squelch function unmutes the squelch only when a signal added with one of the matching 39 CTCSS tone frequencies is received.
- The DCS function unmutes the squelch only when a signal added with one of matching 104 digital codes is received.
- It isn't possible to use the Tone Squelch and DCS functions at the same time.

6.1 Tone Squelch (TSQ)

6.1.1 Setting the Tone Squelch

- Press the FUNC key, and while **F** is displayed on the LCD, press the 4^{TSQ} key to display the current TSQ settings. Each time the 4^{TSQ} key is pressed, the display shows:



- When only **T** is displayed, the unit encodes the CTCSS tone.
 - When **T SQ** is displayed, the unit encodes and decodes the CTCSS tone.
- Rotate the dial while the tone frequency is displayed to select one of the 39 CTCSS tones shown below. The tone can be set for encode/decode separately (refer to page 37 for details).

(unit: Hz)

67.0	69.3	71.9	74.4	77.0	79.7	82.5	85.4	88.5	91.5
94.8	97.4	100.0	103.5	107.2	110.9	114.8	118.8	123.0	127.3
131.8	136.5	141.3	146.2	151.4	156.7	162.2	167.9	173.8	179.9
186.2	192.8	203.5	210.7	218.1	225.7	233.6	241.8	250.3	

- Press any key other than the MONI key to complete the setting. Observe that both **T** and **SQ** are displayed.

6.1.2 Switching Off the Tone Squelch

Press the 4^{TSQ} key in Tone Squelch Setting mode to select TCS-OFF, then press any key other than the MONI key to complete the setting.

6.1.3 To Differentiate the ENC/DEC Tones

It is possible to set the encode and decode tones independently in the Tone Squelch Setting mode.

- To set the encode tone, when **T** is displayed, select a desired tone. The decode tone is set automatically to the same tone.
- To differentiate the decode tone, select another tone in **T SQ** status.


6.1.4 Tone Squelch Operation

The squelch unmutes only when the signal with the same decoding-setting tone is received.

6.2 DCS

6.2.1 Setting the DCS

- Press the FUNC key, and while **F** is displayed on the LCD, press the 7^{DCS} key. "DCS" is displayed on the LCD, and the DCS code is displayed. The initial setting is 023. Each time you press the 7^{DCS} key, the display switches between:



- Press any key other than the MONI key to complete the setting. Observe that "DCS" is displayed.

6.2.2 Changing the DCS Code

1. Rotate the dial in DCS Code Setting mode (while "DCS" is displayed).
2. Press any key other than the MONI key to complete the setting.
 - The same DCS code is set for ENC/DEC, differential setting isn't available.

One of the following 104 DCS codes can be selected.

023	025	026	031	032	036	043	047	051	053
054	065	071	072	073	074	114	115	116	122
125	131	132	134	143	145	152	155	156	162
165	172	174	205	212	223	225	226	243	244
245	246	251	252	255	261	263	265	266	271
274	306	311	315	325	331	332	343	346	351
356	364	365	371	411	412	413	423	431	432
445	446	452	454	455	462	464	465	466	503
506	516	523	526	532	546	565	606	612	624
627	631	632	654	662	664	703	712	723	731
732	734	743	754						

6.2.3 Switching Off DCS

Select DCS-OFF in the DCS Code Setting mode to turn it off.

6.2.4 DCS Operation

The squelch unmutes only when the unit receives the matching code.

6.2.5 DET Mode in DCS Operation

■ DET Setting

If the DET mode in DCS operation is preferred, while in the DCS Code Setting mode and DCS-OFF is displayed, rotate the dial to eliminate the hyphen (DCS OF) then proceed with the rest of setting sequence.

DET on DCS function stands for Detect-Only mode. In DCS operation, the TX signal carries a digital code. The RX side, just like TSQ, detects this tone stream and determines the squelch operation. This DCS code stream is transmitted all the way through the communication like a CTCSS tone and it is necessary for receiver to correctly and CONTINUOUSLY receive this DCS stream to hold the squelch open, otherwise the CPU thinks that the signal is unwanted and it closes the squelch. But due to noise or weak signal strength etc, sometimes it is difficult to continuously receive a DCS stream. By activating DET, the receiver opens the squelch when the first corresponding DCS stream is received, then thereafter, regardless of the status of the DCS codes, the DCS squelch remains opened.

■ Advantage of DET

It enables DCS squelch operation even in poorer signal conditions.

■ Disadvantage of DET

When it is activated, suppose 2 stations are sharing the same channel and using the DCS selective-calling technique and transmitting at the same time. After station A with its corresponding DCS is gone, you may still hear station B even his DCS code is different from A, although he can't open your DCS squelch by his signal alone.

6.3 DTMF Tone Encoding

■ To Manually Transmit DTMF Tones

1. Press the numeric, alphabetic or symbol keys while holding down the PTT key. The tones sound as long as the key is pressed.
2. Up to 16 characters of manually transmitted DTMF tones are automatically stored for redialing. Refer to "Redial" (page 41) for operation.

6.4 Auto Dialer

The DTMF tones can be stored in the memory to automatically transmit.

6.4.1 Setting the Auto Dialer

- All 16 DTMF tones up to 16 characters are available for each of 9 memories called an Auto Dialer memory.

■ Programming the Auto Dialer Memories

1. Press the FUNC key, and while **F** is displayed on the LCD, press the $\overset{9 \text{ DIALM}}{\text{O}}$ key to enter the Dialer Setting mode. The "M1" appears.
There are six space available for characters on the display, and nothing is displayed initially.
2. Select a desired Auto Dialer memory channel from M1 to M9 by rotating the dial.
3. Use the DTMF key to input the DTMF tones.

For example: when programming 123456789, the display changes as follows:

[1]->[. 12]->[123]->[1234]->[12345]->[123456]->[234567]->
[345678]->[456789]

- To set a pause instead of a tone, press the FUNC key, and while **F** is displayed, press the $\overset{0 \text{ PPT}}{\text{O}}$ key. "-" is displayed for a pause.
The pausing time is approx. 1 second.
 - Press the FUNC key, and while **F** is displayed, rotate the dial to scroll the display to see the hidden characters.
 - To clear the programming, press the FUNC key, and while **F** is displayed, press the $\overset{C \text{ CALLSP}}{\text{O}}$ key.
4. Press the PTT key to complete the programming.

6.4.2 Generating the Auto Dialer Codes

Please program the Auto Dialer memory channel(s) in advance.

1. Press the $\overset{D \text{ DIALNAME}}{\text{O}}$ key. "DIAL" is displayed on the LCD.
2. Press one of the $\overset{1 \text{ STEP}}{\text{O}}$ to $\overset{9 \text{ DIALM}}{\text{O}}$ key (corresponding to memory #1~#9) to automatically generate the DTMF tones.

■ Auto Dialer Operation While Transmitting

1. While pressing the PTT key, press the FUNC key. "DIAL" is displayed on the LCD. Don't release the PTT to proceed.
2. Press one of the $\overset{1 \text{ STEP}}{\text{O}}$ to $\overset{9 \text{ DIALM}}{\text{O}}$ key to automatically transmit the DTMF tones.

6.4.3 Redial

This function generates the last DTMF tones used by the unit.

1. Press the $\overset{D \text{ DIALNAME}}{\text{O}}$ key while the unit is receiving.
2. Press the $\overset{0 \text{ PPT}}{\text{O}}$ key. The last DTMF tones (either the auto dialer code or a manually input DTMF code) is automatically generated from the speaker. The unit doesn't transmit the tones in this operation.
3. To transmit, press the FUNC key while pressing the PTT key, then the $\overset{0 \text{ PPT}}{\text{O}}$ key.

Please note that you must operate the DTMF tones at least once to proceed above.

7. Special Functions

7.1 ATT (Attenuator)

Use this function when the receiving signal is interfered by strong signals of nearby channels. When you activate this function, the transceiver attenuates the receiving sensitivity.

1. Press the FUNC key, and while **F** is displayed on the LCD, press the $\overset{8}{\text{ATT}}$ key.
2. Rotate the dial to change the ATT level. There are 2 levels; ATT-1 attenuates the received signal by 10dB and ATT-2 does 20dB. Press any key other than the $\overset{8}{\text{ATT}}$ or MONI key to complete setting. Observe that "**ATT**" appears on the display.



Press the $\overset{8}{\text{ATT}}$ key in the setting sequence to display "ATT-OFF" then press any key other than the $\overset{8}{\text{ATT}}$ or MONI key to turn off this function. Observe that "**ATT**" disappears from the display.

7.2 Battery Refresh

Repeating improper recharge of the Ni-MH battery pack may cause so-called the "memory effect" that the battery holds less charge. To avoid this, it is always recommended to fully discharge the battery pack then full charge. This function helps discharging the battery pack. Please remove the unit from a charger or a DC cable before this operation.

1. Activate the Keylock (page 33).
2. Press the $\overset{A}{\text{VMMW}}$ key twice, the $\overset{B}{\text{SCANL}}$ key twice, the $\overset{C}{\text{CALLSKP}}$ key twice and then the $\overset{D}{\text{DIALNAME}}$ key twice. "DISCHG" will be displayed on the LCD, and the battery-refresh starts.

3. To cancel this operation, just turn off the unit, turn it on again, then unlock the Keylock function.
4. The unit will turn off automatically when finished the refresh.

Caution

- The time to refresh totally depends on the remaining charge of the battery pack. To discharge the fully-charged EBP-65 may take up to approx. 7 hours.
- When this function is on, the backlight and the keys are illuminated, and noise from the speaker can be heard.
- Before storing the rechargeable battery pack for an extended period of time, please full-charge it after this operation. Also, refresh and fully charge the battery once every 6 months to keep the pack in good condition.

7.3 Repeater-Access

1. In the VFO/Memory/Call channel mode, select the channel to which you wish to apply the Repeater-Access setting.
2. Press the FUNC key, and while **F** is displayed on the LCD, press the $\overset{0}{\text{RPT}}$ key. The Repeater-Access setting is applied to the operating frequency.

NOTE:

Preset parameters on the Repeater-Access function memory will be effective at any frequency. Repeater-Access parameters have priorities over the parameters programmed in the VFO/memory/CALL modes.


8. Set Mode

The Set mode is used to customize the various operational parameters of your DJ-V17/DJ-V27/DJ-V47.

8.1 Set Mode Operation

This chart shows the available parameters in the Set mode.

Menu	Default setting	Function
01	BS-ON	Battery Save ON/OFF
02	TIMER	Timer/Busy scan setting
03	BEP-ON	Beep sound ON/OFF
04	1750	Tone-Burst Frequency setting
05	SFT-OF	CPU Clock Frequency shift ON/OFF
06	BCL-OF	Busy Channel Lock Out ON/OFF
07	TP-OFF	TOT Penalty setting
08	DWT-01	DTMF Wait time setting
09	DP-60	DTMF Pause/Burst time setting
10	DB-60	DTMF First Digit Burst time setting
11	CHG-ON	Battery Charge ON/OFF
12	BATT-NI	Battery type setting

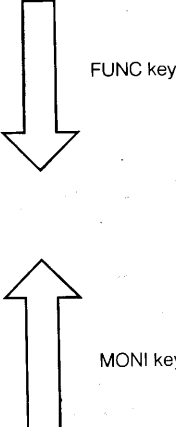

8.2 Entering the Set Mode

- Press the FUNC key for at least 2 seconds.
The unit enters the Set mode.
"BS-ON" is displayed as a factory-default.
- Press the MONI key or FUNC key to select a menu.
The Monitor function can't be used in this status.
- Rotate the dial to change the parameter.
- Press any key other than the MONI key and FUNC key to complete the settings, or use the MONI or FUNC keys to continue programming.

The last operated menu will be selected the next time you enter the Set mode.

8.3 Available Parameters

8.3.1 Menu 1 Battery Save (BS) Function

This function prevents useless battery consumption by switching the power ON/OFF at a fixed ratio if there is no key operation or receiving signal for a continuous period of 5 seconds or more.

- BS-ON is displayed on the LCD.
- Rotate the dial to select the battery save setting (on or off).

BS-ON → BS-OFF




- The factory setting is BS-ON
- The Battery Save function is temporarily suspended when a key is operated or a signal is received.
- Set this parameter OFF for packet operation.
- The display remain unchanged even the BS function is in the OFF cycle.

8.3.2 Menu 2 Timer/Busy Scan Setting

Select the scan-resume condition in this menu (page 32).

- TIMER is displayed on the LCD.
- Rotate the dial to select the scan-resume condition between TIMER and BUSY.

TIMER → BUSY




8.3.3 Menu 3 Beep Function

Select OFF to turn off all the beep sounds inclusive of alerting beeps.

- BEP-ON is displayed on the LCD.
- Rotate the dial to select the beep setting on and off.


BEP-ON → BEP-OFF



8.3.4 Menu 4 Tone-Burst Frequency Setting

- 1750 is displayed on the LCD.
- Rotate the dial to select the tone-burst frequency.

1750 → 2100 → 1000 → 1450
(unit: Hz)



8.3.5 Menu 5 Clock Shift Setting

In the unlikely event that you may hear a weak noise always on the same frequency, it may be so-called a CPU-clock noise. Unfortunately this is due to the circuit-design of this product and can't be eliminated, but can be moved away to another frequency.

1. SFT-OFF is displayed on the LCD.
2. Rotate the dial to select the clock shift setting on and off.

SFT-OFF → SFT-ON
└──────────┘

NOTE:

This function isn't a noise-blanker. Also, since not all noises are due to a CPU-clock noise, the clock shift setting may not be effective.

8.3.6 Menu 6 Busy Channel Lockout Setting

This function restricts the PTT (transmit) operation.

1. BCL-OFF is displayed on the LCD.
2. Rotate the dial to select the Busy Channel Lockout setting on and off.

BCL-OFF → BCL-ON
└──────────┘

When Busy Channel Lockout is set to on, transmission is possible only in the following conditions (and isn't possible otherwise).

The alarm sounds if the PTT key is pressed when transmission is prohibited.

- 1) When no signal is being received (BUSY isn't displayed).
- 2) When the tone matches and the squelch is unmuted based on the Tone Squelch setting conditions.
- 3) When the codes match and the squelch is unmuted based on the DCS setting conditions.

8.3.7 Menu 7 TOT Penalty Time

This parameter determines the time to resume the transmission after the unit is forced to quit transmitting by TOT.

1. TP-OFF is displayed on the LCD.
2. Rotate the dial to change the TOT Penalty Time setting.

TP-OFF → TP-1 → ---- → TP-4 → ---- → TP-15
└──────────────────────────────────┘ (unit: seconds)

Transmission is prohibited until the penalty time elapses.

- An alert beep sounds when the PTT key is pressed during the penalty time.

NOTE:

The following 3 menus explain the Auto Dialer DTMF tone parameters. Please refer to the chart at the end for details.

8.3.8 Menu 8 DTMF WAIT Time

Use this parameter to delay the time to start transmitting the DTMF tones in Auto Dialer operation. The initial setting is 100ms.

1. DWT-01 is displayed on the LCD.
2. Rotate the dial to change the DTMF wait time setting.

DWT-01 → DWT-04 → DWT-07 → DWT-10
└──────────────────────────────────┘ (unit: 100ms)

8.3.9 Menu 9 DTMF Burst/Pause Time

This parameter determines the length of DTMF tones and pause time between the tones.

1. DP-60 is displayed on the LCD.
2. Rotate the dial to change the DTMF burst/pause time setting.

DP-60 → DP-80 → DP-160 → DP-200
└──────────────────────────────────┘ (unit: ms)


8.3.10 Menu 10 DTMF First Digit Burst Time

It often happens that the radios fail to receive the very beginning instant of each communication due to squelch/TSQ/DCS etc. By setting the burst time of the first digit longer, the risk to miss the first DTMF tone will decrease.

1. DB-60 is displayed on the LCD.
2. Rotate the dial to select the initial-character burst time.

DB-60 → DB-80 → DB-160 → DB-200
 (unit: ms)

The DTMF Timing Chart

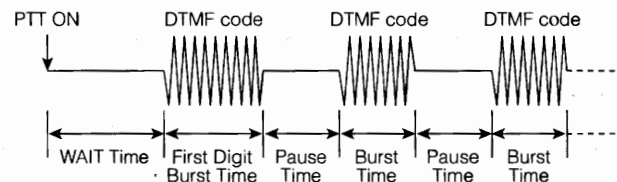

8.3.11 Menu 11 Battery Charge Function

The Ni-MH battery pack can be charged with an external power supply or an optional AC adapter using the DC-jack on the unit. Please select ON to activate this function. The factory setting is ON.

1. CHG-ON is displayed on the LCD.
2. Rotate the dial to select the battery charge setting on and off.
3. Please be sure to read "Battery Type Setting" (page 49) to correctly use this function.

CHG-ON → CHG-OFF



Caution

- Please be sure to select OFF when using a dry cell case otherwise it may risk a leak of battery liquid, heat or explosion of the battery cells and the battery case.
- While this function is activated, without attaching a battery pack or the remaining battery level is below the usable range, the unit turns on by just connecting the DC source such as an adapter or a DC cable (without operating the power key). Therefore, leaving the battery pack detached from the unit may cause the charging terminals on the back of the unit to short out. Please be very cautious when you operate with an external DC source.

8.3.12 Menu 12 Battery Type Setting

Select the correct battery type from Ni-MH battery pack, Li-ion battery pack and Alkaline (and Oxyride) dry cells in order to display the battery-level icon correctly and to perform the battery-charge using the DC-jack.


1. BATT-NI is displayed on the LCD.
2. Rotate the dial to select battery type from Ni-MH battery pack (BATT-NI), Li-ion battery pack (BATT-LI) and Alkaline dry cells (BATT-AL).

BATT-NI (Ni-MH) → BATT-LI (Li-ion) → BATT-AL (Dry cell)

NOTE:

Please set this parameter correctly. When the BATT-LI or BATT-AL is selected, previously explained battery charge function can't be performed.

- Cut out the Set Mode Function List below for use as a quick reference.

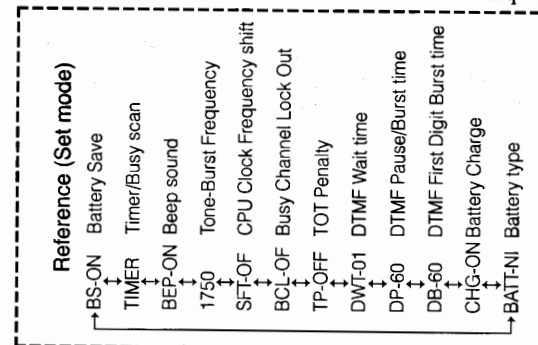


9. Cloning and Packet Operation

9.1 Cloning

The memory data and customized operational parameters can be transferred from a Master unit to other DJ-V17/DJ-V27/DJ-V47 (Slave units).

9.1.1 Cable Connection

- Make sure that both units are turned off before connecting the cable.
- Connect the Microphone/Speaker jack on the Master unit with the Slave unit using an optional clone cable (EDS-11) as shown below, then turn on both units.



* Be sure to securely screw the plug all the way down to the jack

9.1.2 Master/Slave Units

Press the PTT key three times while holding down the MONI key.

"CLONE" is displayed on the LCD, and both units enter the Clone mode.

CLONE

9.1.3 Master Unit Operation

1. In the Clone mode, press the PTT key of the master unit. "SD***" is displayed on the LCD, and starts the data-transfer.


SD ***

2. After the transfer is completed successfully, "PASS" is displayed.
3. Turn off the unit. Repeat the same sequence to clone more units.

PASS

Stop moving the SD***, COMERR etc. on the display means that the cloning is failed. Please read below and repeat the procedure.

9.1.4 Slave Unit Operation

1. When the data is sent from the master unit, "LD***" is displayed on the receiving unit, and the data-transfer starts.
2. After the transfer is completed, "PASS" is displayed.
3. After the cloning is done, turn off the unit by pressing the  key and remove the cable. Repeat the same sequence to clone more units.

LD ***

PASS

In case the transfer fails, please turn off the slave unit and perform the reset sequence (page 54) to turn on again before retry. If you quit cloning of this slave unit, please reset it anyway otherwise it may not work properly.

Caution

- Don't disconnect the cable during data transmission. If you disconnect the cable at this time, "COMERR" is displayed on the LCD of the master unit, and transmission is aborted.
- When data transfer is performed using the Clone function, all settings in the slave unit are overwritten by the master unit settings. There is NO data back-up available in unit's memory.



9.2 Packet Operation

Packet operation is one of the data communication methods, which enables data transmission and reception with a personal computer through an optional TNC unit.

9.2.1 Packet Operation Connections

Connect an optional EDS-10 Microphone/Speaker cable plug to the MIC/SP jack on the top of the unit, and connect the TNC (Terminal Node Controller) to the SP jack with 3.5Ø plug, and to MIC jack with 2.5Ø plug on the EDS-10 as shown below.

- **Input level adjustment:** The unit doesn't have microphone and speaker level adjustment circuit. Adjust their level on the TNC side.
- **Output level adjustment:** Use the audio output (*VOL key) of the unit to adjust the output level from MIC/SP terminal.

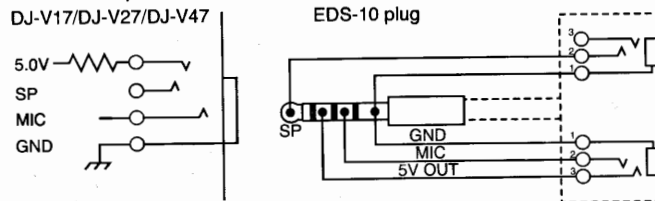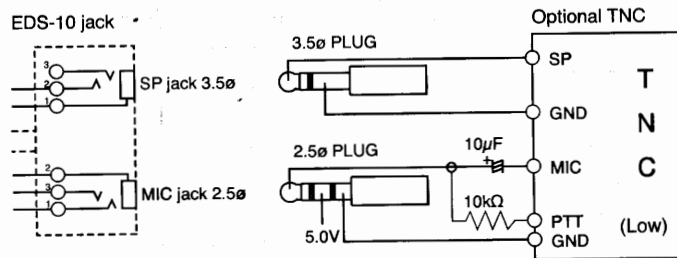

*Power is supplied from internal 5V line through 100Ω resistor.



Caution

- Refer to the TNC's instruction manual when connecting the TNC unit to other devices (personal computer etc.). If the unit, TNC unit and connected personal computer are set too close, noise between them may cause interference.
- Turn the battery save function off during packet operations.
- DJ-V17/DJ-V27/DJ-V47 operates up to 1200bps only.

10. Maintenance and Reference

10.1 Troubleshooting

Please check the list below before concluding that the unit needs to be serviced. If a problem persists, please reset the unit. The setting/CPU program-related troubles are often resolved by the reset.

Symptom	Possible Cause	Action
Nothing appears on the display when turning on the power.	Poor battery pack connection.	Check that the battery pack terminals are clean, and pack is correctly attached.
	Battery is exhausted.	Recharge or replace the battery.
No Speaker audio. No reception.	You are releasing the key too quickly.	Hold the power key down until the display shows figures.
	Volume too low.	Adjust the audio level.
	Squelch level too high.	Adjust the squelch.
	Tone squelch is on.	Turn off tone squelch.
	DCS is on.	Turn off DCS.
Frequency display is incorrect.	You are pressing the PTT key and transmitting.	Release PTT key.
	CPU error.	Reset the unit.
Won't scan.	A channel name is set.	See Naming Memory Channels function (page 34).
	Squelch is unmuted.	Set squelch so that noise mutes.
Frequency and memory number don't change.	Keylock is on.	Turn off Keylock.
	Transceiver is in the Call mode.	Select the VFO or Memory mode.
Key entry not possible.	Keylock is on.	Turn off Keylock.
Repeater-Access can't be used.	Incorrect setting of parameters.	Set the correct parameters to suit your local repeaters.
Can't transmit.	Battery is exhausted.	Recharge or replace the battery.
Display flashes or goes out when you transmit.		
Can't transmit. Can't talk to other stations.	Not pressing the PTT key firmly enough.	Press the PTT key and confirm that TX/RX lamp lights red.
	Off-frequency.	Be sure that you are in the TX range and/or check shift status.
	Incorrect frequency.	Check the shift status/repeater settings.
The display flashes or disappears during reception.	Battery is exhausted.	Recharge battery or replace the battery.

* Please be advised that the water-proof shields including jack caps are subject to consume. The factory warranty for IPX7-grade water-proof is 1 year. Please consult with your local dealer when further service-assistance may be necessary. Please visit alincocom.com's "DISTRIBUTION" menu to locate the nearest dealer.

10.2 Resetting

When you reset the unit, all settings are returned to the initial factory settings. The reset deletes the programmed memory channels also.

1. Turn on the unit with the FUNC and $\overset{A}{\text{VMMW}}$ keys pressed together.
2. All the icons appear on the display.

Release the keys. All display will disappear for 2 seconds, and then reappear. The initial mode is the VFO.

Factory default settings<DJ-V17>

	DJ-V17T	DJ-V17E	DJ-V17TFH/R
VFO Frequency	145.000MHz	145.000MHz	155.000MHz
CALL Frequency	145.000MHz	145.000MHz	155.000MHz
Memory Channel	0~199ch Blank	0~199ch Blank	0~199ch Blank
Channel Step	5kHz	12.5kHz	5kHz
Shift	None	None	None
Offset Frequency	0.6MHz	0.6MHz	0.6MHz
Tone Setting	None	None	None
Tone Frequency	88.5Hz	88.5Hz	88.5Hz
DCS Setting	None	None	None
DCS Code	023	023	023
Transmitter Output	Low	Low	Low
Auto Dialer Code	None	None	None
Keylock	off	off	off
Time-Out-Timer	off	off	off
Auto-Power-Off	off	off	off
Volume Level	0	0	0
Squelch Level	0	0	0
Repeater Shift	-	-	-
Repeater Offset Frequency	0.6MHz	0.6MHz	0.6MHz
Repeater Tone Setting	88.5Hz	88.5Hz	88.5Hz

Factory default settings<DJ-V27>

	DJ-V27T
VFO Frequency	223.500MHz
CALL Frequency	223.500MHz
Memory Channel	0~199ch Blank
Channel Step	5kHz
Shift	None
Offset Frequency	1.6MHz
Tone Setting	None
Tone Frequency	88.5Hz
DCS Setting	None
DCS Code	023
Transmitter Output	Low
Auto Dialer Code	None
Keylock	off
Time-Out-Timer	off
Auto-Power-Off	off
Volume Level	0
Squelch Level	0
Repeater Shift	-
Repeater Offset Frequency	1.6MHz
Repeater Tone Setting	88.5Hz

Factory default settings<DJ-V47>

	DJ-V47T	DJ-V47E	DJ-V47T1	DJ-V47T2
VFO Frequency	445.000MHz	435.000MHz	415.000MHz	460.000MHz
CALL Frequency	445.000MHz	435.000MHz	415.000MHz	460.000MHz
Memory Channel	0~199ch Blank	0~199ch Blank	0~199ch Blank	0~199ch Blank
Channel Step	5kHz	12.5kHz	5kHz	5kHz
Shift	None	None	None	None
Offset Frequency	5MHz	7.6MHz	5MHz	5MHz
Tone Setting	None	None	None	None
Tone Frequency	88.5Hz	88.5Hz	88.5Hz	88.5Hz
DCS Setting	None	None	None	None
DCS Code	023	023	023	023
Transmitter Output	Low	Low	Low	Low
Auto Dialer Code	None	None	None	None
Keylock	off	off	off	off
Time-Out-Timer	off	off	off	off
Auto-Power-Off	off	off	off	off
Volume Level	0	0	0	0
Squelch Level	0	0	0	0
Repeater Shift	-	-	-	-
Repeater Offset Frequency	5MHz	7.6MHz	5MHz	5MHz
Repeater Tone Setting	88.5Hz	88.5Hz	88.5Hz	88.5Hz

NOTE:

THE RESET DELETES ALL THE MEMORIES.

Please take notes of the important data and keep it for future reference.

10.3 Options

EBP-63	Li-ion Battery Pack (DC 7.4V 1100mAh)
EBP-64	Li-ion Battery Pack (DC 7.4V 1600mAh)
EBP-65	Ni-MH Battery Pack (DC 7.2V 700mAh)
EBP-66	Ni-MH Battery Pack (DC 7.2V 2000mAh)
EDC-36	Mobile Cigarette Lighter Adapter with Active Noise Filter
EDC-37	External DC Power Supply Cable
EDC-43	Mobile Cigarette Lighter Cable for Charging Ni-MH Packs
EDC-143T/E/UK	Trickle Battery Charger (T: 120V E: 230V UK: 230V UK plug)
EDC-143R	Multiple-Charger Basket (An external DC power supply required)
EDC-144A/E/UK	Rapid Battery Charger (A: 120V E/UK: same as above)
EDC-144R	Multiple-Charger Basket (An external DC power supply required)
EDC-146	Wall Charger (120V)
EDC-147	Wall Charger (230V)
EDC-148	Wall Charger (230V) U.K. Plug
EDH-34	Dry Cell Case
EDS-10	Microphone/Speaker Cable
EDS-11	Clone Cable
EME-6	Earphone *
EME-12	Headset with VOX *
EME-13	Earphone and MIC with VOX *
EME-15	Tie-pin MIC with VOX *
EME-20	Earphone Microphone *
EME-32A	Earphone microphone (EDS10 NOT required)
EMS-47	Speaker Microphone with Audio Control *
EMS-59	Speaker Microphone *
EMS-62	Speaker Microphone (EDS10 NOT required)
ESC-41	Soft Case

* Please purchase an optional EDS-10 cable to operate optional accessories marked *.

NOTE:

FOR EUROPEAN USERS:

Please be advised that some of the accessories listed above are not RoHS compliant at the moment this manual has been edited, and they are intended for the sales to where RoHS order is not effective. Please consult with your local dealer for any updates about RoHS compliance of our products before purchase. Use of external power source cables are at your own risk per IEC/EN60950-1. Please refer to "Limited Power Source" on page 8 for details.


IMPORTANT NOTE:

All accessories except EBP-63/64/65/66 and soft cases above listed are NOT water-proof. Never use these accessories in wet conditions.

- When using EDC-36, EDC-37, EDC-43, EDC-146, EDC-147, EDC-148, connect them to the unit first before turning on the unit.
- EBP-63, 64, 65 and 66 are IPX7-grade water-proof only when correctly attached and used with DJ-V17/DJ-V27/DJ-V47.

10.3.1 Microphone/Speaker Cable (EDS-10)

1. Turn off the unit.
2. Turn the plug clockwise until it stops. Check to be sure it is securely connected.
3. Connect the Microphone/Speaker plugs to the each jack.

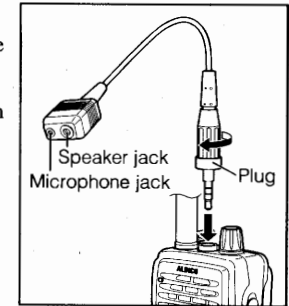

10.3.2 Battery Packs

The battery packs aren't fully charged when shipped. Please charge the pack completely before use.

■ Available Battery Packs for DJ-V17/DJ-V27/DJ-V47:

EBP-63	Li-ion Battery Pack (DC 7.4V 1100mAh)
EBP-64	Li-ion Battery Pack (DC 7.4V 1600mAh)
EBP-65	Ni-MH Battery Pack (DC 7.2V 700mAh)
EBP-66	Ni-MH Battery Pack (DC 7.2V 2000mAh)

■ Charging Battery Packs

Refer to the chart below for the combination of the proper battery pack and charger. The ○ indicates the usable combination, (* hrs) means the approximate time necessary to full charge the empty pack.

Chargers	Li-ion Battery Pack		Ni-MH Battery Pack	
	EBP-63	EBP-64	EBP-65	EBP-66
Trickle Charger EDC-143			○(10hrs)	○(14hrs)
Rapid Charger EDC-144	○(2hrs)	○(3hrs)	○(1.5hrs)	○(3.5hrs)
Wall Charger EDC-146/147/148			○(10hrs)	○(30hrs)

10.3.3 Using the Chargers

**Caution**

Please also read the "Warning" (page 5 of this manual) and the safety instruction that is included in the accessories' package before operating for your safety.

■ Charging with the EDC-143 (Trickle Charger)

Please make sure that following items are included in the package.

- EDC-143T: EDC-143 basket, EDC-146 adapter (AC 120V), insulation sheet
- EDC-143E: EDC-143 basket, EDC-147 adapter (AC 230V), insulation sheet
- EDC-143UK: EDC-143 basket, EDC-148 adapter (AC 230V), insulation sheet
- EDC-143R: EDC-143 basket, connection cable, insulation sheet, 2 screws, connective stay


**Caution**

Before using them for the first time, attach the insulation sheet to cover the screw-terminals at the bottom to avoid short-circuiting. Please refer to page 63 for instruction.



1. Connect the AC adapter plug to the DC-IN jack on the back of the basket.

*The design of the AC adapter may vary depending on the models.

2. Connect the adapter to an outlet.

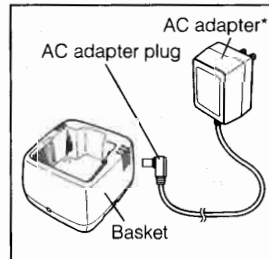


3. Press the sides of the adjustment plate, and attach it to the proper grooves of the basket according to the size of the battery pack. Make sure that the characters A, B and C on both sides of the stand match each other and the plate is placed all the way down to the bottom.

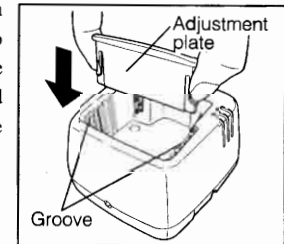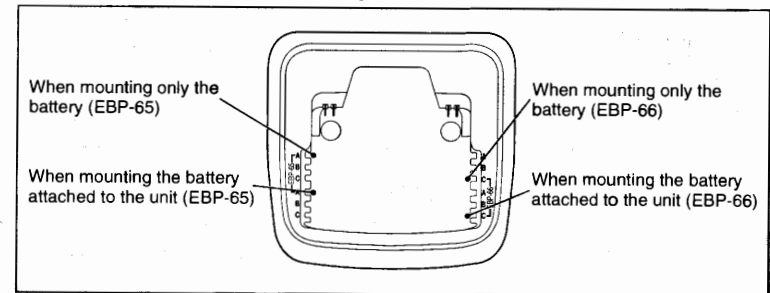**Installation Positions of the Adjustment Plate**

4. Mount the battery (with or without being attached to the unit) in the basket as shown. Turn off the unit while charging.

The red indicator on the basket turns on and charging starts.

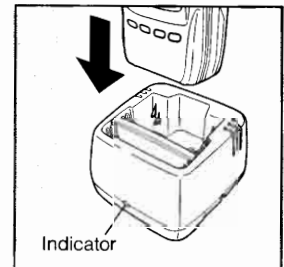**NOTE:**

You can charge the battery pack using a basket (EDC-143/144) even if the battery charge function is set to "CHG-OFF".

5. After charging time is elapsed (page 57), remove the battery pack from the basket.
The red indicator stays turned on as long as the pack is mounted on the basket regardless of the charging status.

Specifications

	EBP-65	EBP-66
Input Voltage	DC 12.0V 150mA	DC 12.0V 150mA
Operating Temperature Range	0°C~+40°C (+32°F~+104°F)	0°C~+40°C (+32°F~+104°F)
Charging Current	70mA	140mA
Battery Capacity	DC 7.2V 700mAh	DC 7.2V 2000mAh
Charging Time	Approx. 10 hours	Approx. 14 hours

*The charging time may vary depending on the condition of the battery pack and the temperature of the environment.

NOTE:

Refer to page 62 for information about how to charge the battery using additional baskets.

■ Charging with the EDC-144 (Quick Charger)

Please make sure that following items are included in the package

- EDC-144A: EDC-144 basket, EDC-150 adapter (AC 120V), insulation sheet
- EDC-144E: EDC-144 basket, EDC-151 adapter (AC 230V), insulation sheet
- EDC-144UK: EDC-144 basket, EDC-152 adapter (AC 230V), insulation sheet
- EDC-144R: EDC-144 basket, connection cable, insulation sheet, 2 screws, connective stay




Caution

Before using them for the first time, attach the insulation sheet to cover the screw-terminals to avoid short-circuiting. Please refer to page 63 for instruction.


1. Connect the AC adapter plug to the DC-IN jack on the back of the basket.

*The design of the AC adapter may vary depending on the models.


2. Connect the adapter to an outlet.

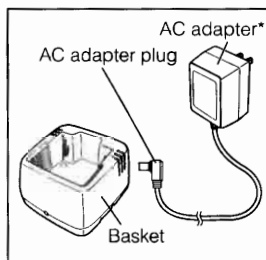

3. Press the sides of the adjustment plate, and attach it to the proper grooves of the basket according to the size of the battery pack. Make sure that the characters A, B and C on both sides of the stand match each other and the plate is placed all the way down to the bottom.

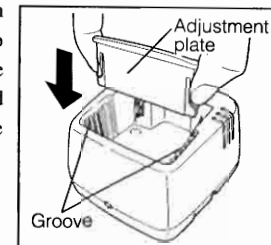


Installation Positions of the Adjustment Plate

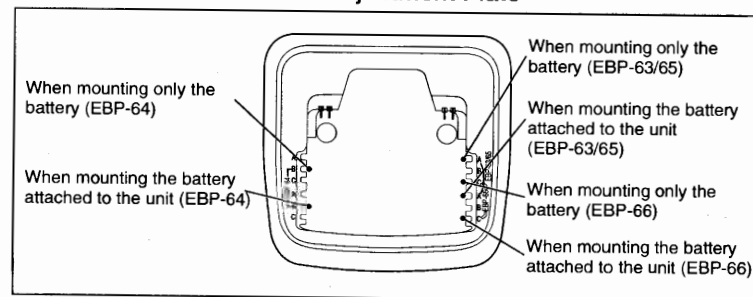

4. Mount the battery (with or without being attached to the unit) in the basket as shown. Turn off the unit while charging.

The red indicator on the basket turns on and charging starts.

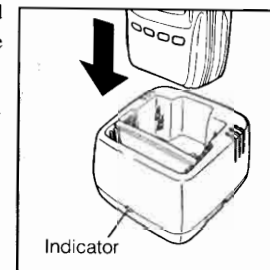

NOTE:

You can charge the battery pack using a basket (EDC-143/144) even if the battery charge function is set to "CHG-OFF".

5. The red indicator turns off when the charge is completed. Remove the battery pack from the basket.

NOTE:

The flashing red indicator means that the charger isn't working properly. Stop using it immediately, remove the cord from the outlet and consult with your local Alinco dealer.

Specifications

	EBP-63	EBP-64	EBP-65	EBP-66
Input Voltage	DC 12.0V 700mA			
Operating Temperature Range	0°C~+40°C (+32°F~+104°F)			
Charging Current	600mA			
Battery Capacity	DC 7.4V 1100mAh	DC 7.4V 1600mAh	DC 7.2V 700mAh	DC 7.2V 2000mAh
Charging Time	Approx. 2 hours	Approx. 3 hours	Approx. 1.5 hours	Approx. 3.5 hours


*The charging time may vary depending on the condition of the battery pack and the temperature of the environment.

■ Connecting Additional Baskets (EDC-143R/144R)

In order to use EDC-143R and EDC-144R, an optional power supply (IEC/EN 60950-1 compliant) of 1A/5A minimum respectively is required.


A DC cable isn't included in the package; the suggested DC cable is 20 AWG wire, shorter than 1m (3feet) in length.

1. Make sure that the output voltage of the power supply is DC 12.0V.
2. Connect the terminals with the provided connection cable, the red cable to the positive and the black cable to the negative terminals. The additional basket can be connected up to 5 in the same way.

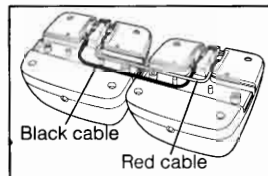


3. Connect the ends of the DC cable to the terminals of the basket.

* This DC cable isn't provided in the products.

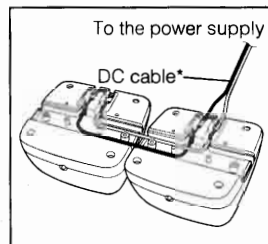


4. Attach the connective stay and the insulation sheets to cover the terminals to avoid short-circuiting.

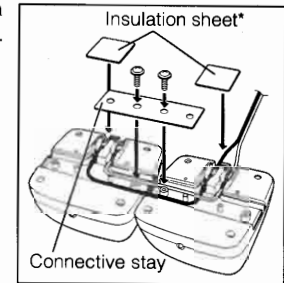**⚠ Caution**

This insulation sheet marked * is provided to all EDC-143/144 series chargers. Please be sure to cover the bottom of the charger with this sheet as shown above to prevent short-circuiting before using them for the first time.

5. Connect the other ends of the DC cable to the output terminals of the power supply. Be mindful to the polarities of the terminals.

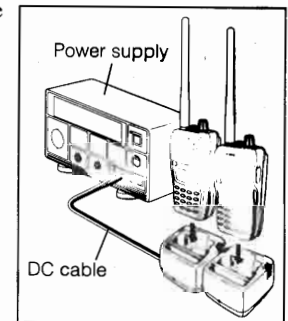

11. Specifications

■ General<DJ-V17>

Frequency range	T: TX144~147.995MHz * 144~147.995MHz RX130~173.995MHz * 144~147.995MHz
	E: TX144~145.995MHz * 144~145.995MHz RX144~145.995MHz * 144~145.995MHz
	TFH/R: TX136~173.995MHz * 150~173.995MHz RX130~173.995MHz * 150~173.995MHz
	* Guaranteed range per specifications
Modulation:	F3E (FM)
Frequency step:	5, 10, 12.5, 15, 20, 25, 30kHz step
Memory channel:	200 channels + 1 call channel + 1 Repeater-Access function memory
Ant. impedance:	50 Ω unbalanced
Frequency stability:	±5ppm
Mic. impedance:	2k Ω
Supply voltage:	DC 7.0~16.0V (EXT DC-IN)
Current consumption:	1.4A (typical) Transmit high at 5W 250mA (typical) Receive at 500mW 70mA (typical) Standby 25mA (typical) Battery save on
Temperature range:	External DC: -10°C~+60°C (+14°F~+140°F) Battery packs: -10°C~+45°C (+14°F~+113°F)
Ground:	Negative ground
Dimension:	58(W)x110(H)x36.4(D)mm (2.28"(W)x4.33"(H)x1.43"(D)) (with EBP-65)
Weight:	Approx. 280g (9.9oz) (with EBP-65)
DTMF:	16 Buttons Keypad
Sub audible Tone (CTCSS):	encoder/decoder installed (39 tones)
Sub audible Tone (DCS):	encoder/decoder installed (104 codes)

■ Transmitter

Power output:	Approx. 5W (with EBP-65) Approx. 5W (with DC 13.8V) Approx. 0.8W (LOW output)
Modulation:	Variable reactance
Spurious emission:	-60dB or less
Max. deviation:	±5kHz
Mic. impedance:	2k Ω

■ Receiver

System:	Double-conversion super heterodyne
Sensitivity:	-14.0dBμ (0.2μV) or less
Intermediate frequency:	1st IF 21.7MHz 2nd IF 450kHz
Selectivity	-6dB: 12kHz or more -60dB: 26kHz or less
AF output:	500mW (MAX) 400mW (8 Ω, 10% distortion)

■ General<DJ-V27>

Frequency range	T: TX222~224.995MHz RX216~249.995MHz * 222~249.995MHz * Guaranteed range per specifications
Modulation:	F3E (FM)
Frequency step:	5, 10, 12.5, 15, 20, 25, 30kHz step
Memory channel:	200 channels + 1 call channel + 1 Repeater-Access function memory
Ant. impedance:	50 Ω unbalanced
Frequency stability:	± 2.5 ppm
Mic. impedance:	2k Ω
Supply voltage:	DC 7.0~16.0V (EXT DC-IN)
Current consumption:	1.6A (typical) Transmit high at 5W 250mA (typical) Receive at 500mW 80mA (typical) Standby 27mA (typical) Battery save on
Temperature range:	External DC: -10°C~+60°C (+14°F~+140°F) Battery packs: -10°C~+45°C (+14°F~+113°F)
Ground:	Negative ground
Dimension:	58(W)x110(H)x36.4(D)mm (2.28"(W)x4.33"(H)x1.43"(D)) (with EBP-65)
Weight:	Approx. 280g (9.9oz) (with EBP-65)
DTMF:	16 Buttons Keypad
Sub audible Tone (CTCSS):	encoder/decoder installed (39 tones)
Sub audible Tone (DCS):	encoder/decoder installed (104 codes)

■ Transmitter

Power output:	Approx. 5W (with EBP-65) Approx. 5W (with DC 13.8V) Approx. 0.8W (LOW output)
Modulation:	Variable reactance
Spurious emission:	-60dB or less
Max. deviation:	± 5 kHz
Mic. impedance:	2k Ω

■ Receiver

System:	Double-conversion super heterodyne
Sensitivity:	-14.0dB μ (0.2 μ V) or less
Intermediate frequency:	1st IF 38.85MHz 2nd IF 450kHz
Selectivity	-6dB: 12kHz or more -60dB: 26kHz or less
AF output:	500mW (MAX) 400mW (8 Ω , 10% distortion)

■ General<DJ-V47>

Frequency range	T:	TX420~449.995MHz	* 420~449.995MHz
		RX400~479.995MHz	* 420~449.995MHz
E:		TX430~439.995MHz	* 430~439.995MHz
		RX430~439.995MHz	* 430~439.995MHz
T1:		TX400~459.995MHz	* 400~429.995MHz
		RX400~459.995MHz	* 400~429.995MHz
T2:		TX440~479.995MHz	* 450~469.995MHz
		RX440~479.995MHz	* 450~469.995MHz
* Guaranteed range per specifications			
Modulation:	F3E (FM)		
Frequency step:	5, 10, 12.5, 15, 20, 25, 30kHz step		
Memory channel:	200 channels + 1 call channel + 1 Repeater-Access function memory		
Ant. impedance:	50 Ω unbalanced		
Frequency stability:	±2.5ppm		
Mic. impedance:	2k Ω		
Supply voltage:	DC 7.0~16.0V (EXT DC-IN)		
Current consumption:	1.7A (typical) Transmit high at 5W		
	250mA (typical) Receive at 500mW		
	80mA (typical) Standby		
	27mA (typical) Battery save on		
Temperature range:	External DC: -10°C~+60°C (+14°F~+140°F)		
	Battery packs: -10°C~+45°C (+14°F~+113°F)		
Ground:	Negative ground		
Dimension:	58(W)x110(H)x36.4(D)mm		
	(2.28"(W)x4.33"(H)x1.43"(D)) (with EBP-65)		
Weight:	Approx. 280g (9.9oz) (with EBP-65)		
DTMF:	16 Buttons Keypad		
Sub audible Tone (CTCSS):	encoder/decoder installed (39 tones)		
Sub audible Tone (DCS):	encoder/decoder installed (104 codes)		

■ Transmitter

Power output:	Approx. 4.5W (with EBP-65)
	Approx. 5W (with DC 13.8V)
	Approx. 0.8W (LOW output)
Modulation:	Variable reactance
Spurious emission:	-60dB or less
Max. deviation:	±5kHz
Mic. impedance:	2k Ω

■ Receiver

System:	Double-conversion super heterodyne
Sensitivity:	-12.0dBμ (0.25μV) or less
Intermediate frequency:	1st IF 38.85MHz 2nd IF 450kHz
Selectivity	-6dB: 12kHz or more
	-60dB: 26kHz or less
AF output:	500mW (MAX)
	400mW (8 Ω, 10% distortion)

ALINCO, INC.

Head Office:Shin-Dai building 9th Floor

2-6, 1-Chome, Dojimahama, Kita-ku, Osaka 530-0004, JAPAN

Phone:+81-6-4797-2136 Fax: +81-6-4797-2157

E-mail:export@alinco.co.jp