

 **KENWOOD**

2m TRANSVERTER

Model TV-502



OPERATING MANUAL

FEATURES

- * TV-502 is designed to be used in combination with TS-520 for 144 MHz operation.
- * Operates in the frequency range from 144.0 MHz to 145.7 MHz, or up to 146.0 MHz by installing additional X'tal oscillating elements.
- * Amplification type ALC system is employed. ALC voltage feed back to TS-520 minimizes the distortion due to overdriving, assuring quality transmission.
- * All-solid-state configuration with FET employed in major circuits.
- * Provides maximum enjoyment of 144 MHz SSB mobile operation.
- * Enjoyable excellent operation performance of TS-520 on 144 MHz band by connecting to TV-502.
- * Receiving antenna circuit incorporates highly sensitive tuning circuit to minimize radio interference.
- * Unique, functional design perfectly matches the styling of TS-520, VFO-520 and SP-520.
- * With minor modification of wiring, changeover between HF and VHF is effected by simply manipulating the Power Switch of TV-502.

CONTENTS

| | | |
|-----------|---|----|
| | FEATURES | 2 |
| SECTION 1 | BEFORE USING | 3 |
| | 1.1 Accessories | |
| | 1.2 Connections | |
| SECTION 2 | OPERATING CONTROLS AND THEIR FUNCTIONS | 4 |
| | 2.1 Front Panel | |
| | 2.2 Rear Panel | |
| SECTION 3 | OPERATION | 6 |
| | 3.1 Reception | |
| | 3.2 Transmission | |
| | 3.3 Reading The Operating Frequency | |
| | 3.4 Installation of Heterodyne Crystal | |
| | 3.5 HF/VHF Changeover | |
| | TROUBLE-SHOOTING | 9 |
| SECTION 4 | CIRCUIT DESCRIPTION | 10 |
| | 4.1 Block Diagram | |
| | 4.2 Unit | |
| | CIRCUIT DIAGRAM | 11 |
| | SPECIFICATIONS | 12 |

SECTION 1. BEFOR USING

1.1 ACCESSORIES

The following accessories should be included with TV-502 Transverter.

| | |
|--|---|
| Instruction Manual | 1 |
| Warranty Card | 1 |
| Control Cable | 1 |
| Dual-pin Plug Cord | 1 |
| Earth Cable | 1 |
| 12P Multi-connector Plug (shorting plug) | 1 |
| Stand | 2 |
| Stand Mounting Screw | 2 |
| Fuse (2 A) | 2 |
| Fuse (1 A) | 1 |
| 2P Plug (DC) | 1 |
| Converter Plug | 1 |

1.2 CONNECTIONS (SEE FIG. 1)

Connect TV-502 to TS-520 in the following sequence.

- ① Confirm that the power switches of TS-520 and TV-502 are OFF.
- ② Connect the X VERTER connector and X VERTER IN connector of TS-520 to the 2 m CONTROL connector of TV-502 using the supplied control cable.
- ③ Connect the 2 m TX IN jack of TV-502 to the X VERTER OUT jack of TS-520 using the supplied dual-pin plug cord.
- ④ Connect the GND terminal of TS-520 to the GND terminal of TV-502 using the supplied earth cable.

To prevent electric shock and to ensure stable operation, the earth cable must be connected between two units, though the units will operate without the connection.

- ⑤ Set the SG switch on the rear of TS-520 to the **OFF position** (down position).
- ⑥ Remove the HF antenna connected to TS-520.
- ⑦ Connect the 144 MHz antenna to the ANT terminal on the rear of TV-502. Be sure to use a coaxial cable of 50Ω impedance. VSWR should be less than "2". For mobile operation, use a whip type antenna (1/4λ or 5/8λ) with a coaxial cable of 3D-2V or 5D-2V type. The length of the coaxial cable should be kept as short as possible. For fixed station operation, it is recommended that a Yagi type beam antenna (with rotary actuator) be used for higher gain and better directivity. If the coaxial cable requires a length of more than 10 m, use 8D-2V or 10D-2V for the cable because it has low dissipation characteristic.
- ⑧ Confirm that the power switch and the standby switch of TS-520 are set in OFF and REC, respectively. Also, confirm that the power switch of TV-502 is OFF. Then, connect the AC power cord (or DC power cord for DC operation) to each unit.

NOTE: Set the operating power voltage to your local AC voltage with the voltage selector switch on the rear of TV-502. The unit is preset to AC 220 V at the factory before shipment.

Your TV-502 and TS-520 are now ready for operation.

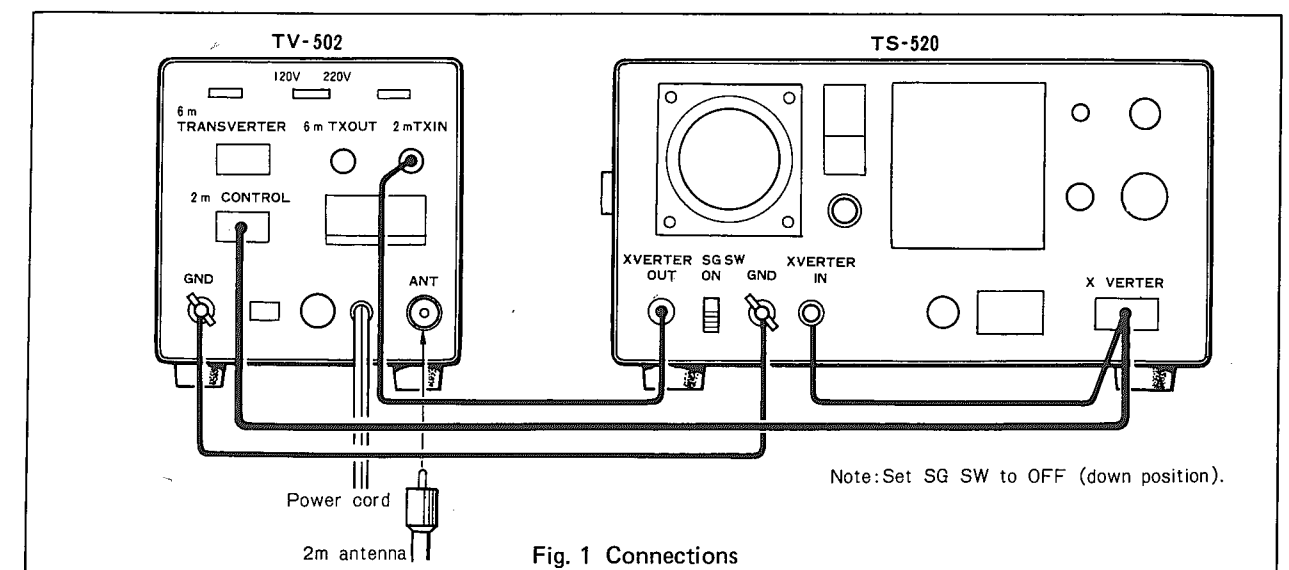


Fig. 1 Connections

SECTION 2. OPERATING CONTROL AND THEIR FUNCTION

2.1 FRONT PANEL (SEE FIG. 2)

- ① **POWER SWITCH**
Turns on and off AC or DC power supply. It functions on both TS-520 and TV-502.
- ② **BAND SWITCH**
Selects the band-width of 144 MHz or 145 MHz. For 145 ~ 146 MHz band operation, crystal elements for local oscillator are prepared as optional accessories.
- ③ **PRESELECTOR KNOB**
This is a tuning knob for helical resonator installed in the receiving antenna circuit. It should be normally set to the maximum receiving sensitivity.
- ④ **IF TUNE KNOB**
This is a tuning knob for IF frequency of 28.0 ~ 29.7 MHz. It should be set for maximum sensitivity or maximum ALC (ALC meter on TS-520).
- ⑤ **METER**
This is an RF transmitting output indicator. It is used to check the transmitting condition of TV-502.

2.2 REAR PANEL (SEE FIG. 3)

- ① **2 M CONTROL CONNECTOR**
A connector to connect TS-520 to TV-502. It is used for connections of various control sources such as receiving IF signal output, standby line, -100 V for blocking bias, etc.
- ② **6 M TRANSVERTER CONNECTOR**
This connector is used to connect TS-520 to TV-502 and 6 m (50 MHz) transverter (see Table 1).
- ③ **2 M TX IN JACK**
A pin-jack to feed transmitting IF signal to TV-502.
- ④ **6 M TX OUT JACK**
This jack is used to connect TS-520 to TV-502 and 6 m (50 MHz) transverter. By setting the power switch of TV-502 to OFF, the transmitting IF signal from TS-520 is obtained through the jack.
- ⑤ **ANT CONNECTOR**
Connect an antenna designed for 144 MHz band to this connector. The antenna system must be adjusted for less than "2" of VSWR. Note that if VSWR is higher than "2", the protection circuit for the transistors of the final stage of TV-502 is activated; in this case, expected performance cannot be obtained.
- ⑥ **AC-DC SELECTOR SWITCH**
Select the power supply. For AC operation, set the switch to AC position. For DC 13.8 V operation, first remove the switch stopper and then set the switch to DC position.

- ⑦ **2 M ONLY - 6 M CONNECT SELECTOR SWITCH**
When connecting TV-502 to 6 m transverter, set this switch to 6 m CONNECT position after removing the switch stopper.
- ⑧ **FUSE**
TV-502 is provided with a fuse rated at 0.5 A. When it is blown out, check the cause of it and replace it with the new one supplied.
- ⑨ **DC POWER CONNECTOR**
This connector is used for operating TV-502 on DC 13.8 V power. **Connect the supplied 2P plug making sure that the polarity is correct. A 3 A fuse must be connected to the "plus" side of the DC power cord.**
- ⑩ **POWER VOLTAGE SELECTOR SWITCH**
This switch selects the operating power voltage. The setting position of the switch should conform to your local power voltage. To change the setting position, the switch stopper must first be removed.
- ⑪ **GND TERMINAL**
TV-502 is grounded through this terminal. The supplied earth cable should be connected between this terminal and the GND terminal of TS-520.
- ⑫ **POWER CORD**
A power cord for AC power supply.

| Pin No. | Rating |
|---------|---|
| 1 | ALC |
| 2 | |
| 3 | 210V 10mA |
| 4 | GND (TV-502 ON) OPEN (TV-502 OFF) |
| 5 | -100V 5 mA |
| 6 | TRANSVERTER IN |
| 7 | TS-520 ANT |
| 8 | OPEN (TS-520 ON) GND (TS-520 in reception) |
| 9 | GND |
| 10 | TS-520 final screen grid |
| 11 | |
| 12 | GND |

TABLE 1 6M TRANSVERTER CONNECTOR TERMINALS RATING

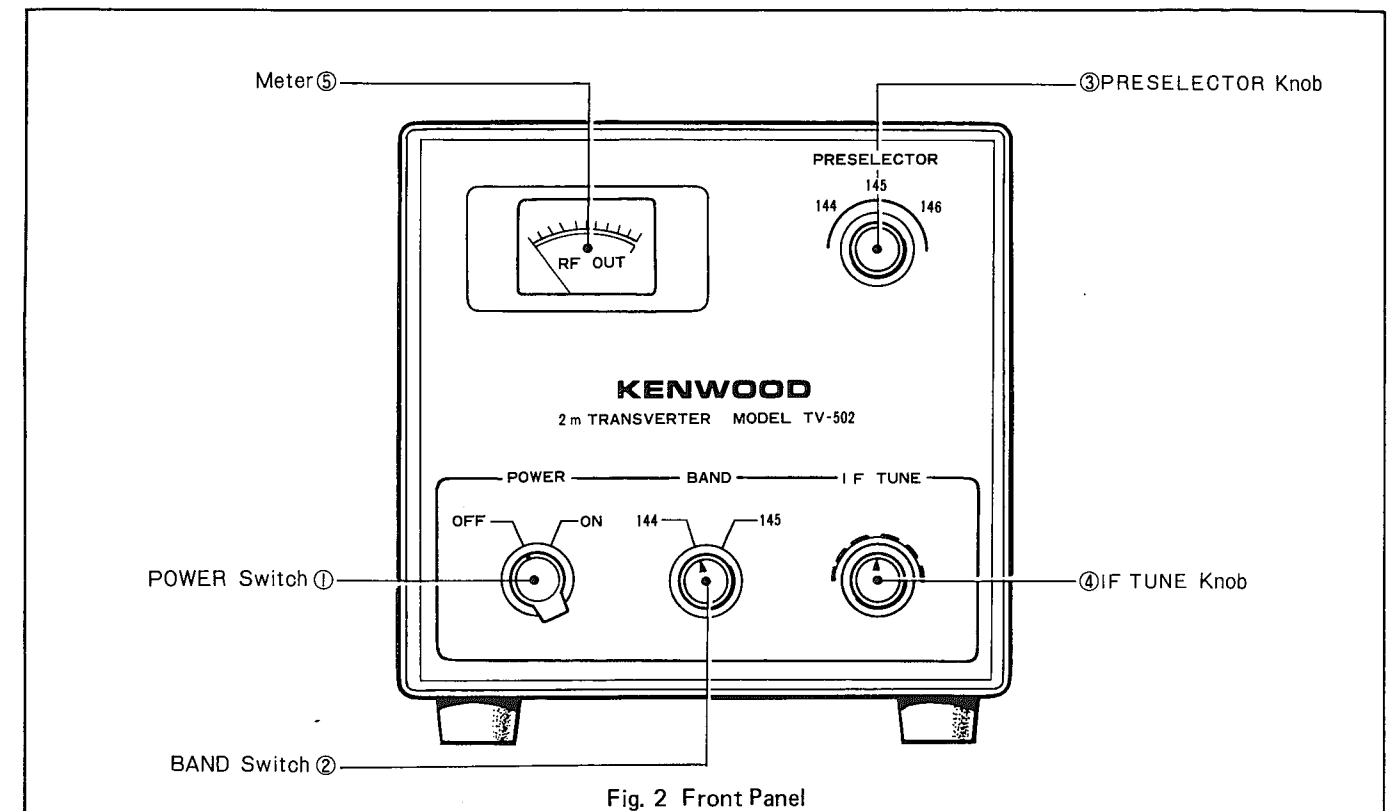


Fig. 2 Front Panel

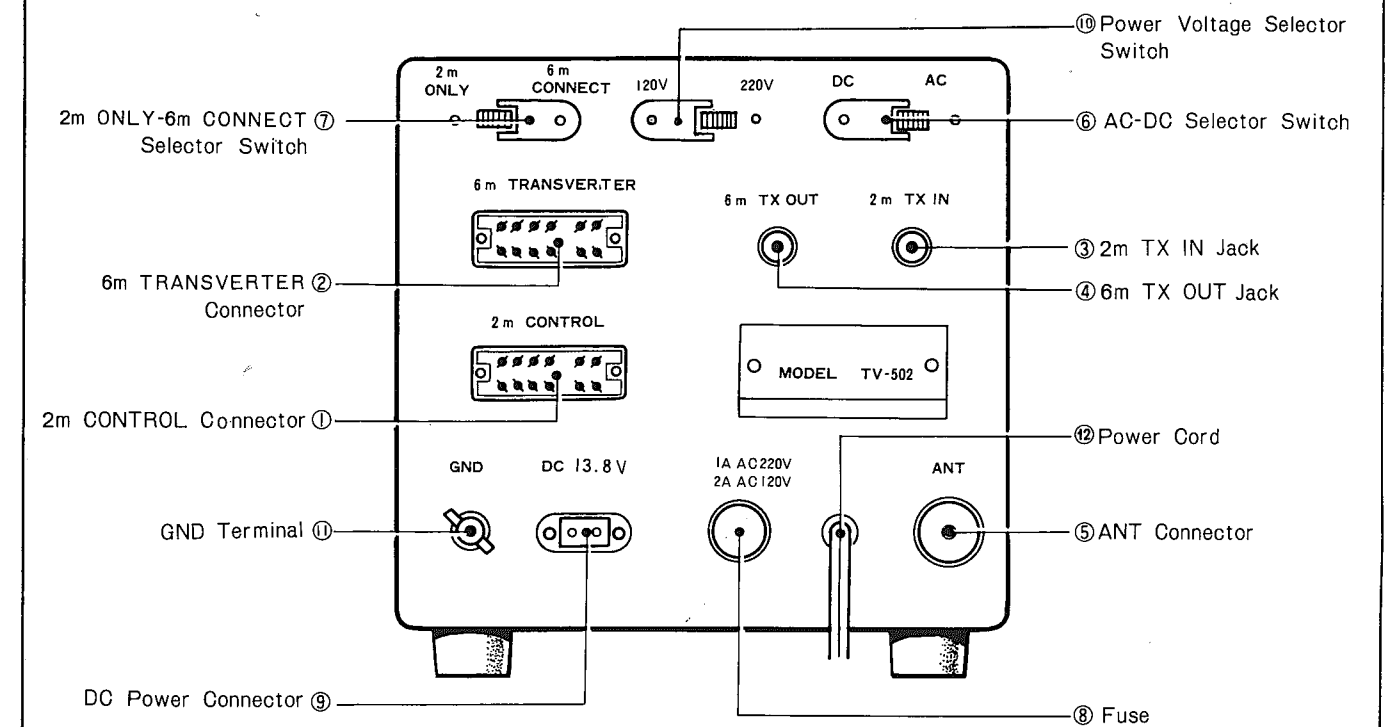


Fig. 3 Rear Panel

SECTION 3. OPERATION

3.1 RECEPTION

After the completion of connections between TV-502 and TS-520, set the control knobs of both units according to the instructions in Table 2 below.

| FRONT PANEL: TS-520 | |
|---------------------|--|
| POWER Switch | OFF |
| Standby Switch | REC |
| H.SW Switch | OFF (ON for DC operation) |
| VOX Switch | MAN. |
| NB Switch | OFF |
| AGC Switch | SLOW or FAST |
| MODE Switch | Desired receiving mode of CW or USB |
| JJY/WWV Switch | OFF |
| RIT Switch | OFF |
| BAND Switch | Desired receiving BAND of 28, 28.5 or 29.1 |
| FUNCTION Switch | VFO |
| AF GAIN Knob | Fully counterclockwise |
| RF GAIN Knob | Fully clockwise |
| DRIVE Knob | Center position |
| REAR PANEL: TS-520 | |
| SG Switch | OFF (down position) |
| ANT Terminal | Remove HF antenna |
| EXT VFO Jack | Confirm that 9PMT plug is inserted. |

| FRONT PANEL: TV-502 | |
|------------------------------------|--|
| POWER Switch | OFF |
| BAND Switch | 144 |
| IF TUNE Knob | Center position |
| PRESELECTOR Knob | Center position |
| REAR PANEL: TV-502 | |
| AC-DC Selector Switch | Set to AC or DC according to the type of operating power |
| 2m ONLY-6m CONNECT Selector Switch | 2m ONLY |

TABLE 2 PRELIMINARY SETTING FOR RECEPTION

When the above setting has been completed, turn on the POWER switches of TS-520 and TV-502. The pilot lamp of each unit will light up indicating that the unit is operating. Slowly turn AF GAIN knob of TS-520 clockwise and noise or signal will be heard through the speaker. Adjust the knob for suitable volume.

Next, slowly turn the main tuning knob of VFO and adjust it until the desired signal is heard most clearly.

Adjust the drive knob of TS-520, and the PRESELECTOR knob and IF TUNE knob of TV-502, until maximum sensitivity is obtained.

3.2 TRANSMISSION

Set the control knobs and switches of both units according to the instructions in Table 3 below. Ascertain that the **SG switch on the rear panel is set to OFF position** (down position).

| FRONT PANEL: TS-520 | |
|---------------------|--|
| POWER Switch | ON |
| Standby Switch | REC |
| H.SW Switch | ON |
| VOX Switch | MAN |
| NB Switch | OFF |
| AGC Switch | SLOW or FAST |
| MODE Switch | CW |
| JJY/WWV Switch | OFF |
| RIT Switch | OFF |
| BAND Switch | Desired BAND of 28, 28.5 or 29.1 |
| FUNCTION Switch | VFO |
| AF GAIN Knob | Adjust for suitable volume of receiving signal |
| RF GAIN Knob | Fully clockwise |
| DRIVE Knob | Center position |
| MIC Knob | Fully counterclockwise |
| CAR Knob | Center position |
| METER Switch | ALC |
| REAR PANEL: TS-520 | |
| SG Switch | OFF (down position) |
| ANT Terminal | Remove HF antenna |

| FRONT PANEL: TV-502 | |
|------------------------------------|--|
| POWER Switch | ON |
| BAND Switch | 144 |
| IF TUNE Knob | Center position (or maximum receiving Sensitivity) |
| PRESELECTOR Knob | Center position (or maximum receiving sensitivity) |
| REAR PANEL: TV-502 | |
| AC-DC Selector Switch | Set to AC or DC according to the type of operating power |
| 2m ONLY-6m CONNECT Selector Switch | 2m ONLY |

TABLE 3 PRELIMINARY SETTING FOR TRANSMISSION

For transmission, proceed as follows.

- ① Set the standby switch of TS-520 to SEND position. Then, turn the DRIVE knob for maximum deflection of ALC meter or of RF meter of TV-502.
- ② Turn the IF TUNE knob of TV-502 for maximum deflection of ALC meter of TS-520 or of RF meter of TV-502.
- ③ You are now ready for CW or SSB operation; for CW operation, connect the key to TS-520; for SSB operation, set the MODE switch to USB, connect the microphone and increase the MIC gain. Adjust the CAR knob (CW) or the MIC knob (SSB) so that the ALC level meter indication is within the ALC zone.
- ④ To receive incoming signals, simply set the standby switch to REC position.
- ⑤ The DRIVE knob of TS-520 and the IF TUNE knob of TV-502 may be adjusted in either transmitting mode or receiving mode. Once these knobs are adjusted, you are assured of optimum transmission and reception in the adjusted frequency.

3.3 READING THE OPERATING FREQUENCY


The operating frequency can be read on the dial of TS-520. To read the frequency, replace the figure of the frequency (MHz) of 28 MHz BAND read on TS-520 with "144" or "145" position of the BAND switch of TV-502 as shown in Fig. 4.

TV-502 uses 1.7 MHz frequency (28.0 ~ 29.7 MHz) band of TS-520 to facilitate the reading. Table 4 shows the relationship between the frequency and the band switch position.

During the operation, care should be taken so that the operating frequency is not deviated from the amateur band.

| TS-520 BAND | TV-502 BAND | Operating Frequency (MHz) |
|-------------|--------------|---------------------------|
| 28 | 144 | 144.0 ~ 144.5 |
| 28.5 | 144 | 144.5 ~ 145.1 |
| 29.1 | 144 | 145.1 ~ 145.7 |
| 28 | 145 (option) | 145.0 ~ 145.5 |
| 28.5 | 145 (option) | 145.5 ~ 146.0 |

TABLE 4 RELATIONSHIP BETWEEN BAND SWITCHES OF TS-520 AND TV-502

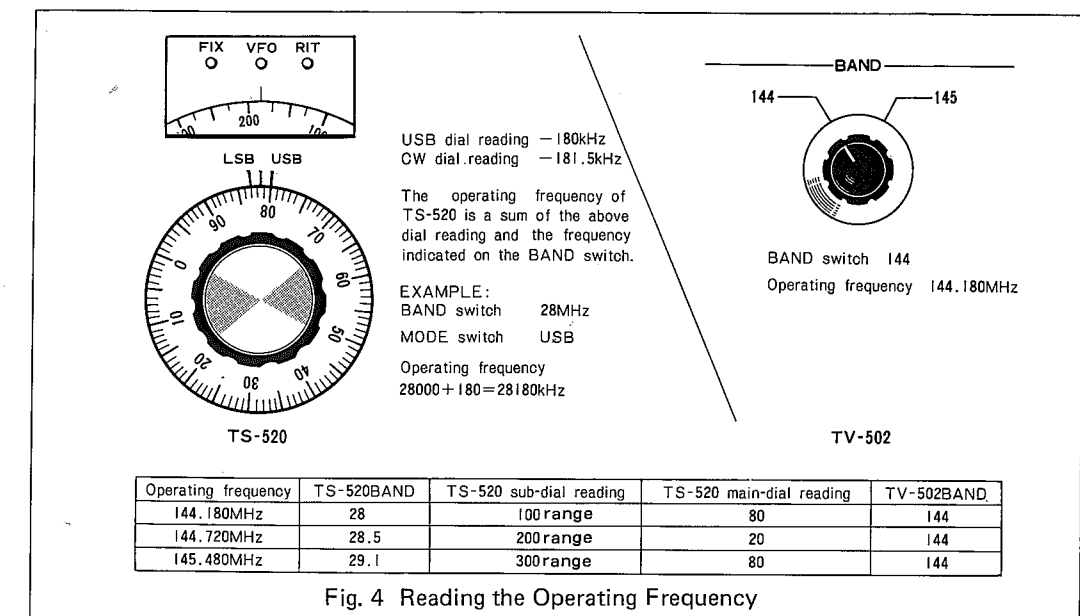

3.4 INSTALLATION OF HETERODYNE CRYSTAL

To operate TV-502 in 145.7 ~ 146.0 MHz band, a crystal element for local oscillator should be installed. The rating and installation location of the crystal element are shown in Fig. 5 and Fig. 6. After the installation, the frequency at the output terminal should be adjusted to 117.0 MHz with the ceramic trimmer TC2.

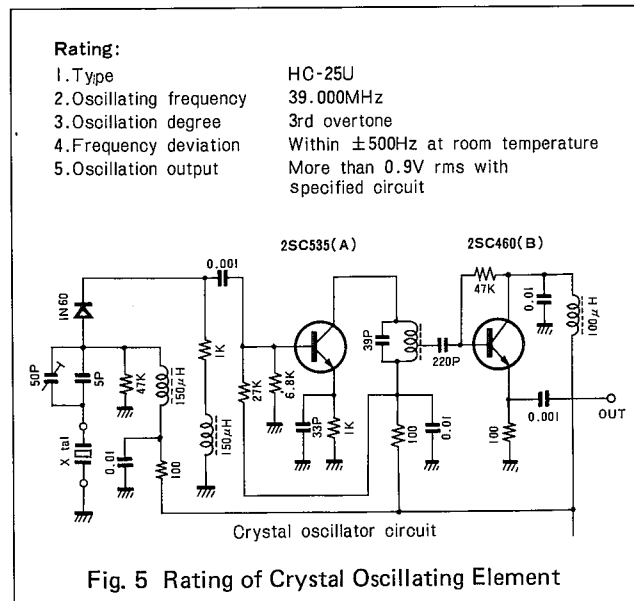


Fig. 5 Rating of Crystal Oscillating Element

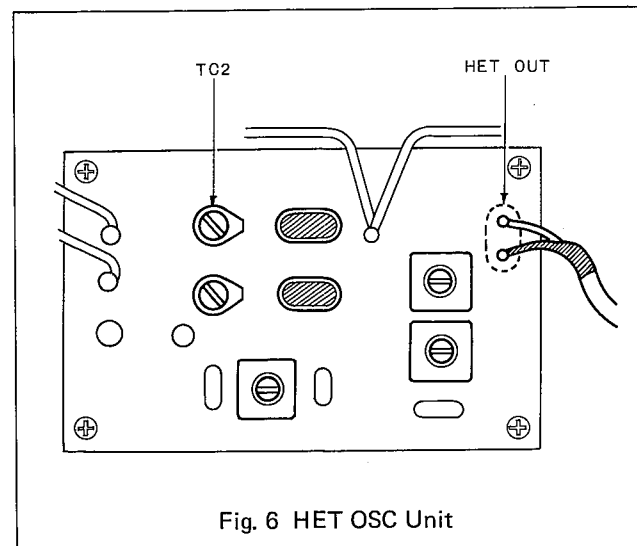


Fig. 6 HET OSC Unit

3.5 OPERATION IN HF BAND

TS-520 operates as VHF SSB or VHF CW transceiver when connected to TV-502.

If you desire to use it as a transceiver of HF band, turn the Power Switch of TV-502 to OFF and remove the pin plug connected to X VERTER IN Jack on the rear of TS-520 (the dual-pin plug cord connected to X VERTER OUT Jack and 12P X VERTER Connector may be left as they are); then, turn the SG Switch to ON (up position) and connect your HF antenna to the ANT Connector.

It is unnecessary to remove the connecting cable if the modification has been made as outlined under the paragraph 3.6.

3.6 HF/VHF CHANGEOVER

TS-520 operates as VHF SSB/CW transceiver with the aid of TV-502. Changeover between HF and VHF can be accomplished simply by manipulating the power switch of TV-502 if the modification mentioned below is made in TS-520.

When such modification is properly made, the SG switch (see table 2 and 3) on the rear panel may be left set in ON position and the HF antenna left connected for 2 m operation. This modification also permits the changeover between HF, 2 m and 6 m bands in a simple manner by connecting 6 m transverter to the 6 m TRANSVERTER connector of TV-502.

For the modification, proceed as follows.

- ① Remove the case of TS-520 by referring the item, "Page 38, Fig. 27 Removal of Case" in TS-520 Instruction Manual.
- ② Change the wiring of the X VERTER connector as shown in Fig. 7. Remove the shorting wires between No. 3 and No. 10 and between No. 6 and No. 7 of the X VERTER connector.

The above completes the modification of TS-520. Replace the case of TS-520.

NOTE: When performing the modification, ample care should be taken not to damage the parts and lead wires. When operating with TS-520 alone, be sure to insert the supplied 12P multi-connector shorting plug into the X VERTER connector.

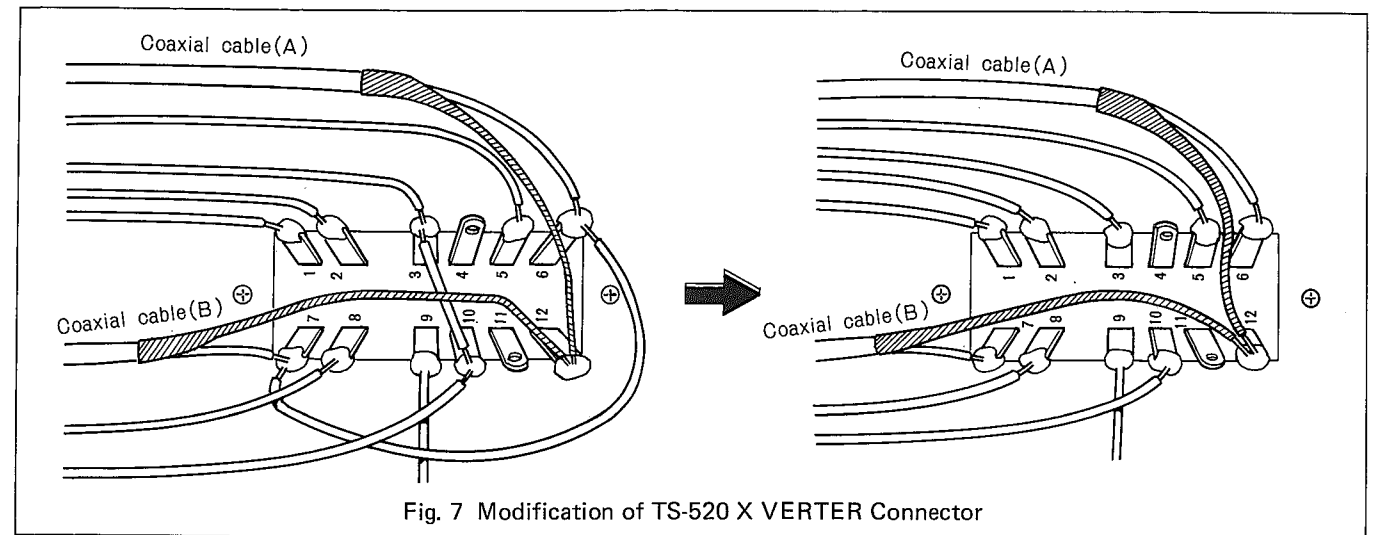


Fig. 7 Modification of TS-520 X VERTER Connector

TROUBLESHOOTING

| TROUBLE | CAUSE | REMEDY |
|---|---|---|
| Lamp remains OFF when power switch is ON. | a. Improper connection of AC plug to receptacle (AC operation). b. Improper connection of DC power connector (DC operation). c. Incorrect setting of AC-DC selector switch. d. Fuse blown out. | a. Connect AC plug firmly to receptacle. b. Connect firmly. c. Set the switch to the operating power supply. d. Replace fuse (if the fuse is blown out again after replacement, check the cause of trouble). |
| 144 MHz band signal is not received (antenna connection is normal). | a. Improper connection of control cable. b. Band switch is in 145 MHz position (145 MHz band crystal element is not installed). | a. Turn off the power switches of TS-520 and TV-502 and then connect the cable correctly. b. Set the band switch to 144 MHz position. |
| No transmitting output. | a. Improper connection of dual-pin cord. b. Heater switch of TS-520 is OFF. | a. Connect the cord firmly. b. Turn the heater switch to ON. |

TV-502 SPECIFICATION (Connected to TS-520)

Transmitting/receiving frequency: 144 ~ 145.7 MHz
 145.0 ~ 146.0 MHz (option)
Input/output IF frequency: 28.0 ~ 29.7 MHz
Type of emission: SSB (A3J)
 CW (A1)
Rated output: 8W (AC operation)
Antenna input/output impedance: 50 Ω
Unwanted radiation: less than -60 dB
Receiving sensitivity: more than 1 μ V at S/N 10 dB
Image ratio: more than 60 dB
IF rejection: more than 60 dB
Frequency stability: less than ± 2.5 kHz during 1 ~ 60 min after power switch is ON and within 150 Hz (per 30 min) thereafter.
Power consumption: AC 220/120 V
 Transmission 50W max
 Reception 12W max
 DC 13.8 V
 Transmission 2A max
 Reception 0.4A max
Power requirement: AC 220/120 V
 DC 12 ~ 16 V (standard voltage 13.8 V)

Semi-conductor: FET 5
 Transistor 15
 Diode 19
Dimensions: 6-9/16" (168 mm) wide x 5-15/16" (153 mm) high x 13-1/8" (336 mm) deep
Weight: 11.5 lbs. (5.2 kg)

FINAL TRANSISTOR SPECIFICATION

(2SC1242A ABSOLUTE MAX. RATINGS)

V_{CBO} : 35 V
 V_{CEO} : 18 V
 V_{EBO} : 3.5 V
 I_C : 4.5 A
 P_C : 30 W ($T_C = 25^\circ\text{C}$)
 T_j : 175 $^\circ\text{C}$
 T_{stg} : -65 ~ 175 $^\circ\text{C}$



Manufactured by TRIO ELECTRONICS, INC., Tokyo, Japan