

INSTRUCTION MANUAL

COBRA 29

**SOLID STATE CITIZENS BAND
2-WAY RADIO**



A PRODUCT OF

DYNASCAN CORPORATION

1801 WEST BELLE PLAINE AVENUE, CHICAGO, ILLINOIS 60613

INSTRUCTION MANUAL

FOR

COBRA 29 CITIZENS BAND SOLID STATE 2-WAY RADIO

COBRA 29

specifications

GENERAL

Channels:	23
Frequency Range:	26.965 to 27.255 MHz
Frequency Control:	Crystal synthesizer
Frequency Tolerance:	0.005%
Operating Temperature Range:	-20°C to +50°C
Microphone:	Plug-in type; dynamic
Input Voltage:	13.8 VDC nom. (Positive or negative ground)
Current Drain:	<i>Transmit:</i> AM full mod., 1.5A; <i>Receive:</i> Squelched, 0.3A; full audio output 1.2 A.
Size:	8½”L. x 6-7/8”W. x 2¼”H.
Weight:	5½ pounds.
Antenna Connector:	UHF, S0239
Semiconductors:	23 Transistors, 21 Diodes, 1 Integrated Circuit
Meter:	Illuminated, indicates relative power output and received signal strength.

TRANSMITTER

Power Input:	5 Watts
Modulation:	High and low level Class B amplitude modulation
Modulation Capability:	100% — Adjustable with DYNAMIKE microphone gain control

Frequency Response:	300 – 2500 Hz
Output Impedance:	50 Ohms, unbalanced
Output Indicators:	Meter shows relative RF output power, red lamp gives RF output indication, and green lamp shows modulation

RECEIVER

Sensitivity:	Less than $1\mu\text{V}$ for 10 dB (S+N) /N
Selectivity:	6 dB @ 4 kHz, 40 dB @ 20 kHz
Image Rejection:	30 dB
I.F. Frequencies:	Double conversion, 1st: 11.275 MHz 2nd: 455 kHz
Automatic Gain Control: (AGC)	Less than 10 dB change in audio output for inputs from 10 to 500,000 microvolts
RF Gain Control:	Adjustable for optimum signal reception
Noise Blanker:	RF type, with balanced diode gate
Delta Tune Range:	± 1.5 kHz continuously adjustable
Squelch:	Adjustable; threshold less than $1\mu\text{V}$
Audio Output Power:	2.5 Watts into 8 Ohms
Frequency Response:	300 – 3000 Hz
Distortion:	Less than 10% @ 2.5 Watts @ 1000 Hz
Built-in Speaker	8 Ohms, round
External Speaker: (Not Supplied)	8 Ohms; disables internal speaker when connected

PA SYSTEM

Power Output:	3 Watts into external speaker
External Speaker for PA: (Not Supplied)	8 Ohms; when PA-CB switch is in PA, the PA speaker also monitors the receiver, separate jack provided.

COBRA 29 instruction manual

introduction

The Cobra 29 has been designed to provide high level, trouble-free performance in the Citizens Radio Service which is comprised of the following assignments:

Channel	Channel Frequency in MHz	Channel	Channel Frequency in MHz
1	26.965	12	27.105
2	26.975	13	27.115
3	26.985	14	27.125
4	27.005	15	27.135
5	27.015	16	27.155
6	27.025	17	27.165
7	27.035	18	27.175
8	27.055	19	27.185
9	27.065	20	27.205
10	27.075	21	27.215
11	27.085	22	27.225
		23	27.255

To insure that you obtain the maximum performance from your Cobra 29 please read carefully the following control descriptions and operating instructions.

NOTE: These transceivers have been designed for use in Class "D" operation in the 11 meter Citizens Radio Service. They are designed to meet the Federal Communications Commission requirements applicable to equipment operating in Class "D" service, and are not to be used for any other purpose. Part 95 (formerly Part 19) of the F.C.C. regulations defines operation in this service, and you are required to read and understand these regulations prior to operating this equipment. Copies of Manual VI (covering the F.C.C. regulations for Amateur and Citizens Band Radio Service) include Part 95 and are available for \$3.50 from the Division of Public Documents, U.S. Government Printing Office, Washington, D.C. 20402. You also are required to submit a completed copy of F.C.C. Form 505 prior to operating this equipment on the air. **YOU WILL BE IN VIOLATION OF PART 95 OF THE REGULATIONS IF YOU OPERATE THIS EQUIPMENT ON THE AIR PRIOR TO RECEIVING YOUR LICENSE AND CALL SIGNS.**

Warning: Transmitter section adjustments must be performed by qualified technician holding a valid first or second class FCC radio telephone License.

section I

installation

Location

Plan the location of the transceiver and microphone bracket before starting the installation. Select a location that is convenient for operation and does not interfere with the driver or passengers in the vehicle. In automobiles, the transceiver is usually mounted to the underneath of the dash panel, with the microphone bracket beside it.

Mounting and Connection

The Cobra 29 is supplied with a universal mounting bracket. The transceiver is held in the bracket by four bolts, permitting adjustment at the most convenient angle.

The bracket must be mounted with the machine screws and the nuts supplied. The mounting must be mechanically strong and also provide a good electrical connection to the chassis of the vehicle. Proceed as follows to mount the transceiver.

1. After you have determined the most convenient location in your vehicle, hold the Cobra 29 with mounting bracket in the exact location desired. If nothing will interfere with mounting it in the desired position, remove the mounting bracket and use it as a template to mark the location for the mounting bolts. Before drilling the holes, make sure nothing will interfere with the installation of the mounting bolts.
2. Connect the antenna cable plug to the standard receptacle on the rear panel. Most CB antennas are terminated with a type PL-259 plug and mate with the receptacle.
3. Connect the DC power input wire with the fuse to +12V DC. This wire extends from the rear panel. In automobile installation, +12V DC is usually obtained from the accessory contact on the ignition switch. This prevents the set from being left on accidentally when the driver leaves the car and also permits operating the unit without the engine running. Locate the accessory contact on most ignition switches by tracing the power wire from the AM broadcast receiver in the car.

NOTE

In positive ground automobiles the red wire goes to the chassis and the black wire is connected to the ignition switch.

4. Connect the black leads to -12V DC. This is usually the chassis of the car. Any convenient location with good electrical contact (remove paint) may be used.
5. Mount the microphone bracket on the right side of the transceiver or near the transceiver, using two screws supplied. When mounting in an automobile, place the bracket under the dash so the microphone is readily accessible.

Ignition Noise Interference

Use of a mobile receiver at low signal levels is normally limited by the presence of electrical noise. The primary source of noise in automobile installations is from the generator and ignition system in the vehicle. Under most operating conditions, when signal level is adequate, the background noise does not present a serious problem. Also, when extremely low level signals are being received, the transceiver may be operated with vehicle engine turned off. The unit requires very little current and therefore will not significantly discharge the vehicle battery.

Even though the Cobra 29 has a selective automatic noise blanker and a selective automatic noise limiter, in some installations ignition interference may be high enough to make good communications impossible. The electrical noise may come from several sources. Many possibilities exist and variations between vehicles require different solutions to reduce the noise. Consult your COBRA dealer or a 2-way radio technician for help in locating and correcting the source of severe noise.

Antenna

Since the maximum allowable power output of the transmitter is limited by the FCC, the antenna is one important factor affecting transmission distance. Only a properly matched antenna system will allow maximum power transfer from the 50 Ohm transmission line to the radiating element. In mobile installations (cars, trucks, boats, etc.), an antenna system that is non-directional should be used.

A vertically polarized quarter-wavelength whip antenna provides the most reliable operation and greatest range. The shorter loaded-type whip antennas are

more attractive, compact and adequate for applications where the maximum possible distance is not required. Also the loaded whips do not present the problems of height imposed by the full quarter-wavelength whip.

Mobile whip antennas utilize the metal body of the vehicle as a ground plane. When mounted at a corner of the vehicle they are slightly directional, in the direction of the body of the vehicle. For all practical purposes, however, the radiation pattern is non-directional. The slight directional characteristic will be observed only at extreme distances. A standard antenna connector (Type SO-239) is provided on the transceiver for easy connection to a standard PL-259 cable termination.

If the transceiver is not mounted on a metal surface, it is necessary to run a separate ground wire from the unit to a good metal electrical ground in the vehicle. When installed in a boat, the transceiver will not operate at maximum efficiency without a ground plate, unless the vessel has a steel hull.

Before installing the transceiver in a boat, consult your dealer for information regarding an adequate grounding system and prevention of electrolysis between fittings in the hull and water.

Base Station Operation (Operation from 110-120V AC, house current)

To operate your transceiver from your home or office, using the regular house current as the power source, you will require a separate power supply capable of supplying two amps at a 13.8 volt DC output with a nominal input voltage of 120 volts AC, 50/60 Hz. Simply connect the red (+) and black (-) leads of the transceiver to the corresponding terminals of the AC power supply.

NOTE

Do not attempt to operate this transceiver by connecting directly to 110 Volts AC. When an AC power supply is used with the transceiver for base station operation, any Citizens Band beam, dipole, ground plane or vertical antenna may be used. A ground plane vertical antenna will provide the most uniform horizontal coverage.

Remote Speaker

The external speaker jack (EXT. SPKR) on the rear panel is used for remote receiver monitoring. The external speaker should have 8 Ohms impedance and be able to handle at least 3 watts. When the external speaker is plugged in, the internal speaker is disconnected.


Public Address

An external 8 Ohm, 3 watt speaker must be connected to the PA SPKR. jack located on the rear panel when the transceiver is used as a public address system. The speaker should be directed away from the microphone to prevent acoustic feedback. Physical separation or isolation of the microphone and speaker is important when operating the PA at high output levels.

section II operation

CONTROLS AND INDICATORS

There are nine controls and three indicators on the front panel of your Cobra 29.

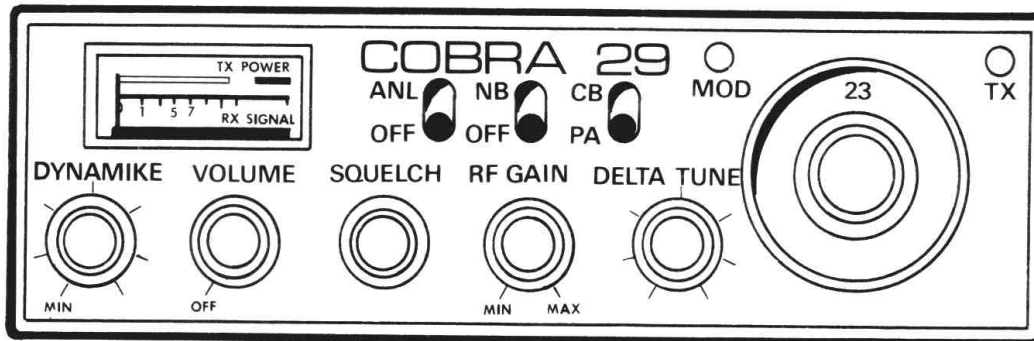

A. CONTROL FUNCTIONS

1. **DYNAMIKE.** This control is used to vary the amount of modulation in transmit. In the public address function the control functions as the volume control.
2. **OFF/ON/VOLUME.** Turn clockwise to apply power to the unit and to set the desired listening level.
3. **SQUELCH.** This control is used to cut off or eliminate receiver background noise in the absence of an incoming signal. For maximum receiver sensitivity it is desired that the control be adjusted only to the point where the receiver background noise or ambient background noise is eliminated. Turn fully counterclockwise then slowly clockwise until the receiver noise disappears. Any signal to be received must now be slightly stronger than the average received noise. Further clockwise rotation will increase the threshold level which a signal must overcome in order to be heard. Only strong signals will be heard at a maximum clockwise setting.
4. **RF GAIN.** Adjust as required to optimize signal. This control is used primarily to optimize reception in strong signal areas. Gain is reduced by counterclockwise rotation of the control.
5. **DELTA-TUNE.** For normal operation set the control to the center position. This feature has several uses and can greatly enhance receiver operation. First, if a received signal is slightly off frequency, the

Delta-Tune control can be operated as required to optimize the received signal level.

The effectiveness of the Delta-Tune feature under these conditions can be observed either by listening for a more readable signal at the speaker or by noting the S-meter reading when the Delta-Tune control is operated. Another effective application of this control is in eliminating adjacent channel interference. If it is verified that an exceptionally high level signal from an adjacent channel is creating interference on the channel being used, the Delta-Tune can be used to minimize or eliminate the interference. Operate the control as required to obtain minimum adjacent channel interference.

6. **CHANNEL SELECTOR.** This switch selects any one of the twenty-three Citizens Band channels desired. The selected channel is illuminated in the circle portion of the Channel Selector dial directly above the Channel Selector knob. Channels 10 thru 15 and 23 may be used for communications between stations operating under the same license. Channel 9 has been reserved by the FCC for emergency communications involving the immediate safety of life of individuals or immediate protection of property. Channel 9 may also be used to render assistance to a motorist.
7. **ANL SWITCH.** In the ANL position the automatic noise limiter in the audio circuits is activated.
8. **NB SWITCH.** When the switch is placed in the NB position the RF noise blanker is activated. The RF noise blanker is very effective for repetitive impulse noise such as ignition interference.
9. **PA-CB SWITCH.** Selects the mode of operation. The PA function should not be used unless an external speaker is connected as described in INSTALLATION SECTION of this manual. In the CB position, the PA function is disabled and the unit will transmit and receive on the selected frequency.

B. INDICATORS

1. **PWR/S METER.** Shows relative transmitter power when transmitting and input signal strength when receiving. Illuminated when power is on.
2. **MOD LIGHT.** In transmit this green light flashes at the modulation rate. The brightness of the light is proportional to the percent of modulation.
3. **TX LIGHT.** The red light located to the right of the channel selector is an output indicator device which is activated when the transmitter is keyed.

C. PRESS-TO-TALK MICROPHONE.

The receiver and transmitter are controlled by the press-to-talk switch on the microphone. Press the switch and the transmitter is activated; release switch to receive. When transmitting, hold the microphone two inches from the mouth and speak clearly in a normal voice. The radio comes complete with the low impedance dynamic microphone. The microphone connector is located on the left side of the units case.

D. OPERATING PROCEDURE TO RECEIVE

1. Place CB-PA switch in CB position and advance RF GAIN control fully clockwise.
2. Turn the set ON by turning the VOLUME control clockwise, until a click is heard.

NOTE: Microphone must be plugged in for receiver to operate.

3. Set the VOLUME for a comfortable listening level.
4. Listen to the background noise from the speaker. Turn the SQUELCH control slowly clockwise, until the noise just disappears. (No signal should be present.) Leave the control at this setting. The SQUELCH is now properly adjusted. The receiver will remain quiet until a signal is actually received. Do not advance the control too far, or some of the weaker signals will not be heard.
5. Set the CHANNEL selector switch to the desired channel.

E. OPERATING PROCEDURE TO TRANSMIT

1. Select the desired channel of transmission.
2. If the channel is clear, depress the push-to-talk switch on the microphone and speak in a normal voice. The output lamp will light, indicating proportional output power.

F. ACCESSORY CIRCUIT OPERATION.

1. **ANL OPERATING.** Slide the ANL switch to ANL position. It activates the noise reduction circuits of the automatic noise limiter.
2. **NB OPERATING.** If excessive ignition noise interference is present, activate the noise blacker circuitry by placing the NB switch to the NB position.
3. **RF GAIN.** If the signal is very strong reduce the RF gain by moving the SSB RF gain control counterclockwise to optimize the quality of the

received signal. Note that the SQUELCH control may require some readjustment with reduced RF Gain.

- 4. PUBLIC ADDRESS (PA) OPERATION.** To use this feature, a speaker having a voice coil impedance of 8 Ohms and a power handling capability of at least three watts should be used. Connect speaker to PA SPKR. jack on rear panel.

Complete elimination of outside signals can be obtained by disconnecting the antenna cable from the transceiver. With the PA speaker connected, be sure that there is physical separation between the microphone and the speaker itself. If the speaker is located close to the microphone, acoustic feedback will result when the public address system is operated at high volume.

section III

maintenance and adjustment

The Transceiver is specifically designed for the environment encountered in mobile installations. The use of all solid state circuitry and its light weight result in high reliability. Should a failure occur, however, replace parts only with identical parts. Do not substitute. Refer to the schematic diagram and parts list.

WARNING

Federal law requires that adjustment of the radio frequency section of this transceiver may not be made by a citizens band operator. Only a United States licensed first or second class commercial license holder may tune the transmitter sections of this transceiver, FCC part 95D section 95.97d.

ADJUSTMENT

The transceiver is factory aligned and should not require any adjustments when used with a 50 Ohm antenna. If an antenna other than 50 Ohms impedance is used, adjustment of the transmitter output circuit may be made to obtain optimum power transfer to the antenna. This adjustment should be made only by qualified personnel using a high quality in-line r-f wattmeter which will not produce standing waves when inserted in the antenna cable.

NOTE: If the performance described in the OPERATION and MAINTENANCE AND ADJUSTMENT sections is not obtained, review the operating instructions to insure that proper procedures were followed. If a problem still exists, refer to WARRANTY SERVICE INSTRUCTIONS on the last page of this manual.

PARTS LIST FOR COBRA 29

CIRCUIT SYMBOL	DESCRIPTION	DYNASCAN PART NO.
TRANSISTORS, DIODES		
TR-1,2	Transistor 2SC394 (Y).....	176-042-9-001
TR-3,4,5,6,7,8,9, 16,17,21	Transistor 2SC372 (O).....	176-042-9-002
TR-10	Transistor 2SC373.....	176-025-9-001
TR-11,12	Transistor 2SC372 (Y).....	176-042-9-003
TR-13,23	Transistor 2SC733 (Y).....	176-042-9-004
TR-14,15	Transistor 2SC1096 (Y) :.....	
TR-18	Transistor 2SC735 (O).....	176-042-9-006
TR-19	Transistor 2SC1226A (P).....	176-042-9-005
TR-20	Transistor 2SC756-2-4.....	172-014-9-002
TR-22	Transistor 2SC495 (Y).....	177-006-9-001
IC	Integrated Circuit TA7061AP.....	307-007-9-002
D-1,3,4,9,15,21	Diode WG713.....	
D-13,15	Diode CD-37.....	151-040-9-002
D-5,10,11,12,18, 19,24,2	Diode 1N-60.....	150-001-9-005
D-6,7	Diode 1N60P.....	
D-16,20	Diode SR1K-1.....	151-040-9-003
D-8	Diode 1S2688E (Variable).....	
D-17	Zener Diode CZ-092.....	152-051-9-001
D-14	Varistor MV-1.....	

COILS, TRANSFORMERS

L-1	Coil TC-71096 14 MHz Trap (LD-018) .. .	041-056-9-001
L-2,6,9,14	Micro Inductor LF4-2R2K.....	041-061-9-001
L-3	Micro Inductor LF4-6R8K.....	041-061-9-002
L-4	Coil TC-71095 Power RF Choke (LD-017).....	042-011-9-001
L-5	Coil 115C Line Filter Choke (TF-017).....	044-028-9-006
L-7	Coil TC-71026 TX Pre-Driver (LC-020).....	044-028-9-005
L-8	Coil TC-71023 TX Driver (LC-017).....	044-028-9-004
L-10	Coil TC-71029 TX Final (LD-012).....	044-028-9-003
L-11	Coil TC-71025 TX Matching (LC-019).....	044-028-9-002
L-12	Coil NS-1344 Antenna Filter (LE-006).....	044-028-9-001
L-13	Coil TC-71024 TVI Trap C (LC-018).....	041-056-9-003
T-1	Coil TKXN-22160BU RX Antenna (LA-029).....	066-017-9-001
T-2	Coil TKXC-22534BU RX RF Amp (LA-041).....	066-017-9-002
T-3	Coil TKXC-23169F 23 MHz OSC (LA-046).....	066-017-9-003
T-4,5	Coil TKXC-23170Z 38 MHz Filter (LA-047).....	066-017-9-004

**CIRCUIT
SYMBOL**

DESCRIPTION

**DYNASCAN
PART NO.**

COILS, TRANSFORMERS (Continued)

T-6	Coil TKXC-22535BM 38 MHz Filter	(LA-042)	066-017-9-005
T-7	Coil TKAC-22536IE 1st IF	(LA-043)	060-016-9-001
T-8	Coil TKAC-21165A 1st IF	(LA-019)	060-016-9-002
T-9	Coil RLN-40479N 2nd IF	(LA-078)	060-017-9-001
T-10	Coil RLN-40480N 2nd IF	(LA-079)	060-017-9-002
T-11	Coil YMC-20845AC 2nd IF	(LA-039)	060-016-9-004
T-12	Coil YMC-20846AC 2nd IF	(LA-040)	060-016-9-005
T-13	Trans. 69 M AF Input	(TF-011)	061-022-9-001
T-14	Trans. N28-7518BM AF Output	(TF-038)	061-022-9-002
T-15,16	Coil KXN-13638HM TX 27 MHz Filter	(LA-009)	066-017-9-006
T-17	Coil KXN-13636BM TX 27 MHz Filter	(LA-008)	066-017-9-007
T-18	Trans. 14299A RF	(LA-077)	066-018-9-001
T-19	Trans. 20979A RF Amo.	(LA-060)	066-018-9-002

CRYSTALS

X-1	Crystal 23.290 MHz HC-25/U	133-004-9-001
X-2	Crystal 23.340 MHz HC-25/U	133-004-9-002
X-3	Crystal 23.390 MHz HC-25/U	133-004-9-003
X-4	Crystal 23.440 MHz HC-25/U	133-004-9-004
X-5	Crystal 23.490 MHz HC-25/U	133-004-9-005
X-6	Crystal 23.540 MHz HC-25/U	133-004-9-006
X-7	Crystal 14.950 MHz HC-25/U	133-004-9-007
X-8	Crystal 14.960 MHz HC-25/U	133-004-9-008
X-9	Crystal 14.970 MHz HC-25/U	133-004-9-009
X-10	Crystal 14.990 MHz HC-25/U	133-004-9-010
X-11	Crystal 11.275 MHz HC-25/U	133-004-9-011
X-12	Crystal 11.730 MHz HC-25/U	133-004-9-012

RESISTORS, CONTROLS

VR-1,5	Variable Resistor 50 K (B).....	008-187-9-003
VR-3	Variable Resistor 20 K (B).....	008-158-9-006
VR-7	Variable Resistor 10K (A) w/Switch	008-187-9-001
VR-12	Variable Resistor 10 K (A)	008-187-9-002
VR-2	Semi-fixed Resistor 50 K 3P 6BM	008-205-9-001
VR-4	Semi-fixed Resistor 50 K 2P 6BM	008-187-9-004
VR-6	Semi-fixed Resistor 30 K 2P 6BM	008-187-9-005
VR-9,10	Semi-fixed Resistor 20 K 2P 6BM	008-187-9-006
R-81	Carbon 47 ohm ¼W ELR	

CIRCUIT
SYMBOL

DESCRIPTION

DYNASCAN
PART NO.

RESISTORS, CONTROLS (Continued)

R-4,86,94,14	Carbon 56 ohm $\frac{1}{4}$ W ELR	002-104-5-560
R-68,84,31	Carbon 68 ohm $\frac{1}{4}$ W ELR	002-104-5-680
R-12,18,21, 65,78	Carbon 100 ohm PW ELR.....	002-104-5-101
R-9,24,66	Carbon 150 ohm $\frac{1}{4}$ W ELR	002-104-5-151
R-6,17,32,74,77, 97	Carbon 220 ohm $\frac{1}{4}$ W ELR	002-104-5-221
R-3,85	Carbon 330 ohm $\frac{1}{4}$ W ELR	002-104-5-331
R-60	Carbon 470 ohm $\frac{1}{4}$ W ELR	
R-37,40	Carbon 680 ohm $\frac{1}{4}$ W ELR	002-104-5-681
R-8,13,23,34,54, 67	Carbon 1K ohm $\frac{1}{4}$ W ELR	002-104-5-102
R-56	Carbon 1.5K ohm $\frac{1}{4}$ W ELR	002-104-5-152
R-2	Carbon 2.2K ohm $\frac{1}{4}$ W ELR	002-104-5-222
R-35,98	Carbon 2.7K ohm $\frac{1}{4}$ W ELR	
R-1,83,99	Carbon 3.3K ohm $\frac{1}{4}$ W ELR.....	
R-50,53	Carbon 3.9K ohm $\frac{1}{4}$ W ELR	002-104-5-392
R-51,55,57	Carbon 4.7K $\frac{1}{4}$ W ELR ohm	002-104-5-472
R-17,11,16,38, 61,62,76,93	Carbon 5.6K ohm $\frac{1}{4}$ W ELR	002-104-5-562
R-41	Carbon 6.8K ohm $\frac{1}{4}$ W ELR	002-104-5-682
R-5,19,80,88, 89	Carbon 10K ohm $\frac{1}{4}$ W ELR	002-104-5-103
R-15,75	Carbon 15K ohm $\frac{1}{2}$ W ELR	002-104-5-153
R-42,52,58,64,82	Carbon 22K ohm $\frac{1}{2}$ W ELR	002-104-5-223
R-36	Carbon 27K ohm $\frac{1}{2}$ W ELR	002-104-5-273
R-10,44,39	Carbon 33K $\frac{1}{2}$ W ELR	002-104-5-333
R-43,29	Carbon 39K $\frac{1}{2}$ W ELR	002-104-5-393
R-20,79,49	Carbon 47K $\frac{1}{2}$ W ELR	002-104-5-473
R-25,90	Carbon 82K ohm $\frac{1}{2}$ W ELR	
R-30,45,46,48	Carbon 100K $\frac{1}{2}$ W ELR	002-104-5-104
R-63	Carbon 220K ohm $\frac{1}{2}$ W ELR.....	002-104-5-224
R-26,28,47	Carbon 470K ohm $\frac{1}{2}$ W ELR.....	002-104-5-474
R-91	Carbon 820 ohm $\frac{1}{4}$ W ELR	
R-59	Carbon 220 ohm $\frac{1}{4}$ W R.....	
R-92	Carbon 120 ohm $\frac{1}{4}$ W ELR	
R-73	Carbon 1K ohm $\frac{1}{4}$ W R	
R-22	Carbon 6.8K $\frac{1}{4}$ W R	
R-72	Solid 56 ohm $\frac{1}{2}$ W	
R-33	Solid 220 ohm $\frac{1}{2}$ W	
R-87	Solid 1K ohm $\frac{1}{2}$ W	001-102-6-101

CIRCUIT
SYMBOL

DESCRIPTION

DYNASCAN
PART NO.

RESISTORS, CONTROLS (Continued)

R-70	Solid 47 ohm ½W	
R-69	Metalized 0.5 ohm ½W	044-123-9-001
R-71	Metalized 12 ohm 2W.....	004-138-9-001

CAPACITORS

C-12	Ceramic 1pF 50V	020-109-9-001
C-22,24,78	Ceramic 2pF 50V	020-109-9-007
C-5,25,38,84	Ceramic 3pF 50V	020-109-9-003
C-15,87,109	Ceramic 5pF 50V	020-109-9-010
C-35,136	Ceramic 10pF 50V	020-109-9-012
C-83	Ceramic 25pF 50V	020-109-9-015
C-1,104	Ceramic 33pF 50V	020-125-9-001
C-114, 200	Ceramic 40pF 50V	020-125-9-002
C-21,82,90,110	Ceramic 47pF 50V	020-109-9-011
C-34	Ceramic 90pF 50V	020-125-9-003
C-14,33	Ceramic 91pF 50V	
C-43,85,91,101, 111,124,95	Ceramic 100pF 50V	020-109-9-008
C-9,88,94	Ceramic 150pF 50V	020-109-9-004
C-18,80,108	Ceramic 220pF 50V.....	020-109-9-013
C-102	Ceramic 250pF 50V.....	020-125-9-005
C-17,79,121,122	Ceramic 470pF 50V.....	020-109-9-014
C-2	Ceramic 0.001µF 50V	020-125-9-006
C-132	Ceramic 8pF 50V	
C-45	Ceramic 0.002µF 50V	020-125-9-007
C-31,32,52,60,70, 115,116,117, 118	Ceramic 0.005 µF 50V	020-109-9-009
C-77	Ceramic 0.1µF 50V	020-109-9-016
C-3,4,6,7,10,13,19, 20,23,36,44,59, 73,75,76,81,86, 92,89,103,106, 134,137,140	Ceramic 0.01µF 50V	020-109-9-002
C-11,29,39,93,96,98, 99,100,105,107, 112	Ceramic 0.04µF 50V	020-109-9-005
C-135	Ceramic 0.0047µF 50V	
C-28,30	Ceramic 0.001µF SCP-60 50V	020-125-9-008
C-69,128	Electrolytic 10µF 16V	022-120-9-001

CIRCUIT SYMBOL	DESCRIPTION	DYNASCAN PART NO.
----------------	-------------	-------------------

CAPACITORS (Continued)

C-138	Electrolytic 2.2 μ F 25V	
C-47,48,49,51,129 .130	Electrolytic 1 μ F 16V.....	022-099-9-003
C-46,50,54,56	Electrolytic 10 μ F 10V	022-099-9-002
C-42	Electrolytic 47 μ F 10V	022-120-9-002
C-119	Electrolytic 47 μ F 16V	022-120-9-003
C-53,63,58	Electrolytic 100 μ F +100-10%, 10V	022-099-9-004
C-64	Electrolytic 100 μ F 16V	022-120-9-004
C-74	Electrolytic 470 μ F 16V.....	022-099-9-006
C-57	Mylar 0.0022 μ F 50V	
C-8,26,27,40	Mylar 0.01 μ F 50V.....	025-087-9-001
C-120,65,66	Mylar 0.02 μ F 50V.....	025-087-9-002
C-37,41	Mylar 0.04 μ F 50V.....	025-074-9-001
C-55,61,58	Mylar 0.1 μ F 50V	025-074-9-002
C-71,72	Mylar 0.47 μ F 50V.....	

SWITCHES

S-4.5	Slide Switch SL-2-2-2-14	084-031-9-001
S-2	Rotary Switch 1-2-24 (4S32C000-A)	083-143-9-001
S-3	Slide Switch SL-3-3-2-03	

MISCELLANEOUS

	Crystal Socket S-D0105.....	749-709-9-001
	M-R type Antenna Connector	772-025-9-001
	Microphone Plug SM-144 (4-P).....	775-022-9-001
	Microphone Jack SM-144 (4-P).....	773-045-9-001
	Speaker 10P03S 8 ohm 2-W	580-013-9-001
M-	Meter type A-39 S31EA563	320-051-9-001
MIKE	Microphone 22-115-45	562-006-9-001
	Microphone Hanger 12-42438-01.....	741-074-9-001
	Fuse Holder RF-104.....	742-018-9-001
	Fuse 1.5 Amp	191-002-9-001

NOTE : Minimum charge \$2.00 per invoice Orders will be shipped C.O.D. unless previous open account arrangements have been made or remittance accompanies order. Advance remittance must cover postage or express charge.

Specify serial number when ordering replacement parts

**CIRCUIT
SYMBOL**

DESCRIPTION

**DYNASCAN
PART NO.**


MISCELLANEOUS (Continued)

	Cord Stopper BU-3270	380-205-9-001
TP-3,4	Check Terminal T-41	757-011-9-001
TP-3,4	Check Terminal N-60	757-011-9-002
TR-1,2,5	Pin Terminal 1.5mm.....	757-014-9-001
J-3,4	Jack SJ-296 3.5mm.....	773-045-9-002
PL-1	Pilot Lamp 14V/50mA (red).....	400-032-9-001
PL-2	Pilot Lamp 14V/50mA (white).....	400-032-9-002
PL-3	Pilot Lamp 14V/50mA (clear)	400-032-9-003
PL-4	Pilot Lamp 4.6V/30mA (clear)	400-032-9-004
CF	Ceramic Filter LF-B6	140-009-9-001
	Metal Chassis M2-02286	257-056-9-001
	Metal Cabinet (top) M2-02287	253-033-9-001
	Metal Cabinet (bottom) M2-02288	252-012-9-001
	Mounting Bracket M3-02289	250-044-9-001
	Heat Sink (aluminum) M4-00844 (Audio).....	747-026-9-001
	Heat Sink (aluminum) M4-00344 (Transmitter)	747-026-9-002
	Front Panel (ABS) M2-02285	255-113-9-001
	Channel Knob (ABS) M4-01727.....	751-095-9-001
	Volume Knob (ABS) M4-01958	751-106-9-002
	Channel Dial (acryl) M4-01957	380-176-9-002
	Lamp Grille (acryl) M4-01308 red	750-007-9-002
	Lamp Grille (acryl) M4-01497 green	750-007-9-001
	Screw for Bracket M4-00238.....	634-044-9-001
	Front Plate M4-02290.....	260-044-9-001
	Microphone Plate M4-01960	600-018-9-001
	FCC Plate	600-018-9-002
	Lighting Board M4-00840	769-073-9-001
	Lamp Holder (rubber) M4-00601.....	381-055-9-001
	Instruction Booklet	480-140-9-001
	Schematic & Parts List (Composite).....	499-057-9-001
	FCC Application Form.....	492-041-9-001
	Styrofoam Box	503-069-9-001
	Display Box	500-226-9-001
	P.C. Board	302-151-9-001

COMPOSITE

499-057-9-001

CIRCUIT DIAGRAM FOR COBRA 29

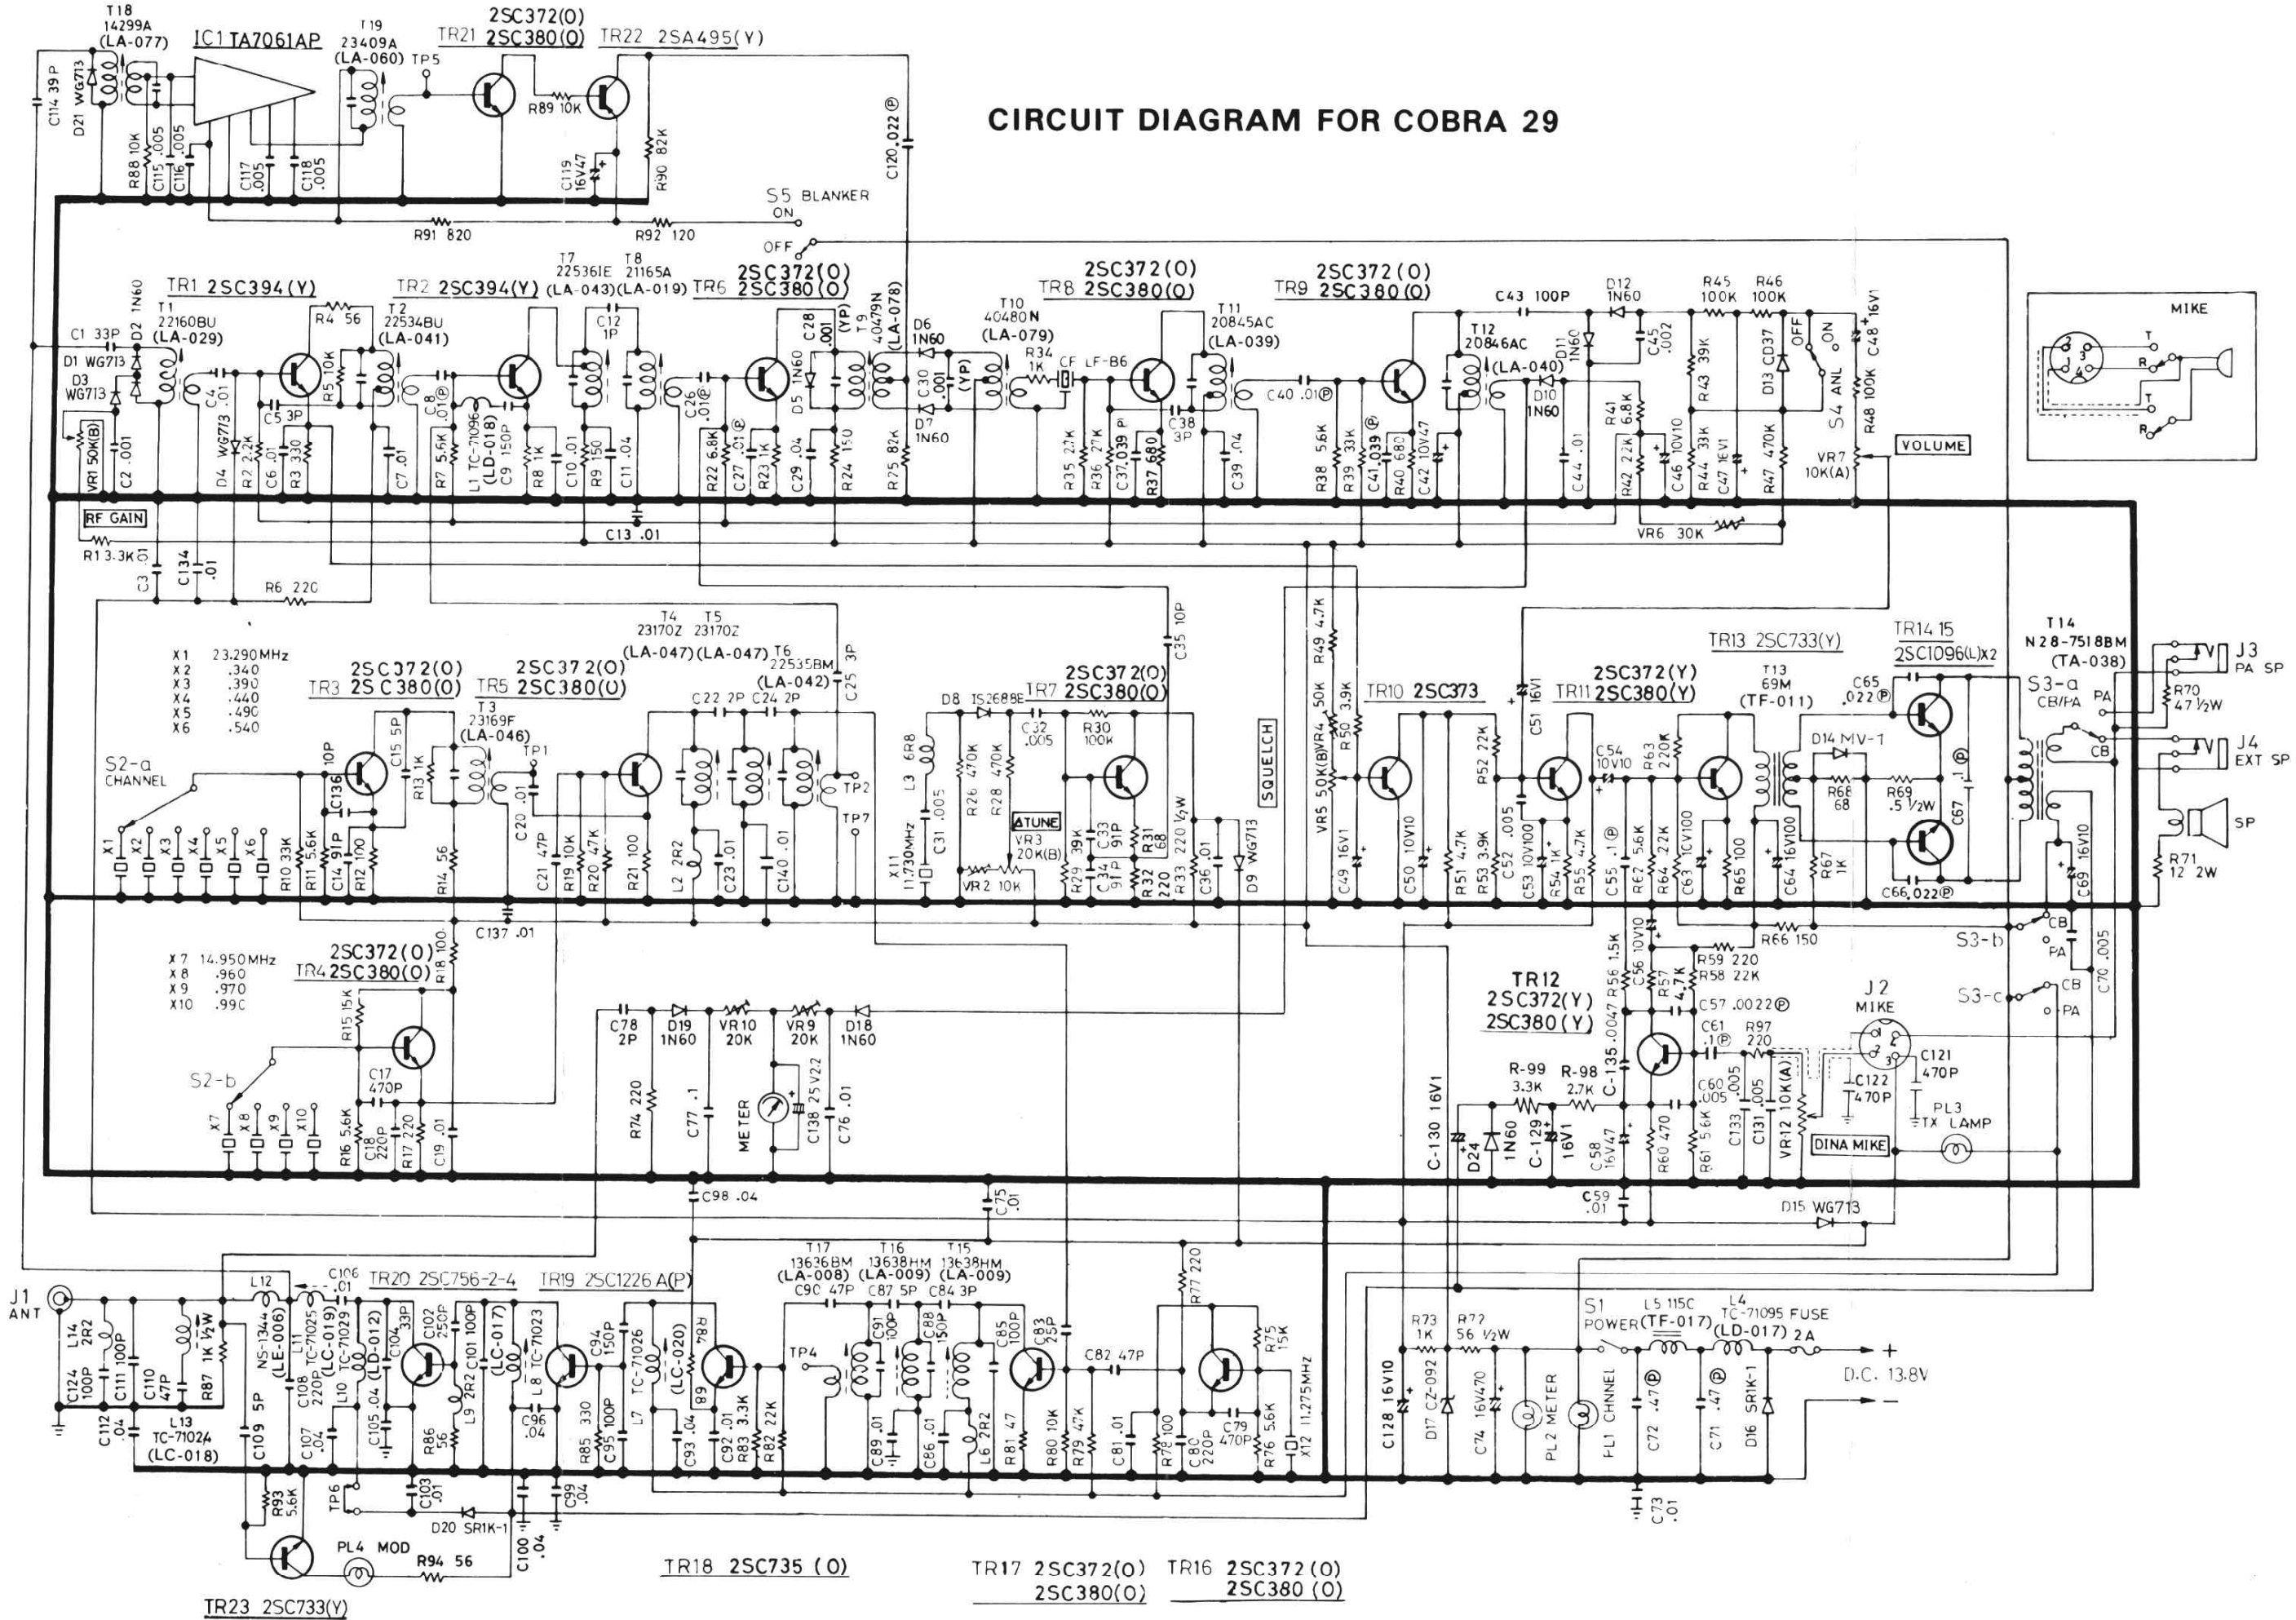

WARRANTY SERVICE INSTRUCTIONS

1. Refer to instruction manual for adjustments that may be applicable.
2. Check common electrical parts. Always check instruction manual for applicable adjustments after such replacement.
3. Defective parts removed from units which are within the warranty period should be sent to the factory prepaid with model and serial number of product from which removed and date of product purchase. These parts will be exchanged at no charge.
4. If the above mentioned procedures do not correct the difficulty, pack the product securely using the same packaging arrangement as supplied by the manufacturer. A detailed list of troubles encountered must be enclosed as well as your name and address. Forward prepaid (express preferred) to the nearest Dynascan authorized communication service agency.

Contact your local Dynascan Distributor for the name and location of your nearest service agency, or write to:

Service Department

DYNASCAN CORPORATION

2815 W. Irving Park Rd.

Chicago, Illinois 60618

LIMITED 90-DAY WARRANTY

"DYNASCAN warrants that each product manufactured by it will be free from defects in material and workmanship under conditions of normal use and service for a period of ninety (90) days from the date of purchase from an authorized DYNASCAN distributor. DYNASCAN will, at its option, repair or replace any product or component not conforming with the foregoing warranty and which is returned, transportation prepaid, to our factory or our authorized service contractor. DYNASCAN shall not otherwise be liable for any damages, consequential or otherwise. DYNASCAN makes no other express warranties. Any implied warranties (including any warranty of merchantability) are limited in duration to ninety (90) days from the date of purchase. This warranty does not apply to (i) damage resulting from unauthorized alterations and repairs, misuse, negligency or accident; or (ii) damage resulting from improper installation, connection or adjustment otherwise than in accordance with DYNASCAN's product instructions. This warranty is void if the serial number has been altered, defaced or removed. DYNASCAN reserves the right to discontinue any model at any time or change specifications or design without notice and without incurring any obligation. To register this warranty, the enclosed DYNASCAN warranty registration card should be completed and mailed to DYNASCAN, 1801 W. Belle Plaine Avenue, Chicago, Illinois 60613, within five (5) days after date of purchase.