

**INSTRUCTION
MANUAL
FT-101ZD**

YAESU MUSEN CO. LTD

OK O

HIGH PERFORMANCE HF TRANSCEIVER YAESU FT-101ZD



GENERAL DESCRIPTION

The FT-101ZD is a precision engineered, high-performance HF transceiver of advanced design, providing all band (160 - 10 meters) operation on SSB, CW, and AM* or FM*. This transceiver operates at an input power of 180 watts.

Advanced features include digital plus analog frequency display, continuously variable IF bandwidth (300 Hz - 2.4 kHz), a superb noise blanker with threshold adjustment, and an effective RF speech processor. The receiver boasts excellent dynamic range, despite its high sensitivity, for reliable operation in the presence of strong signals.

Built into every FT-101ZD are VOX, semi-break-in CW with sidetone, a 25 kHz crystal calibrator, selectable AGC, and a 10 dB/20 dB RF attenuator in the incoming signal path.

The FT-101ZD has been engineered for use. Controls and switches are laid out in an efficient and logical manner, so you won't have to fumble for a switch or knob when you need it quickly. And Yaesu designers have now made it possible for you to switch sidebands without recalibrating the display.

* option

All circuits, except the transmitter driver and final amplifier stages, are solid state. Solid state devices provide extremely high reliability and high component density, along with low power drain. The FT-101ZD may be operated from a variety of AC voltages, from 100 to 234 volts. A DC-DC converter, providing operation from a 13.5 VDC power source, is an available option.

For the economy FT-101Z, the counter unit is an available option, providing digital display capability should you want to upgrade your transceiver at a later date. Optional equipment on both models FT-101ZD and FT-101Z are the cooling fan, DC-DC converter, 600 Hz/350 Hz CW filter, FM unit, and microphone.

A diecast front panel, and the heavy-duty case, provide maximum protection for your transceiver. If the ratings of this unit are not exceeded, it will provide the owner with many years of satisfying operation. Please read this manual carefully before commencing operation, in order to derive maximum satisfaction from your new YAESU transceiver.

SPECIFICATIONS

Frequency coverage:

160 m	1.5 - 2.0 MHz
80 m	3.5 - 4.0 MHz
40 m	7.0 - 7.5 MHz
30 m	10.0 - 10.5 MHz
20 m	14.0 - 14.5 MHz
17 m	18.0 - 18.5 MHz
15 m	21.0 - 21.5 MHz
12 m	24.5 - 25.0 MHz
10 m	28.0 - 29.9 MHz

Power requirements:

AC	100/110/117/200/220/234 volts, 50/60 Hz
DC	13.5 volts \pm 10% (DC-DC converter optional)

Power consumption:

AC	85 VA receive (73 VA HEATER OFF) 330 VA transmit
DC	5.5 amps receive (1.1 amps HEATER OFF) 21 amps transmit

Size:

345 (W) x 157 (H) x 326 (D) mm

Weight:

Approx. 15 kg.

TRANSMITTER

Emission type:

LSB, USB, CW, AM, FM

Power input:

180 watts DC (SSB, CW)
50 watts DC (AM, FM)

Carrier suppression:

Better than 40 dB

Unwanted sideband suppression:

Better than 40 dB (14 MHz, 1 kHz)

Spurious radiation:

Better than 40 dB down

Transmitter frequency response:

300 - 2700 Hz (-6 dB)

Third order distortion products:

Better than 31 dB down

Transmitter frequency stability:

Less than 300 Hz after 10 minute warmup;
less than 100 Hz after 30 minute warmup.

Antenna output impedance:

50 - 75 ohms, unbalanced

Microphone input impedance:

500 - 600 ohms (low impedance)

RECEIVER

Sensitivity:

0.25 μ V for S/N 10 dB (SSB, CW)
0.5 μ V for S/N 10 dB (AM)

Image rejection:

Better than 60 dB (160 - 12 m)
Better than 50 dB (10 m)

IF rejection:

Better than 70 dB (160, 80, 20 - 10 m)
Better than 60 dB (40 m, 30 m)

Selectivity:

SSB 2.4 kHz (-6 dB); 4.0 kHz (-60 dB)
CW* 0.6 kHz (-6 dB); 1.2 kHz (-60 dB)
CW** 350 Hz (-6 dB); 1.2 kHz (-60 dB)
AM*** 3.6 kHz (-6 dB); 6.8 kHz (-60 dB)
FM*** 12 kHz (-6 dB); 24 kHz (-60 dB)

Bandwidth control:

Continuous from 2.4 kHz to 300 Hz

Audio output impedance:

4 - 16 ohms

Audio output:

3 watts at 10% THD, 4 ohm load

* with optional 600 Hz CW filter

** with optional 350 Hz CW filter

*** with optional unit

Specifications subject to change without notice.

TUBES AND SEMICONDUCTORS

Vacuum Tubes 12BY7A 1 6146B 2	Field Effect Transistors 2SK19GR 9 2SK19BL 1 3SK40M 1 3SK51-03 7 3SK73 1 J310 2	Schottky Barrier Diode ND487C2-3R 1	FM Unit IC μPC577H 1
Transistors T20A6* 2 2SA495 1 2SA496Y 2 2SA564A 3 2SA639 1 2SA733 1 2SA952L 13 2SB616 1 2SC372Y 25 2SC373 2 2SC380TMY 3 2SC535A 1 2SC732TMGR 1 2SC1000GR 2 2SC1383 1 2SC1583 2 2SC1674L 1 2SC1815Y 6 2SC1815GR 1 2SC2407 2 MPSA13 1	Integrated Circuits (IC) μPA54H 1 μPC78L05 1 μPC78L12 1 μPC7805H 1 μPC14308 1 μPC2002H 1 MC3403P 1 MC14024B 1 MSM9520RS 1 SN76514N 1 SN74LS123N 1 TA7060P 1 TA7063P 1	Silicon Diodes 1S1555 80 10D1 8 10D10 8 V06B 2 1SS53 6	Field Effect Transistors 2SK125 1 3SK51-03 1
	Germanium Diodes 1N60 11 1S1007(GB) 11	Varactor Diodes 1S2209 1 1S2236 1 FC63 1	Transistors 2SA733Q 1 2SC535B 1 2SC945Q 13
		Zener Diodes WZ061 1 WZ090 2	Diodes 1S188FM 4 1S1555 8 1SS53 8 FC63 MV103
		Light Emitting Diodes GD4-203SRD 9	
		LED Display HP5082-7623 6	

FT-101ZD SERIES MODEL CHART


= BUILT-IN FEATURE

= AVAILABLE OPTION

FEATURE	FT-101ZD	FT-101Z
ALL BAND CRYSTALS	○	○
COUNTER UNIT	○	×
DC-DC CONVERTER	×	×
CW FILTER	×	×
MICROPHONE	×	×
RF PROCESSOR	○	○
COOLING FAN	×	×
*AM UNIT	○	○
*FM UNIT	×	×

*Either FM or AM Unit can be installed in your FT-101ZD.

CONTROLS AND SWITCHES

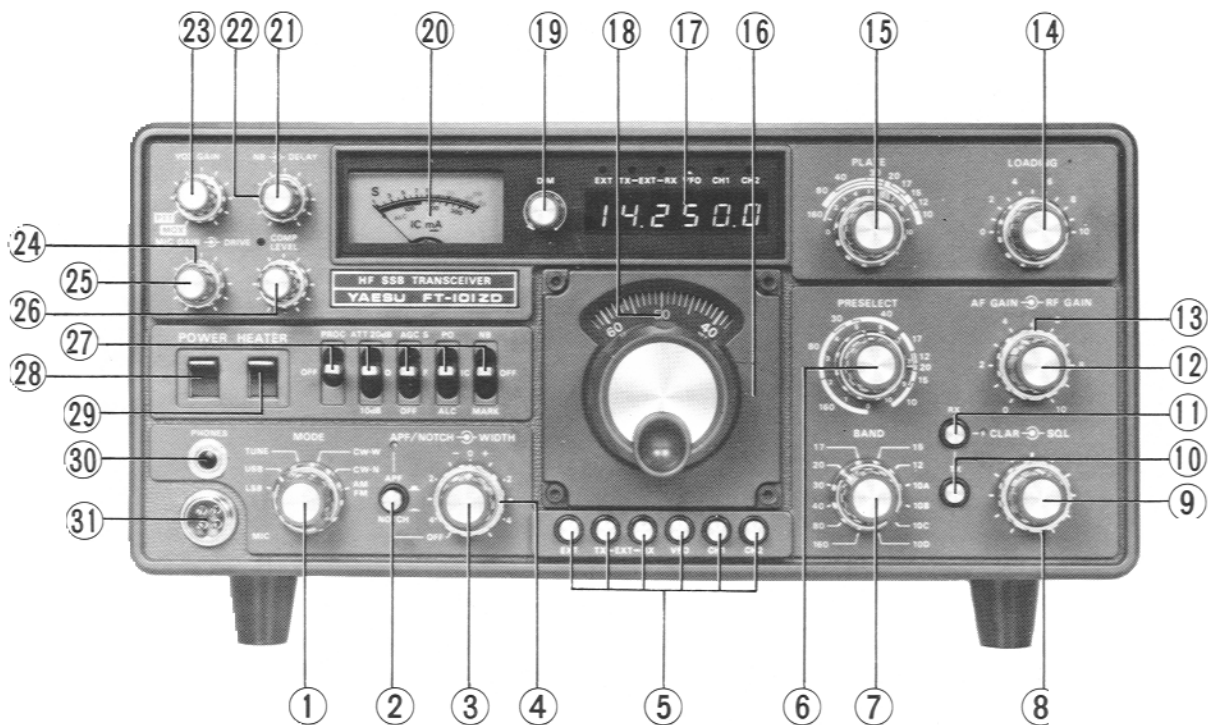

(1) MODE

Selection of LSB, USB, CW-W (SSB filter), CW-N (optional CW filter) and AM* or FM* is provided.

(2) APF/NOTCH switch

This switch selects either the Audio Peak Filter (APF) or the Audio Notch Filter. When pressed, the APF function is activated.

(3) APF/NOTCH

The APF/NOTCH control varies the frequency response of the audio peak/notch filter. The peak/notch filter may be varied over the range 350 Hz – 1500 Hz. When rotated into the OFF position, the APF/NOTCH function is switched off.

(4) WIDTH

This control varies IF bandwidth (except on AM and FM) from 2.4 kHz down to 600 Hz.

(5) SELECT switches

When using the optional FV-901DM synthesized, scanning external VFO, these switches determine which component will control the transmit, receive, or transceive frequency.

EXT..... This switch, when pressed, shifts control of the transceive frequency to the external VFO.

TX EXT... This switch, when pressed, shifts control of the transmit frequency to the external VFO.

RX EXT... This switch, when pressed, shifts control of the receive frequency to the external VFO.

VFO..... This switch selects control of the transceive frequency on the FT-101ZD internal VFO.

CH1, CH2. . These switches select optional fixed channels, transceive only.

(6) PRESELECT

The preselector control peaks the RF and IF stages for the frequency in use.

(7) BAND

The bandswitch selects the frequency band in use: 160 - 10 meters.

(8) SQL

The SQL (Squelch) control will silence the receiver until a signal is received. The SQL control can be used only when the FM unit is installed.

(9) CLARIFIER

The clarifier control allows offset of ± 2.5 kHz from the frequency established by the main tuning dial.

* with optional unit

(10) (11) CLARIFIER SELECT switches

Press the RX button for offset of the receive frequency.

Press the TX button for offset of the transmit frequency.

Press both buttons for offset of the transceive frequency.

(12) AF GAIN

The AF GAIN control varies the output level of the audio amplifier stages. Clockwise rotation increases the audio output level.

(13) RF GAIN

The RF GAIN control varies the gain of the RF and IF stages. Clockwise rotation increases the gain of these stages.

(14) LOADING

This control tunes the output circuit of the final amplifier pi network to match the feedpoint impedance of the load.

(15) PLATE

This control tunes the plate circuit of the final amplifier.

(16) MAIN TUNING KNOB

Rotation of this knob selects the operating frequency, in conjunction with the setting of the bandswitch. One revolution of the dial produces a frequency change of approximately 17 kHz.

(17) DIGITAL DISPLAY

The digital display reads out the operating frequency, with resolution to 100 Hz. The display unit is built into the FT-101ZD, and is an available option for the FT-101Z.

(18) ANALOG DIAL

The analog dial allows readout of the operating frequency to better than 1 kHz. The combination of the precision dial mechanism and drive unit provides zero backlash at slow tuning rates.

(19) DIM

This control allows dimming of the meter and dial lamps.

(20) METER

The meter displays final amplifier cathode current (IC), relative power output (PO), and ALC feedback voltage.

(21) NB

This control varies the threshold point for the noise blanker, and should be set to the minimum point that provides the desired blanking action.

(22) DELAY

This control sets the delay time for the VOX relay. For voice-actuated SSB, or semi-break-in CW, the operator may select the delay time most suitable for his or her operating habits.

(23) VOX GAIN

The threshold level for the VOX (voice operated relay) system can be varied using this control. In the PTT position, PTT (push to talk) control is provided, for relay control via the microphone PTT switch or footswitch.

(24) DRIVE

This control sets the carrier level for CW/AM and tuning purposes. When the RF processor is ON, this control varies the RF output on SSB, as well.

(25) MIC GAIN

This control sets the output level of the microphone amplifier stage. Clockwise rotation increases the mic gain level.

(26) COMP LEVEL

This control varies the compression level for the built-in RF speech processor. The processor does not function in the AM/FM mode.

(27) FUNCTION switches

PROC This switch activates the RF speech processor.

ATT This switch allows the insertion of 10 or 20 dB attenuators in the incoming signal path.



AGC S/F/OFF . . This switch allows selection of the desired AGC decay time. In the OFF position, the AGC is switched off, and the S-meter will not function.

PO/IC/ALC In the PO position, relative power output is displayed on the meter. In the IC position, final amplifier cathode current is displayed. In the ALC position, ALC voltage is displayed. Regardless of the setting of the meter switch, the meter functions as an S-meter on receive.




NB/MARK In the NB position, the noise blanker is activated. In the MARK position, the internal crystal calibrator is activated.

(28) POWER

This is the main ON/OFF switch for the transceiver.

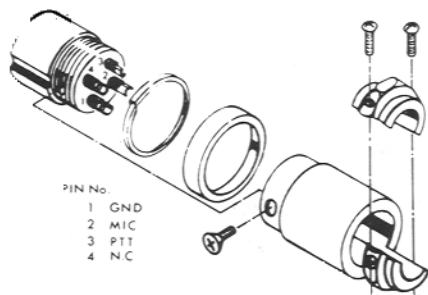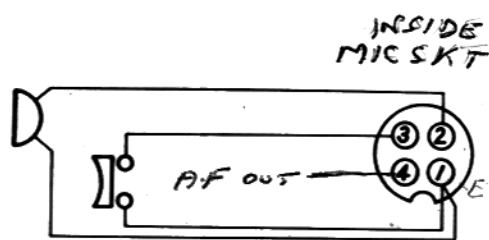

Mic plug

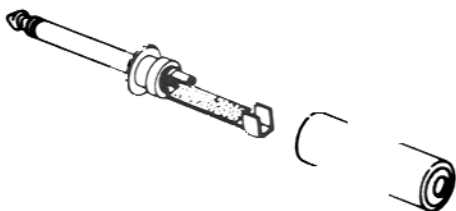

Headphone and external speaker plug

(29) HEATER



With the HEATER switch on, heater voltage is applied to the driver and final amplifier tubes. This switch may be turned off during periods of RX, when energy conservation is critical.

(30) PHONES


This is a standard 1/4" phone jack for use with headphones.

(31) MIC

This is a 4 conductor jack for microphone and PTT input.

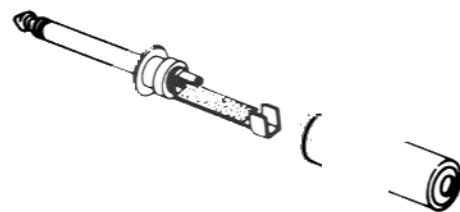


Key plug

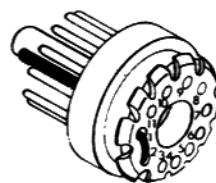


- PIN No.
- 1 HEATER
 - 2 HEATER
 - 3 NC
 - 4 NC
 - 5 NC
 - 6 NC
 - 7 ALC
 - 8 GND
 - 9 TX GND
 - 10 RX GND
 - 11 NC

ACC plug

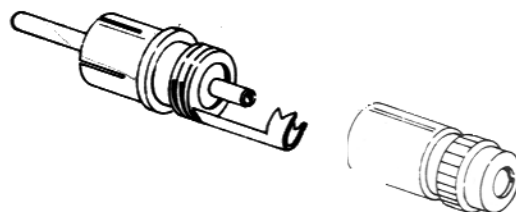

Pin plug

REAR APRON

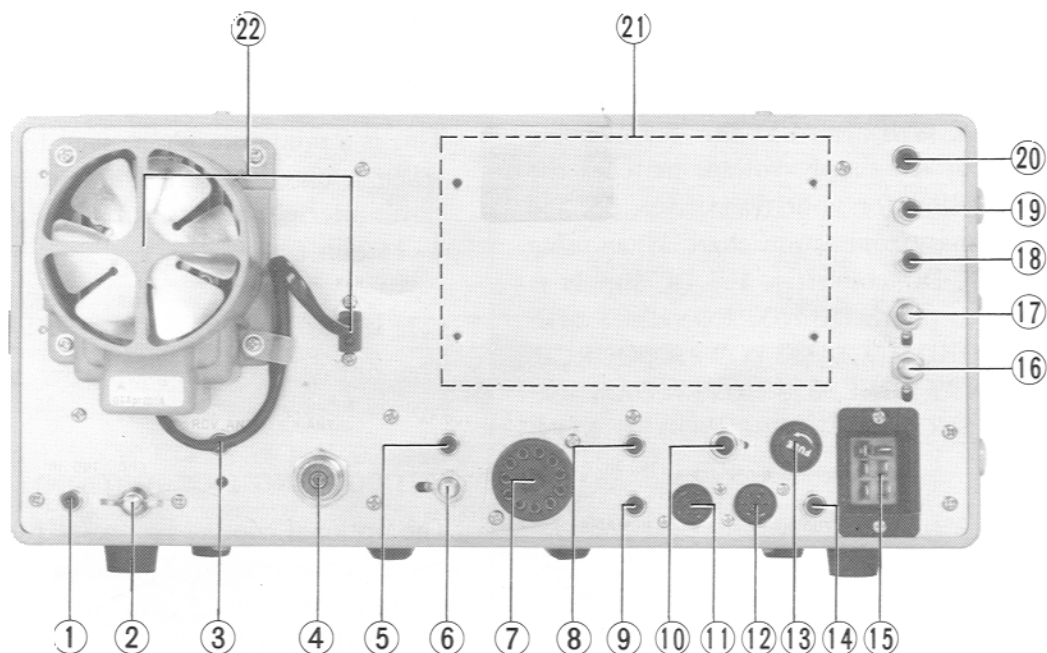

(1) RF OUT

RF output of 3 volts RMS is available at this jack for use with a transverter. Output is from the driver stage.

(2) GND

For best transceiver performance, as well as protection from electrical shock, a good ground connection should be made at this point, using a heavy, braided wire of the shortest length possible.

(3) RCV ANT

This jack is switched in parallel with the ANT jack on receive, for use with an external receiver.

(4) ANT

Standard "UHF" connector for the antenna.

(5) AF OUT

This is an audio output jack, providing 200 mV of audio output for recording purposes. This jack is not disabled by insertion of a headphone or speaker plug into their respective jacks.

(6) PO ADJ

This control adjusts the relative power output meter.

(7) ACC

Transceiver operating voltages and relay connections can be made through the accessory jack.

Please insert the ACC plug at all times, to provide heater voltage for the driver and final amplifier tubes.

(8) TONE OUT

The CW sidetone may be fed to an external receiver through this jack.

(9) A TRIP IN

Anti-trip input from an external receiver may be made via this jack, to prevent the receiver audio output from tripping the FT-101ZD VOX.

(10) KEY

The CW key may be connected at this point. Key-up voltage is 7 volts, and key-down current is 1.5 mA. Be sure your electronic keyer's output switch will handle these levels.

(11) EXT VFO A

This is a 6 pin DIN jack for interconnection to the the FV-101DM external digital VFO.

(12) EXT VFO B

This is a 6 pin DIN jack for interconnection to the FV-101Z or FV-901DM external VFO.

(13) FUSE

This is the fuse holder. For 100 - 117 volts, replace with only a 5 amp fuse. For 200 - 234 volts, use a 3 amp fuse. Replace fuses only with a fuse of the proper rating.

(14) IF OUT

Wideband IF output is available at this jack for use with a spectrum analyzer, etc.

(15) POWER

Connect the AC power cord at this point, being certain that your AC supply voltage matches the voltage specification for your transceiver. See the transformer primary connection chart. When using the optional DC-DC converter, the DC supply is connected at this point. **DO NOT CONNECT THE AC POWER CORD TO A DC POWER SOURCE. OUR WARRANTY DOES NOT COVER DAMAGE CAUSED BY SUCH IMPROPER POWER CONNECTIONS.**

(16) TONE

This control varies the CW sidetone output level.

(17) A TRIP

This control varies the level of the VOX anti-trip circuit.

(18) PTT

External control of the transceiver PTT (push to talk) system may be made at this jack, for use with a footswitch, etc.

(19) PATCH

Microphone or phone patch input may be made at this jack. Impedance is 500 ohms.

(20) EXT SP

This is a miniature phone jack for speaker output. When a plug is inserted into this jack, the transceiver internal speaker will be cut off. Impedance is 4 - 16 ohms.

(21) DC-DC CONVERTER (OPTION)

The optional DC-DC converter allows operation from a 13.5 volt DC power source.

(22) COOLING FAN (OPTION)

The optional cooling fan keeps the tubes at a safe operating temperature, when they are used in a hot environment. The 2 pin fan power jack supplies 100 volts to the fan.

ACCESSORIES

The following accessories are included with your new transceiver:

(1) AC POWER CORD 1 pc.

The power cord comes equipped with a 6-prong connector for connection to the AC supply.

(2) ACC PLUG 1 pc.

The accessory plug allows access to relay contacts and transceiver operating voltages. The ACC plug must be inserted in the accessory socket for proper operation of the transceiver, whether or not external connections are being made.



(3) PHONO PLUG 2 pcs.

Use these plugs for interface with station equipment via the FT-101ZD rear panel.

(4) SPARE FUSES 5A (3A) 1 pc. each

When replacing fuses, be absolutely certain to use a fuse of the proper rating. **OUR WARRANTY DOES NOT COVER DAMAGE CAUSED BY IMPROPER FUSE REPLACEMENT.** For 100 - 117 volt AC operation, use a 5 amp fuse. For 200 - 234 volt operation, use a 3 amp fuse.

INTERCONNECTIONS

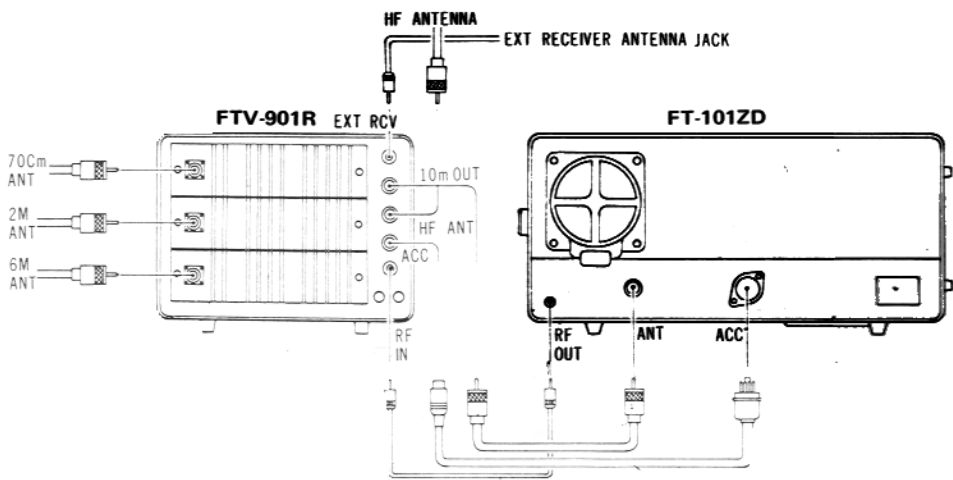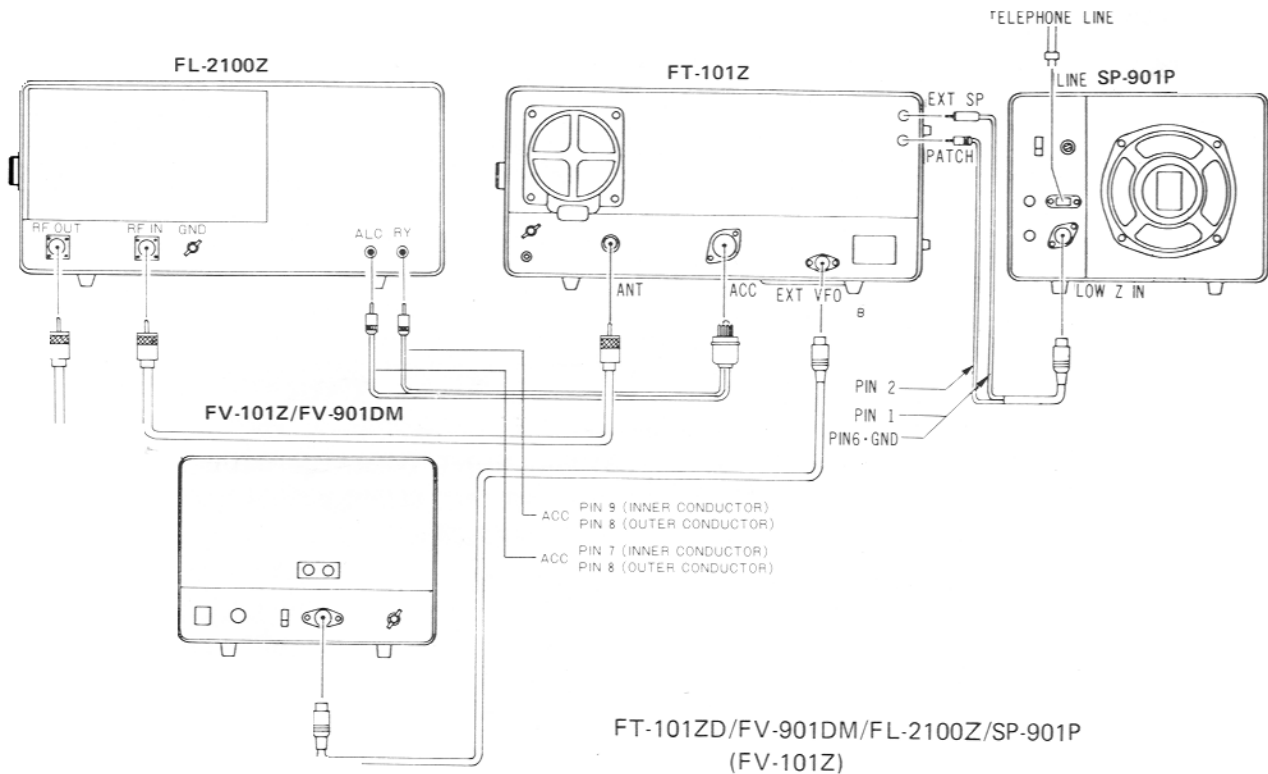

FT-101ZD/FTV-901R

INSTALLATION

The FT-101ZD is designed to be a single-unit station for fixed or portable operation from AC power. Power supply connections providing for operation from a variety of source voltages are available. Please read the following sections carefully, so as to ensure proper installation of your new transceiver.

PRELIMINARY INSPECTION


Upon opening the packing carton, immediately give the transceiver a thorough visual inspection. Check to see that all controls and switches are working freely, and inspect the cabinet for any signs of damage. If any damage has been sustained, immediately contact the shipping company, and document the damage completely. Save the packing carton and foam packing material for possible use at a later date.

BASE STATION INSTALLATION

The FT-101ZD is designed for use in many areas of the world, using supply voltages that may differ from your local supply voltage. For this reason, be absolutely certain that the voltage specification marked on the rear of the transceiver agrees with the local AC supply voltage. **THIS INSPECTION MUST BE MADE BEFORE CONNECTING THE AC POWER CORD TO THE REAR APRON OF THE TRANSCEIVER.**

CAUTION

PERMANENT DAMAGE WILL RESULT IF IMPROPER AC SUPPLY VOLTAGE IS APPLIED TO THE TRANSCEIVER. OUR WARRANTY DOES NOT COVER DAMAGE CAUSED BY APPLICATION OF IMPROPER SUPPLY VOLTAGE. DO NOT CONNECT THE AC POWER CORD TO A DC POWER SOURCE.

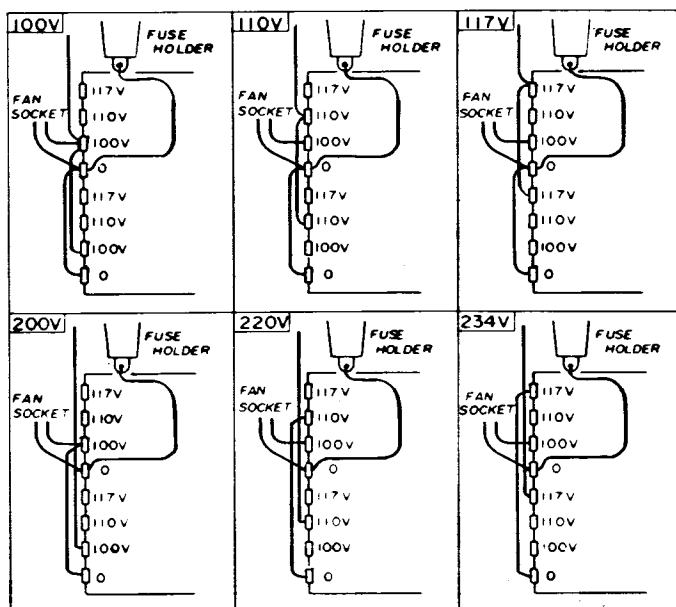

The transceiver should be connected to a good earth ground. The ground lead should be made of a heavy, braided wire, and should be connected to the GND terminal on the rear apron of the transceiver.

MOBILE INSTALLATION

(Note: The DC-DC converter described herein is optional equipment. See your Yaesu dealer.)

When the optional DC-DC converter is installed, the FT-101ZD will operate satisfactorily from a 13.5 volt DC power source capable of providing the required current. The DC power cord is included with the DC-DC converter kit.

For under-dash mobile mounting, a special mobile mounting bracket is an available option for your transceiver. The FT-101ZD should be located away from heater ducts, and a minimum of two inches of air space on all sides is recommended, to allow proper air flow around the cabinet. Never stack other units above or below the FT-101ZD, as the accumulated heat from both units could cause damage.

The transceiver requires an average of 14 amps on transmit, with 20 amps on voice peaks. The DC power cable comes equipped with a 20 amp fuse. Be certain to use only a 20 amp fuse when making replacements.

When making battery connections, be absolutely certain that the RED lead is connected to the POSITIVE battery terminal, and the BLACK lead is connected to the NEGATIVE battery terminal. Reversed connections could cause permanent damage to the transceiver. **OUR WARRANTY DOES NOT COVER DAMAGE CAUSED BY IMPROPER SUPPLY CONNECTIONS.**

It is recommended that the power connections be made directly to the battery, instead of to the ignition switch, etc. The battery provides considerable filtering action against ignition noise, and connection to the ignition switch can place the power line in a noisy circuit. Keep the power lead as short as possible, and keep the lead away from ignition cables.

Before connecting the DC power cable to the transceiver, check the battery voltage with the engine running (battery charging). If the voltage exceeds 15 volts DC, the vehicle voltage regulator should be adjusted, so as to limit the highest charging rate to less than 15 volts. As well, do not operate the transceiver if the DC supply voltage is less than 12 volts. The transceiver should always be turned off when the car is started, to prevent voltage transients from damaging the power supply components.

ANTENNA CONSIDERATIONS

The FT-101ZD is designed for use with an antenna system presenting a 50 - 75 ohm resistive load at the antenna jack. While the transmitter output circuitry is designed for uniform response within this impedance range, significant departures from the 50 - 75 ohm specification will result in seriously degraded transceiver performance, and may result in damage to the final amplifier tubes.

If an open-wire feedline is used, or if the input impedance of the antenna system presents a higher or lower impedance than specified, some sort of antenna tuner must be used to provide the proper impedance for the transceiver. See your Yaesu dealer for details of the FC-902 antenna coupler.

For mobile operation, most of the commercially-available antennas will provide satisfactory results, if care is taken to tune the antenna for minimum SWR. The outer conductor of the coaxial cable should be securely grounded to the automobile chassis at the antenna mount. See your Yaesu dealer for details on the RSL series of mobile antennas.

OPERATION

The tuning procedure for this transceiver is not complicated. However, care should be exercised when tuning so that peak performance of the equipment is secured. The following paragraphs describe the procedure for receiver and transmitter tuning.

INITIAL CHECK

Before connecting the transceiver to the power source, be certain that the voltage specification marked on the rear of the transceiver matches your local supply voltage, and also confirm that a fuse of the proper rating is being used.

FREQUENCY SELECTION

Frequency readout on the FT-101ZD is by digital as well as analog displays. The FT-101Z uses analog display only. The analog readout dial provides resolution to 1 kHz, while the FT-101ZD digital display provides resolution to 100 Hz. The digital display may be added to the FT-101Z as an option. See your Yaesu dealer for details.

RECEIVE OPERATION

(1) Preset the controls and switches as follows:

POWER OFF
HEATER OFF
VFO Switch pushed
VOX GAIN .. PTT position
RF GAIN Fully clockwise
AF GAIN . . . Adjust later for comfortable level
BAND Desired band
MODE Desired mode
PRESELECT . Desired band segment
AGC OFF
ATT OFF
MARK/NB . . . OFF
APF/NOTCH . Fully counterclockwise

(2) Turn the power switch to ON. The meter will light up, and the operating frequency will be displayed on the dial window (FT-101ZD). Adjust the AF GAIN control for a comfortable listening level, and adjust the PRESELECT control for maximum receiver noise or signal level. The PRESELECT control may require repeaking as the transceiver is tuned across the band.

(3) The RX CLARIFIER may be utilized if the received signal is drifting. Push the RX button, and rotate the CLARIFIER control for offset of up to 2.5 kHz. A red LED indicator will light up when the clarifier is in use.

When pulse-type noise is encountered, the NB (Noise Blanker) switch should be activated. Advance the noise blanker level control (located on the front panel) to the point which provides the desired blanking. Do not advance the level control beyond the point required to eliminate the noise pulses.

(5) For varying the width of the IF passband, rotate the WIDTH control. In the IF, two 8-pole crystal filters are used. One filter is fixed, and presents a boundary for the bandwidth. The center frequency is then varied across the passband of the second filter, using a mixing scheme that provides no change of pitch in the received signal.

The result is a continuously variable bandwidth, from 2.4 kHz down to approximately 300 Hz. With the WIDTH control in the "0" position, the second IF filter is instantly aligned with the first filter, returning the receiver to a 2.4 kHz bandwidth.

(6) For extremely strong signals, the ATT (attenuator) switch may be activated, providing 10 dB or 20 dB of attenuation on the incoming signal path, depending on the position of the ATT switch.

(7) Under conditions of very heavy QRM, while operating CW, the APF (Audio Peak Filter) may be activated. Push the APF/NOTCH button to APF, and tune the APF/NOTCH control for maximum enhancement of the desired signal. The operator will observe that the background noise will be reduced dramatically, resulting in excellent signal to noise ratio.

(8) For elimination of an interfering carrier within the AF passband, set the APF/NOTCH switch to NOTCH. Then rotate the APF/NOTCH control carefully for the best nulling of the offending carrier. The notch is extremely sharp, so tuning is critical, but the excellent notch depth is extremely effective in eliminating interference.

TRANSMITTER TUNING

The following tuning procedure must be performed prior to commencing operation on the desired mode. See the paragraphs relating to the specific mode after basic transmitter tune-up has been accomplished.

Be certain that a dummy load or matched antenna is connected to the antenna receptacle on the rear apron of the transceiver. It is possible to damage the final amplifier components of this equipment if this simple precaution is not followed prior to commencing transmission.

Do not exceed 10 seconds of key-down time while tuning.

As well, be certain that the ACC plug is inserted into the rear apron ACC jack. Without this plug, there will be no power applied to the tube heaters. Heater voltage is applied through pins 1 and 2 of the accessory socket.

- (1) Preset the controls and switches as follows:
 MODE TUNE
 DRIVE Fully counterclockwise
 DELAY Fully counterclockwise
 MIC GAIN..... Fully counterclockwise
 COMP LEVEL ... Fully counterclockwise
 HEATER..... ON
 PROC OFF
 PO/IC/ALC IC
 PLATE Set to desired band segment
 LOADING 0
 PRESELECT Peaked on receive for maximum response
 TX CLARIFIER .. OFF (button not pushed)
- (2) Turn the HEATER switch ON, and wait 1 minute for the tube heaters to warm up.
- (3) Set the VOX GAIN switch to the MOX position. Observe the reading on the IC meter: it should read 50 mA with no drive applied. If it is not, adjust the PB-1968 BIAS control for a resting current of 50 mA on the IC meter. Refer to the BIAS Adjustment in Page 41. Be certain that the DRIVE control is fully counterclockwise for this adjustment.
- (4) Set the VOX GAIN switch to MOX. Advance the DRIVE control for a reading of 150 mA.

- (5) Peak the PRESELECT control for a maximum meter reading. If the meter reading exceeds 150 mA, reduce the setting of the DRIVE control.
- (6) Rotate the PLATE control for a minimum reading ("dip") on the IC meter. Return the transceiver to the receive mode by rotating the VOX GAIN switch out of the MOX position.

LOADING POSITIONS

BAND	FREQUENCY	POSITION
160m	1.8MHz	2.5
	2.0MHz	6.0
80m	3.5MHz	3.0
	4.0MHz	6.0
40m	7.0MHz	6.0
	7.5MHz	6.5
30m	10.0MHz	7.0
	10.5MHz	7.8
20m	14.0MHz	3.0
	14.5MHz	4.0
17m	18.0MHz	2.0
	18.5MHz	2.0
15m	21.0MHz	2.0
	21.5MHz	2.5
12m	24.5MHz	3.0
	25.0MHz	3.0
10m A	28.0MHz	2.0
10m B	28.5MHz	2.0
10m C	29.0MHz	2.0
10m D	29.5MHz	2.0

NOTE: LOADING positions are nominal. Minor variations from positions shown are to be expected.

FINAL TUNING

Final transmitter tuning uses the relative power output setting of the METER switch. At full rated output, using a 50 ohm load, the PO meter will indicate between 1/2 and 2/3 of full scale deflection. If the PO reading is too high (off scale) or too low (1/4 scale or less), and if the load impedance is very close to 50 ohms, the PO ADJ control on the rear apron may be varied to provide the proper deflection. Once the PO meter is calibrated, off-scale deflections are the result of reflected power (high SWR), and corrective action may be required in the antenna system.

Set the controls as follows for final tuning:

- (1) Set the METER switch to PO. Rotate the DRIVE control to the 9 o'clock position.

- (2) Rotate the VOX GAIN control to the MOX position, and rotate the PRESELECT control for a maximum meter reading.
- (3) Rotate the LOADING control for a maximum meter reading. Rotate the PLATE control for a maximum meter reading.
- (4) Again rotate the LOADING control and PLATE control, each time advancing the DRIVE control approximately 2 steps, until the DRIVE control is fully clockwise. The transmitter is now tuned for maximum power output. Do not exceed the maximum tuning time stipulated previously. Return the VOX GAIN switch to the VOX position (out of the MOX position), return the METER switch to IC, and return the DRIVE control to the fully counterclockwise position.

SSB OPERATION

After completing the above tuning procedure, set the MODE switch to USB or LSB as desired. Set the VOX GAIN control to PTT, and activate the transmitter by pushing the microphone PTT switch or the footswitch, if used. With the METER switch set to the ALC position, speak into the microphone in a normal voice. Advance the MIC GAIN control until the meter kicks up to the midscale of the green-colored portion of the meter scale.

Note: When the METER switch is set to IC, voice modulation peaks will indicate 150 - 200 mA. Actual peak current, though, is approximately 2 times the indicated value.

To set the sensitivity of the VOX (voice-operated T/R switching) system, advance the VOX GAIN control slowly while speaking into the microphone. Advance the VOX GAIN control to the point where the speech signal activates the transmitter.

Set the antitrip potentiometer on the rear apron to the minimum point which prevents the speaker output from tripping the VOX. Do not use more VOX gain nor antitrip than is necessary. Adjust the front panel DELAY control for the desired relay recovery time.

The FT-101ZD RF speech processor, when correctly adjusted, will improve the intelligibility threshold at the receiving end, by increasing the average SSB power output. RF clipping is applied to the IF signal, which is then filtered to remove harmonics and out of band intermodulation products. RF envelope clipping causes much less distortion than that caused by an equivalent amount of AF clipping, and the result is an output signal with more "punch".

Set the PROC switch to OFF, and set the MIC GAIN control as described previously (voice peaks falling within the green zone of the ALC meter scale). Now set the PROC switch to ON, and set the COMP LEVEL control to the 10 o'clock position. Advance the DRIVE control so that the desired power output is obtained, and be sure that the ALC meter indication is within the green zone.

With the RF speech processor activated, the ALC meter indication may not be quite as high as when the processor is off. This is entirely normal, because the average power output is higher with the processor, although the peaks are being clipped.

Setting the COMP LEVEL control up to the 3 o'clock position will provide up to 10 dB of compression. Advancing the control beyond the 10 o'clock point may, however, degrade the voice-to-noise ratio, so caution is recommended.

CW OPERATION

After completing the tuning procedure, insert the key line into the KEY jack on the rear panel.

The operator may select any power output desired by advancing the DRIVE control. Once the maximum power output level has been reached, the DRIVE control should not be advanced further.

The transmitter may be activated by the VOX circuit, or by the PTT or MOX systems. The TONE control on the rear apron of the transceiver sets the CW sidetone level.

The key-up voltage at the key jack is 7 volts, and the key-down current is 1.5 mA.

For receiving, two positions of selectivity are provided. When the optional CW filter is installed, the operator may select between the 600 Hz bandwidth of the CW filter and the 2.4 kHz bandwidth of the SSB filter. The WIDTH control may be used with either position of the MODE switch: CW-W or CW-N.

AM OPERATION (with optional AM unit)

AM operation of the transmitter is accomplished by setting the MODE switch to the AM/FM position and inserting the proper amount of carrier with the DRIVE control.

After completing basic transmitter tune-up, place the MODE switch in the AM/FM position. Activate the transmitter, and rotate the DRIVE control until the meter reads .10 (100 mA) in the IC position of the METER switch. While speaking into the microphone in a normal voice, increase the MIC GAIN control until the meter indicates very slight movement with voice peaks. Care must be exercised that the DRIVE control is not advanced too far. Do not exceed .10 (100 mA) meter indication during AM operation or damage to the transmitter final amplifier tubes may result.

FM OPERATION (with optional FM unit)

After completing the basic transmitter tune-up, set the CARR control for 100 mA carrier level with the MODE switch in the AM/FM position. Speak into the microphone in a normal voice. The MIC GAIN and COMP LEVEL controls have no effect on the FM mode.

For FM reception, the SQL control on the front panel should be advanced only as far as required to silence background noise. When adjusted just past the silencing threshold, the squelch circuitry will provide noise-free reception with maximum sensitivity to weak FM signals.

Note: Either AM unit or FM unit can be installed in your FT-101ZD.

SELECT SWITCHES

The SELECT switches allow selection of internal or external VFO frequency control, as well as selection of up to 2 optional crystal-controlled channels.

When the crystal-controlled channels are installed, they may be selected by pressing CH1 or CH2, as desired. See the crystal information elsewhere for full information on crystal requirements.

The external VFO, FV-101Z, FV-101DM and FV-901DM, which provide versatile operations with your FT-101ZD, are available from your Yaesu dealer.

Because there is no calibrated dial for the FV-901DM, it can't be used with the analog FT-101Z.

For transceive frequency control on the external VFO, press EXT. For external VFO control of the transmit frequency, with receive frequency control on the FT-101ZD, press TX EXT. For receive frequency control on the external VFO, and transmit frequency control on the FT-101ZD, press RX EXT. For full transceive control on the FT-101ZD, press VFO.


DIAL CALIBRATION AND FREQUENCY DETERMINATION

The FT-101ZD mixing scheme accounts for the difference in carrier frequencies between USB and LSB. For this reason, no recalibration is required. Once the calibration is properly aligned (at the factory, or in shop), no further adjustment is required for accurate frequency derivation. The 25 kHz calibrator is included largely for alignment purposes, as it provides a useful reference signal for signal peaking, etc.

Frequency readout on the FT-101ZD digital display is straightforward. The full operating frequency is displayed, with resolution to 100 Hz.

The analog display on the FT-101Z and FT-101ZD transceivers provides easy determination of the operating frequency. The frequency displayed on the analog sub dial (and the main display window, for the FT-101Z) is added to the lower band edge frequency.

For example, if the analog dial indicates 074, as shown in the example, and the BAND switch is on 40 meters (lower band edge: 7000 kHz), the operating frequency will be 7074 kHz. By rotating the BAND switch, this position of the analog display will produce 14074 kHz for 20 meters, 21074 for 15 meters, etc. For 80 and 12 meters, the lower band edges are 3500 kHz and 24500 kHz while for 160 meters the band edge is 1.5 MHz. Therefore, the dial should read 074 to produce 3574 kHz, but 374 for 1874 kHz. Be careful so as not to operate outside the amateur bands.

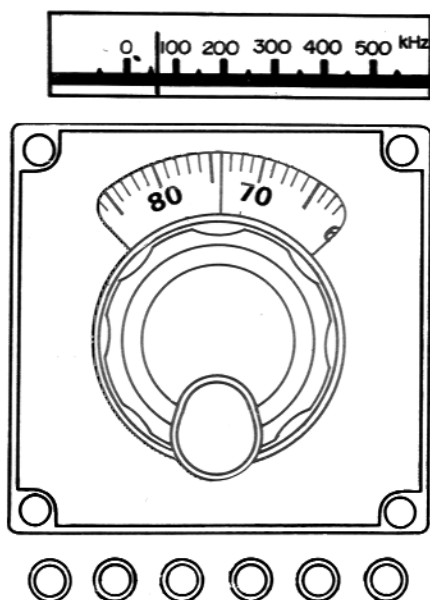

For operation on 21420 kHz USB, compute the crystal frequency as follows:

$$F_x = 26498.5 - 21420 = 5078.5 \text{ kHz.}$$

Inspection of the values of F_1 in Table 1 will reveal that the 7199 kHz crystal for LSB will work on 14199 kHz, 21199 kHz, etc. Of course, LSB is not normally used on these bands. If the operator switches to USB, the operating frequency will be moved 3 kHz (in this case, to 14196 kHz, 21196 kHz, etc.). If the move is made from LSB to CW, the frequency will move 2.3 kHz down.

BAND \ MODE	U S B	L S B	CW/AM,FM
160m	6998.5	7001.5	6999.2
80m	8998.5	9001.5	8999.2
40m	12498.5	12501.5	12499.2
30m	15498.5	15501.5	15499.2
20m	19498.5	19501.5	19499.2
17m	23498.5	23501.5	23499.2
15m	26498.5	26501.5	26499.2
12m	29998.5	30001.5	29999.2
10m A	33498.5	33501.5	33499.2
10m B	33998.5	34001.5	33999.2
10m C	34498.5	34501.5	34499.2
10m D	34998.5	35001.5	34999.2

Table 1

FIXED CHANNEL CRYSTAL INFORMATION

Two fixed channels may be used with your FT-101ZD, using optional crystals. Crystals are available from your Yaesu dealer. Crystals must meet the specifications shown in Table 2, and must fall within the operating range 5500 - 5000 kHz. Frequency calculation is made from the formula

$$F_x = F_1 - F_0$$

where F_x is the crystal frequency

F_1 is a constant derived from Table 1

F_0 is the operating frequency.

For example, let us say it is desired to operate on 7199 kHz LSB. Referring to Table 1, we see that for 40 meter LSB, F_1 is 12501.5 kHz. Subtracting F_0 (7199 kHz) from F_1 (12501.5 kHz) yields 5302.5 kHz, the crystal frequency (F_x).

Type	HC-25/U
Load Capacitance	30pF
Series Resistance	25 Ohms or less
Static Capacitance	7pF or less
Drive Level	5mW

Table 2

CW FILTER INSTALLATION (OPTION)

- (1) Remove the top cover of the transceiver case, as shown in Fig. 1.
- (2) Refer to Fig. 2, and locate the NB-FIX circuit board. Remove its mounting screws, because this board is obstructing the removal of the IF unit.
- (3) Remove the 12-pin, 13-pin, and 15-pin plugs from their sockets on the IF unit. Remove the IF unit mounting screws, and remove the IF unit from the transceiver case.

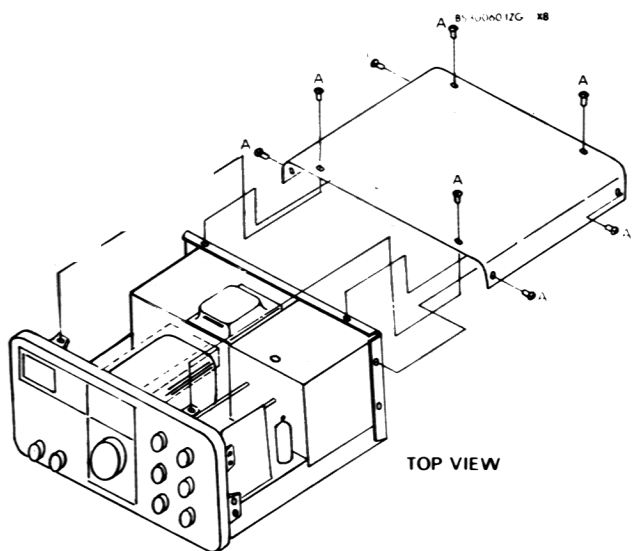


Figure 1

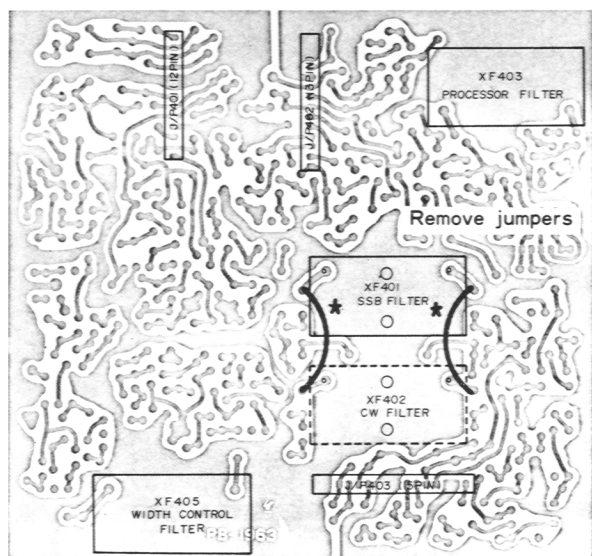


Figure 3

- (4) Install the optional CW filter as shown in the foil side view of the IF unit (Fig. 3). Make the fastening nuts snug, and solder the pins of the filter to the circuit board, and remove the 2 jumper wires shown in Figure 3.
- (5) Re-install the IF unit, being careful to connect the 12-pin, 13-pin, and 15-pin plugs in the correct sockets. Refer to Fig. 2 to be sure. Re-install the NB-FIX unit, and replace the top cover of the transceiver.
- (6) When the optional CW filter is installed, the CW-N position of the mode switch will activate this filter. In the CW-W position, the SSB 2.4 kHz filter will be in use. The WIDTH control is usable in all modes, except FM mode.

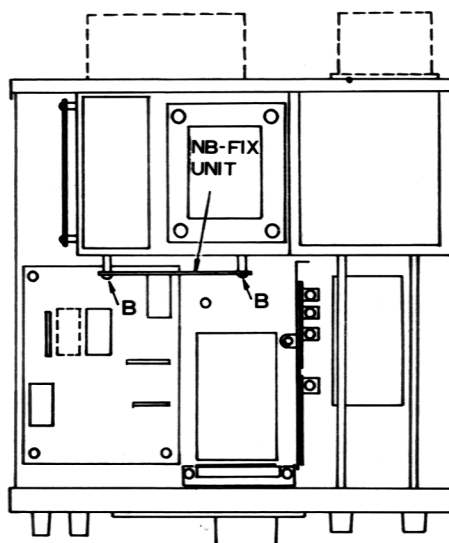


Figure 2

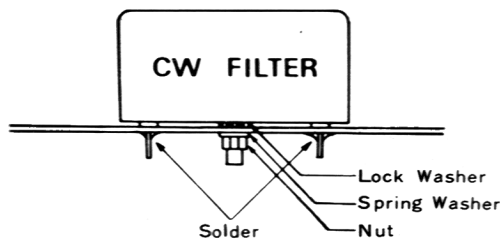


Figure 4

FT-101ZD DC-DC CONVERTER INSTALLATION

The optional DC-DC converter can be installed in a matter of minutes. Please follow the instructions carefully, in order to make the proper connections.

INSTALLATION

- (1) Remove the seal covering the chassis cutout for the DC-DC converter installation on the rear panel, and install the 9 pin connector supplied with the kit on the chassis cutout, as shown in Figure 5.
- (2) Remove the nylon clamp binding the 7 wires, and slip off the vinyl tube from the wires. Then, insert each of the wires (except the orange wire) into the short transparent vinyl tube supplied with the kit, for insulation.
- (3) Solder the 7 wires to the appropriate pins of the connector, as shown in Figure 6.
- (4) Install the DC-DC converter module as shown in Figure 3. Use the four screws supplied with the kit. Do not force the plug into the socket, as the connection should be smooth, yet solid.
- (5) Check the DC cable fuse socket, located in the positive (red) lead, to be certain that a 20 amp fuse is installed.

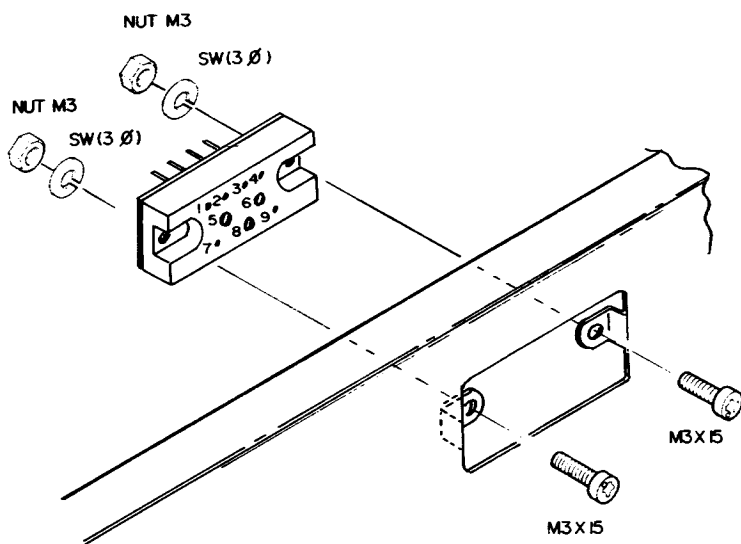


Figure 5

- (6) When making connections to the battery, be absolutely certain that the proper polarity is observed. The RED lead should be connected to the POSITIVE (+) battery terminal, and the BLACK lead should be connected to the NEGATIVE (-) terminal. OUR WARRANTY DOES NOT COVER DAMAGE CAUSED BY REVERSED POLARITY CONNECTIONS.
- (7) Before connecting the DC power cable to the transceiver, check the automobile voltage regulator level with the engine running (battery charging). The maximum charging rate should be 15 volts or less. If the voltage is higher than this level, please adjust the voltage regulator for a maximum of 15 volts. This precaution also applies to bench power supplies, which should be adjusted in the same fashion. Caution should also be taken so that the transceiver is not operated from a supply voltage of less than 12 volts.
- (8) Connect the DC cable to the transceiver. Power connections are made automatically when the DC cable is connected to the POWER jack.

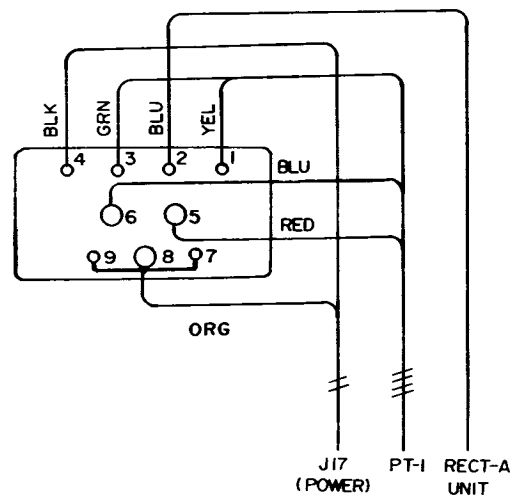


Figure 6

Be certain that sufficient room is provided for free air circulation around the transceiver. If the transceiver must be placed on the car seat, set it on a board or other rigid object, in order to provide the necessary air circulation (and to avoid possible heat damage to the upholstery).

A special mobile mounting bracket is available from your YAESU dealer.

The DC supply should be capable of providing 20 amps on voice peaks, 14 amps continuous. The HEATER switch may be turned off during long periods of reception, for energy conservation.

The FT-101ZD cooling fan may be used with other models of Yaesu equipment. Installation is easily accomplished in minutes.

Hold the fan up to the rear panel in its proper location. Determine the proper length of the two-wire power lead to the motor. Solder the leads to the 2-pin plug supplied with the fan. The 4-pin plug is not needed for FT-101ZD installation.

Install the fan onto the rear panel of the transceiver, as shown in the drawing. Insert the power lead from the fan into the fan socket on the rear panel.

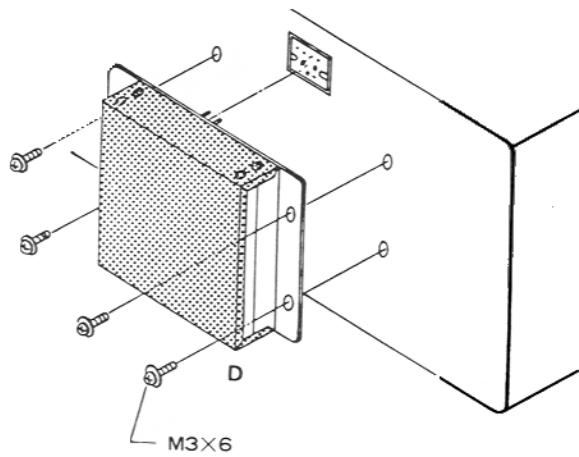


Figure 8

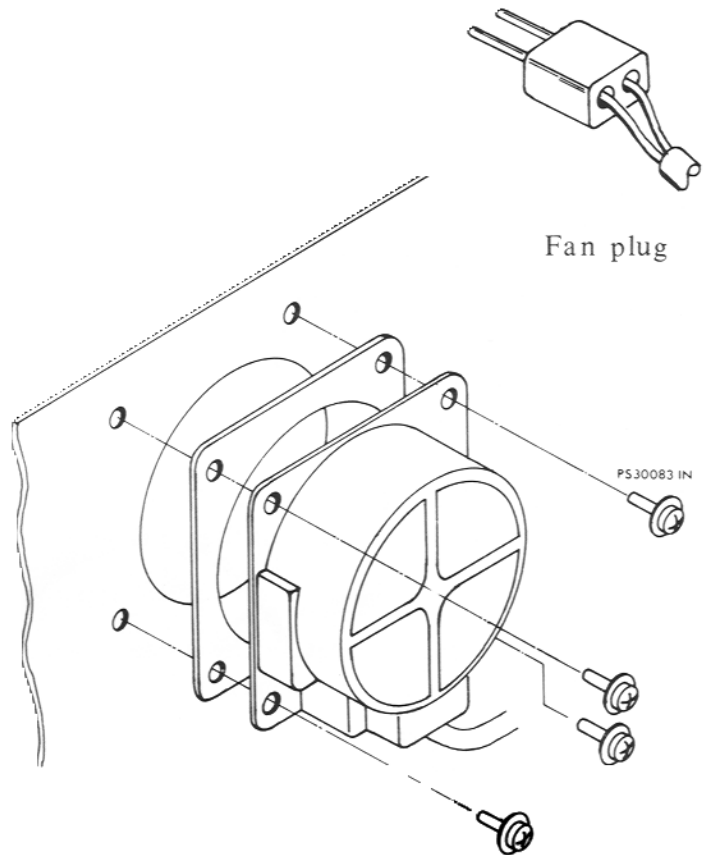


Figure 9

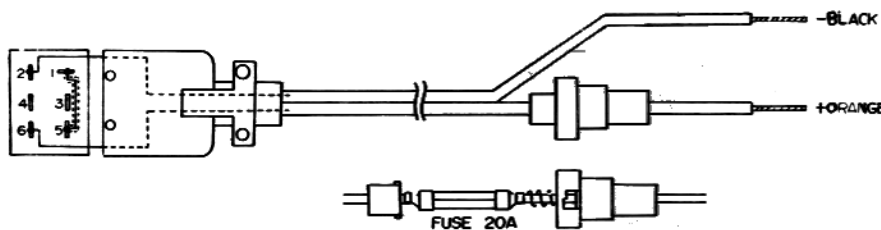


Figure 7

COUNTER UNIT (PB-2086A) INSTALLATION ON FT-101Z

The installation of the New Counter unit (PB-2086A) to the FT-101Z economy can be easily accomplished in a matter of minutes.

Counter units PB-1980 and PB-1980B cannot be installed in FT-101Z's with serial number above XX160001.

PARTS NEEDED

Optical Filter with double-face tape	(1)
Counter Module	(1)
Guide Pins	(2)
Support Tower	(1)
Vinyl Tubes	(2)

- (1) Remove the top cover of the transceiver, according to the drawing on page 17.
- (2) Remove the screws marked "A" in Figure 10. These screws support the LED board.
- (3) Remove the screws marked "B" in Figure 10, as well as the tension spring, and remove the analog display panel.
- (4) Locate the analog display lamp. Cut the leads to this lamp, insert 1 lead each into the vinyl tube supplied with the counter kit, and position these leads out of the way of the VFO gears, etc.
- (5) Install the orange optical filter on the inside of the front panel of the transceiver, in the position formerly occupied by the analog display panel. Be sure that it is correctly centered. The filter is held in place by the double-face tape included with the filter.

- (6) Replace the LED board with "A" screws. Install the support tower into the hole marked "C" in Fig. 10.

- (7) Install the Counter unit with the screw previously installed at "B" for securing the counter module at point "C". Use the two plastic screws supplied with the kit for securing at point "B". Connect the Molex plug into the board connector J2302 on the Counter unit (if your transceiver bears a serial number smaller than XX159999, use the supplied connector assembly for this connection). The co-

axial cable from the Counter unit is connected to point "F" in Fig. 10.

- (8) Remove the 820 ohm (Gray-Red-Brown) resistor from the terminal strip marked "E" in Figures 10 and 11.
- (9) Close the transceiver. No alignment of the unit is necessary.


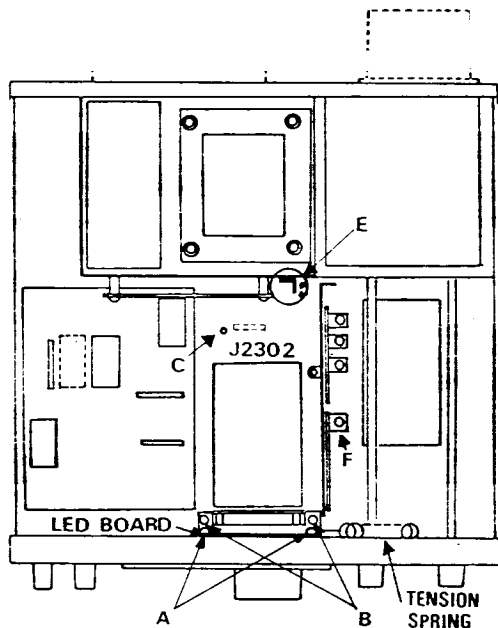


Figure 10

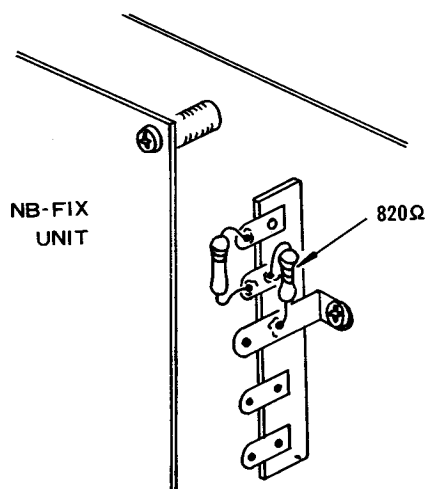

(Enlarged) Part E

Figure 11

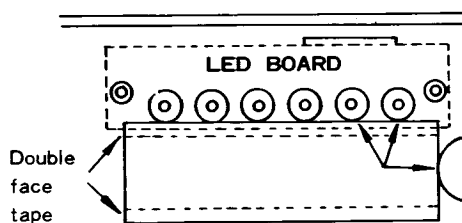


Figure 12

FM Unit Installation

1. Remove the top cover of the transceiver, as shown in Figure 1.
2. Remove the two screws (shown as "C" on Figure 13) from the IF unit, and replace with the two post screws supplied.
3. Install the FM unit in the space over the IF unit, and secure it with the mounting screws previously removed from the IF unit.
4. Unplug P₂₁ to (gray shielded cable) and J₁₉, located between the IF unit and the VFO unit.
5. Connect P₂₁ to J₂₅₀₂ (red shielded cable) from the FM unit, and J₁₉ to P₂₅₀₂ (blue shielded cable), as shown in Figure 15.
6. Connect P₁₉ (3 pin) to J₂₅₀₄; P₃₂ (3 pin) to J₂₅₀₃; and P₂₀ (8 pin) to J₂₅₀₆. During this procedure, be sure not to press too heavily on the connector, so as not to damage the unit.
7. Unplug P₁₄ (yellow shielded cable) from J₁₀₁ on the RF unit, and connect it to J₁₀₁ on the FM unit. Then connect P₂₅₀₁ (yellow shielded cable) to J₁₀₁, by referring to Figure 15.
8. On the RF unit, unplug P₁₁ (red shielded cable) from J₁₀₂, and connect it to J₂₅₀₅ on the FM unit. Connect P₂₅₀₁ (red shielded cable) from the FM unit to J₁₀₂ on the RF unit, as shown in Figure 15.

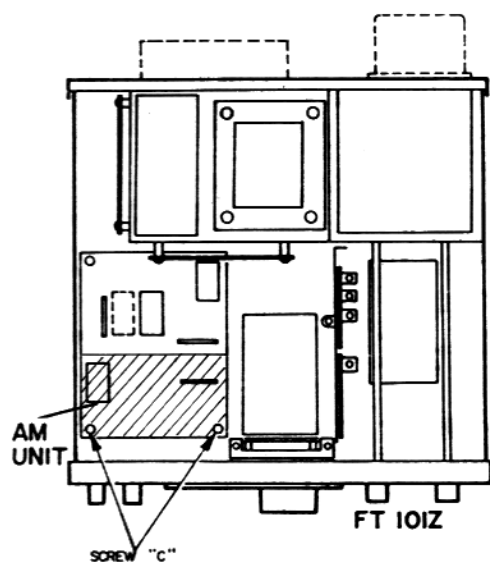


Figure 13

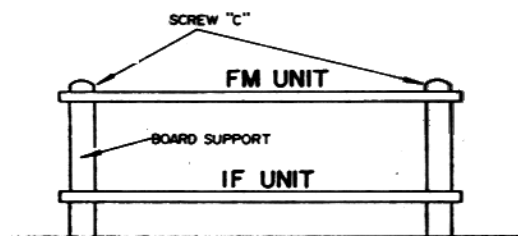


Figure 14

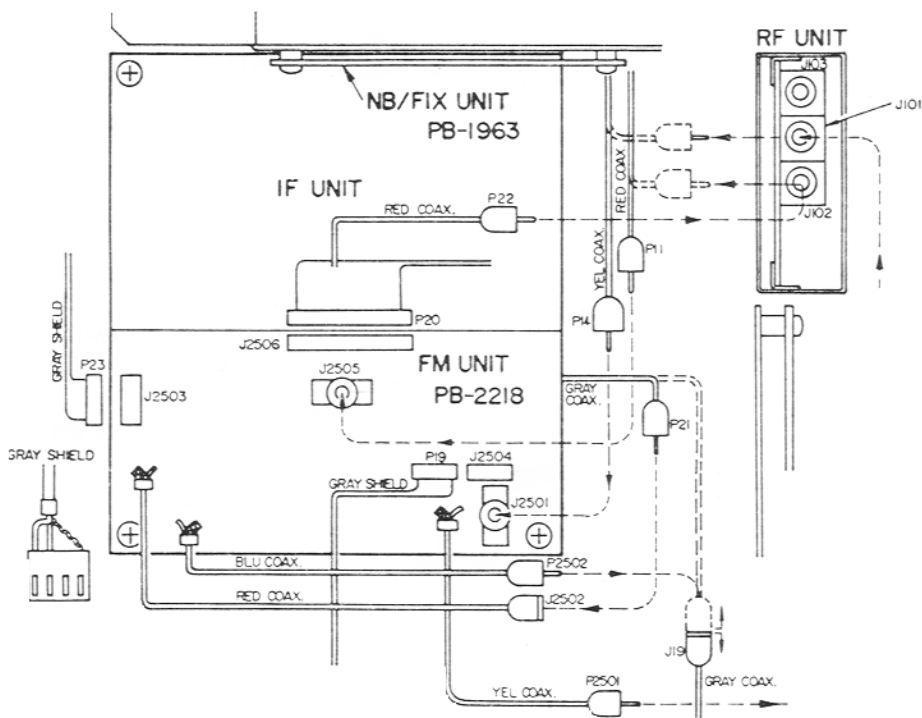


Figure 15

AM UNIT INSTALLATION

- (1) Remove the top cover of the transceiver, as shown in Figure 1.
- (2) Refer to Figure 13, and remove the mounting screws marked "C" on the IF unit.
- (3) Refer to Figures 13 and 14, and install the AM unit atop the IF unit, using the mounting towers and screws supplied.
- (4) Unplug P21 from J19, as shown in Figure 16, and reconnect P21 to J2401. Connect P2401 from the AM unit to J19.
- (5) Locate the 3-pin and 8-pin Molex connectors in the vicinity of the IF unit. Loosen their cables, as necessary, from the harness restraints, in order to make the following connections. The 8-pin connector P20 connects to J2403; the 3-pin P19 connects to J2402; RCA plug P22 (from P20) connects to J102 on the RF unit (remove P11 from J102, and very carefully insert it into J2404 on the AM unit).



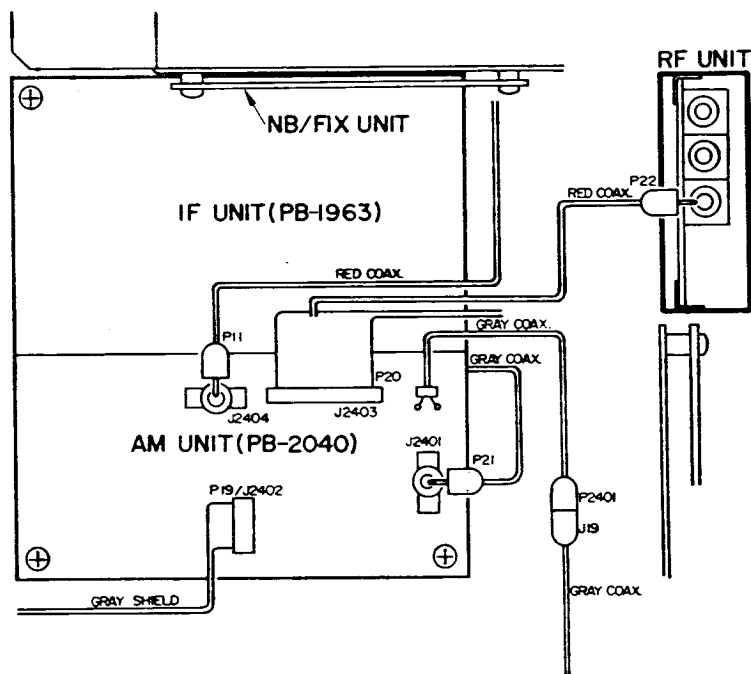


Figure 16

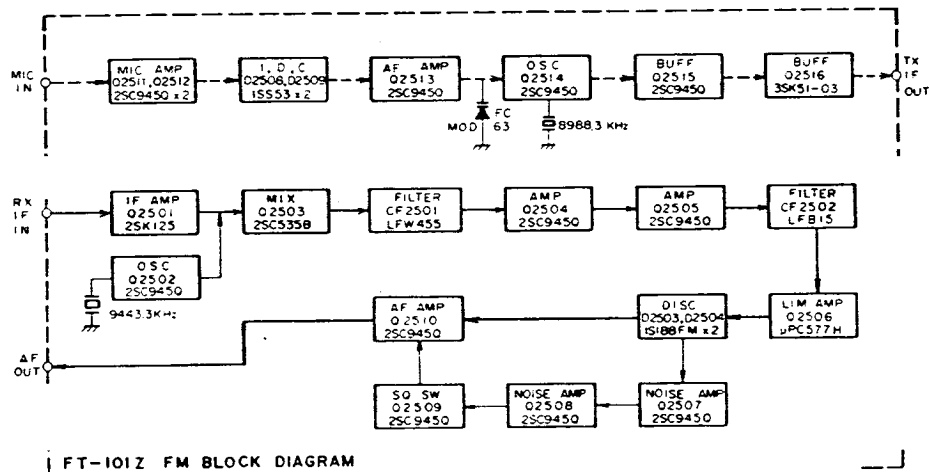

RECEIVE
TRANSMIT
CONTROL

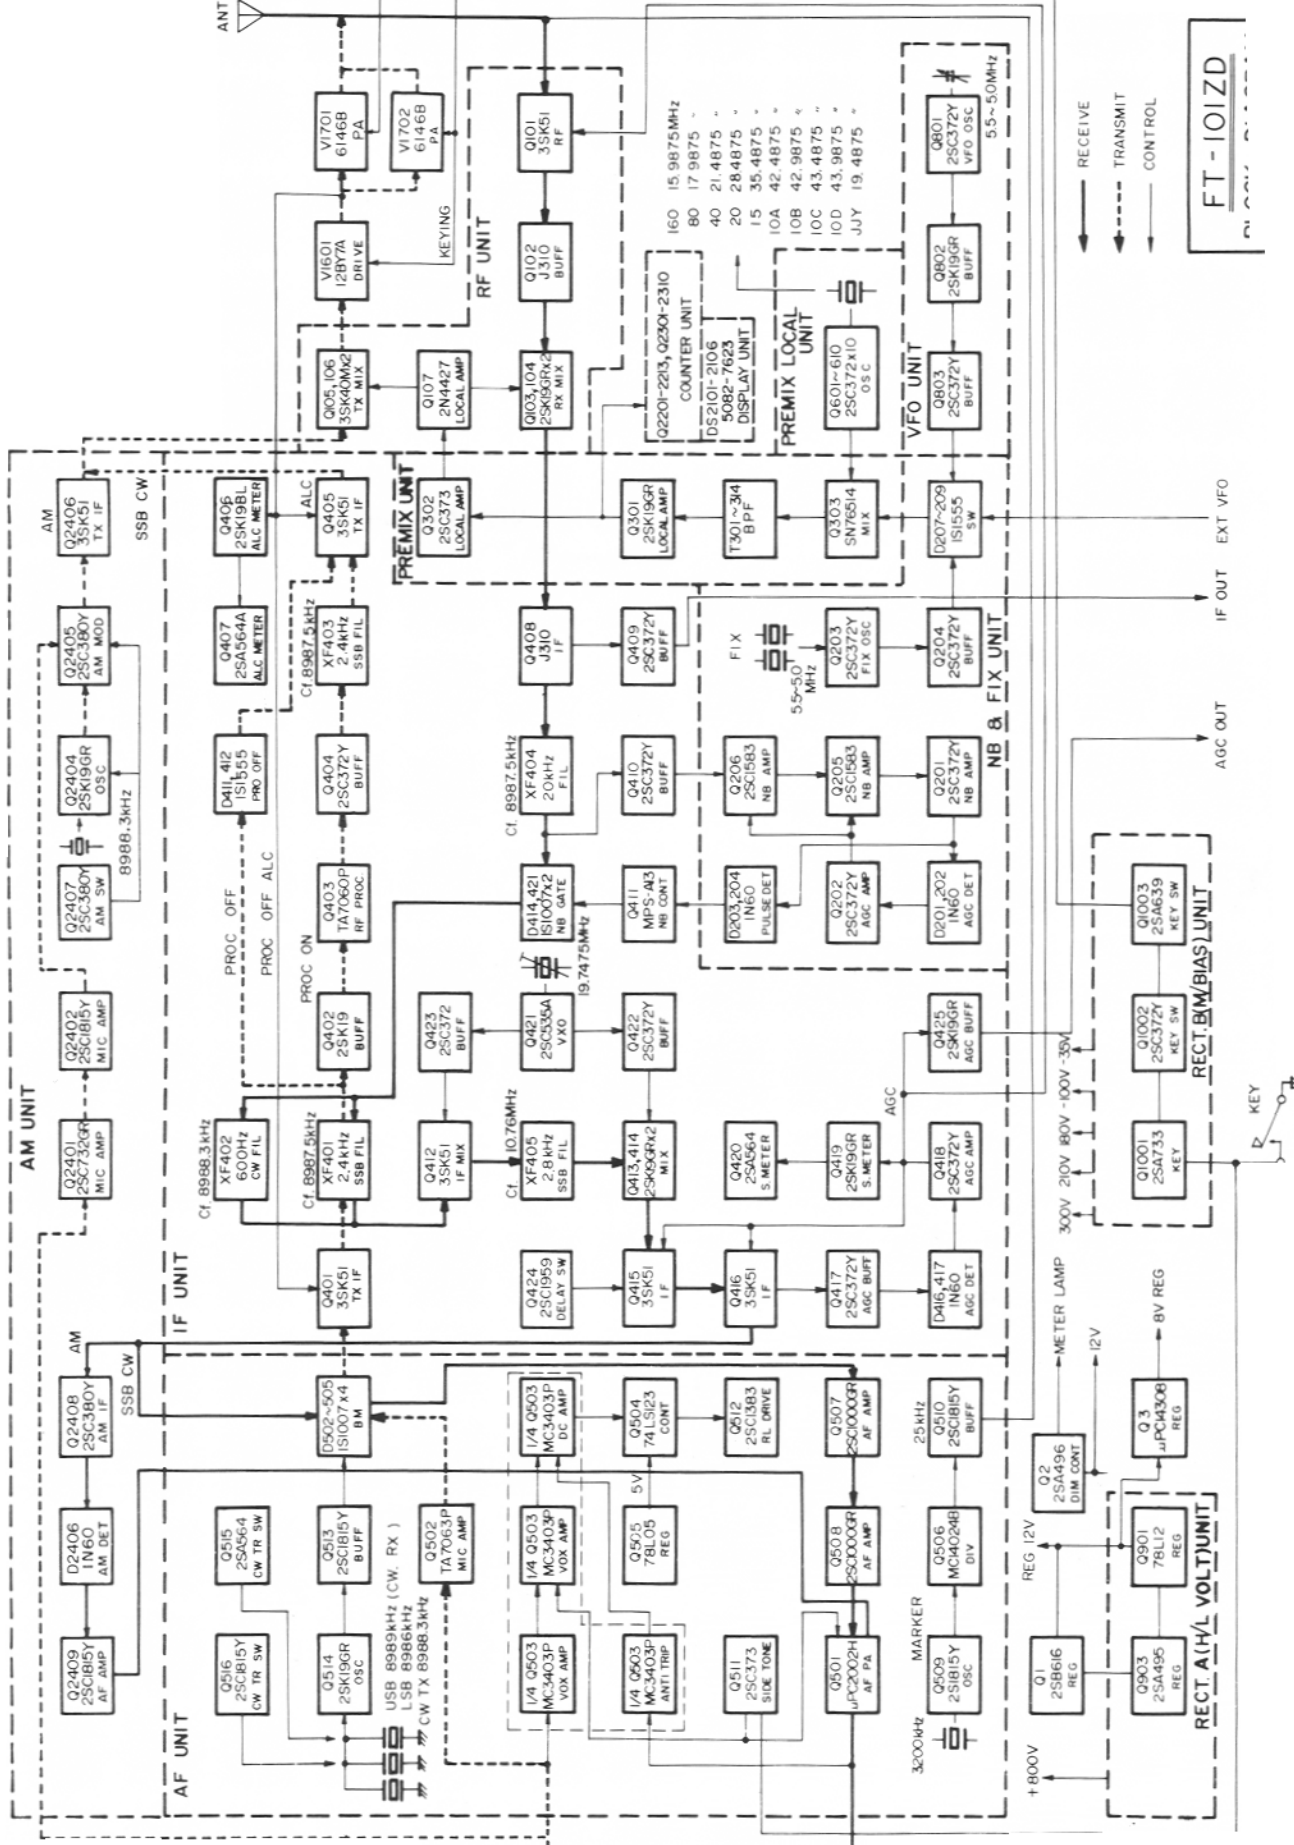

FT-101ZD



RECEIVE
TRANSMIT
CONTROL

EXT VFO
IF OUT
AGC OUT

KEY

300V 20V 80V -100V -30V

METER LAMP
12V

8V REG

REG 12V

REG 12V

CIRCUIT DESCRIPTION

The block diagram and following circuit description will provide you with a better understanding of the design of this transceiver. The circuit description is tailored to the full-feature FT-101ZD, and the reader should note that the counter unit and digital display are optional features for the FT-101Z.

The FT-101ZD consists of a pre-mix-type single conversion system, using a 9 MHz IF for all modes of operation.

RECEIVER


The RF input signal from the antenna is fed through antenna relay RL₂, lamp fuse FH₂, attenuator switch S₂₀₀₄ (located on the LEVER SW unit, PB-1975), 9 MHz trap L₂₁₀₁ and C₁₂₀₇ (located on the TRIMMER A UNIT), and input transformer T₁ to pin 3 of the RF UNIT.

RF UNIT (PB-2154)

The incoming signal is amplified by the RF amplifier, Q₁₀₁ (3SK51-03), a dual-gate MOS FET with excellent rejection of cross modulation and intermodulation. The amplified signal is fed to the Schottky barrier diode module, Q₁₀₂ (ND487C2-3R), where the RF signal is mixed with a local signal delivered from Q₁₀₄ (2SC2407), resulting in a first IF of 8.9875 MHz. The IF signal is then amplified by Q₁₀₃ (J310) and fed to J₁₀₁.

IF UNIT (PB-1963)

The IF signal at pin 9 of J₄₀₃ is amplified by Q₄₀₈ (J310) and passed through a monolithic filter, XF₄₀₄, which has a ±10 kHz bandwidth. The monolithic filter provides early protection from IMD, while providing a wide-bandwidth point for noise blanking. The IF signal is then fed to noise blanker gate D₄₀₄ (1S1007), which functions as an ON/OFF switch controlled by noise blanker driver Q₄₁₁ (MPSA13).

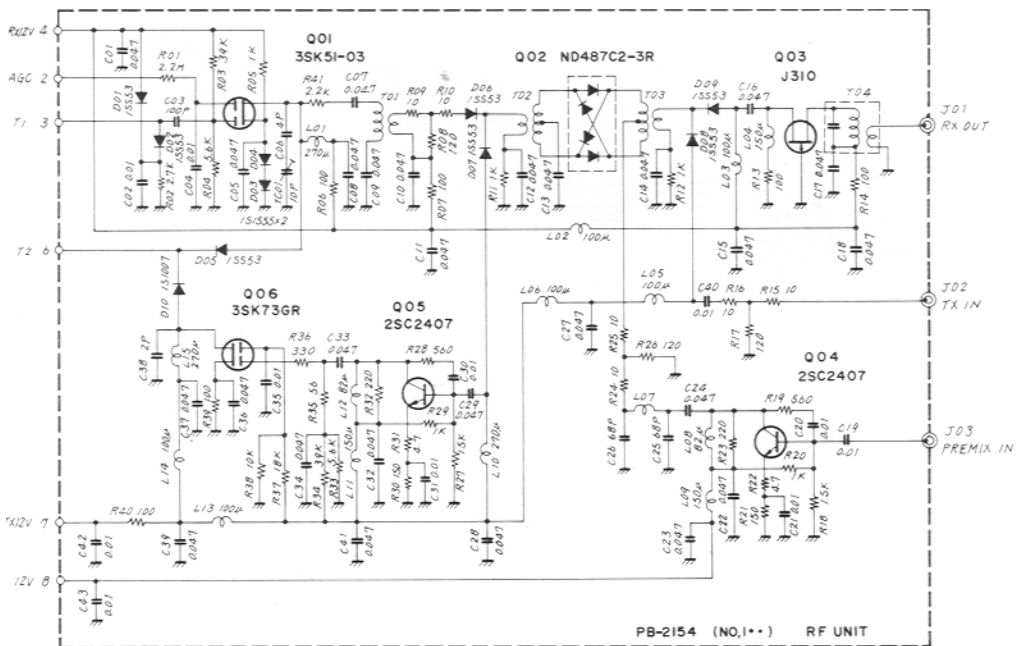

The IF signal is then passed through the SSB filter XF₄₀₁ (or optional CW filter XF₄₀₂). Selection of the filter to be used is made by diodes D₄₀₅ - D₄₀₈ (1S1007), depending on the mode of operation.

The IF signal is then fed to the IF first mixer, Q₄₁₂ (3SK51-03), where the incoming signal is heterodyned with a 19.7475 MHz $\pm\Delta f$ local signal delivered from crystal oscillator Q₄₂₁ (2SC535A) and buffer amplifier Q₄₂₃ (2SC372Y), resulting in a signal of 10.76 MHz $\pm\Delta f$.

The new 10.76 MHz $\pm\Delta f$ signal is fed through filter XF₄₀₅ to the IF second mixer, Q₄₁₃/Q₄₁₄ (2SK19GR), where the filtered signal is heterodyned with the 19.7475 MHz $\pm\Delta f$ signal delivered from Q₄₂₂ (2SC372Y), resulting in an 8.9875 MHz IF signal, the same as the original IF.



This process varies the IF signal across the passband of the second IF filter. The combination of the two filters, XF₄₀₁ and XF₄₀₅, provides continuously variable width of the IF passband. The frequency of crystal oscillator Q₄₂₁ is varied by varactor diode D₄₁₈ (1S2209).

The output from the IF second mixer is fed to a two-stage IF amplifier, consisting of Q₄₁₅ and Q₄₁₆ (3SK51-03), and delivered through diode switch D₄₀₁ (1S1555) to the AF UNIT.


A portion of the output from Q₄₁₆ is rectified by D₄₁₆ and D₄₁₇ (1N60) to produce AGC voltage. Q₄₁₇ (2SC372Y) provides the necessary buffering between the IF and AGC circuits. The AGC voltage is amplified by Q₄₁₈ (2SC372Y), and applied to gate 2 of the RF and IF amplifiers, to control the gain of these stages. The AGC voltage is also amplified by Q₄₁₉ (2SK19GR) for S-meter indication.


For use with the FV-101Z or FV-901DM scanning VFO, or other optional equipment, the AGC voltage is fed through buffer Q₄₂₅ (2SK19GR) and fed to the AGC OUT terminal on the EXT VFO jack, located on the rear panel.


On AM, the output signal from Q₄₁₆ is amplified by Q₂₄₀₈ (2SC380Y) and passed to the AM detector, D₂₄₀₆ (1N60). The resulting audio signal is amplified by Q₂₄₀₉ (2SC1815Y) and delivered to the final audio stage.

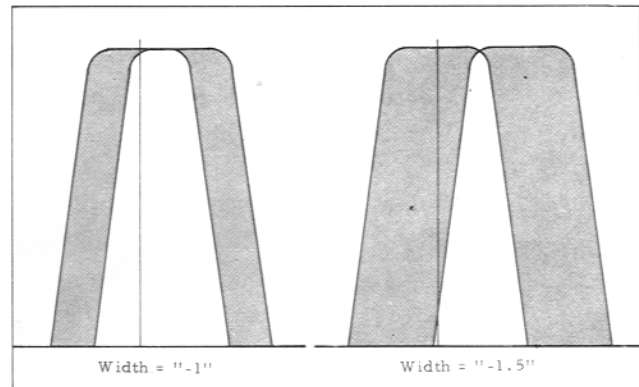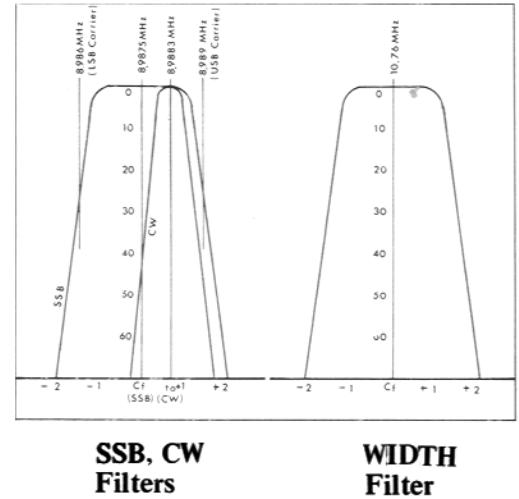

Width Control Action

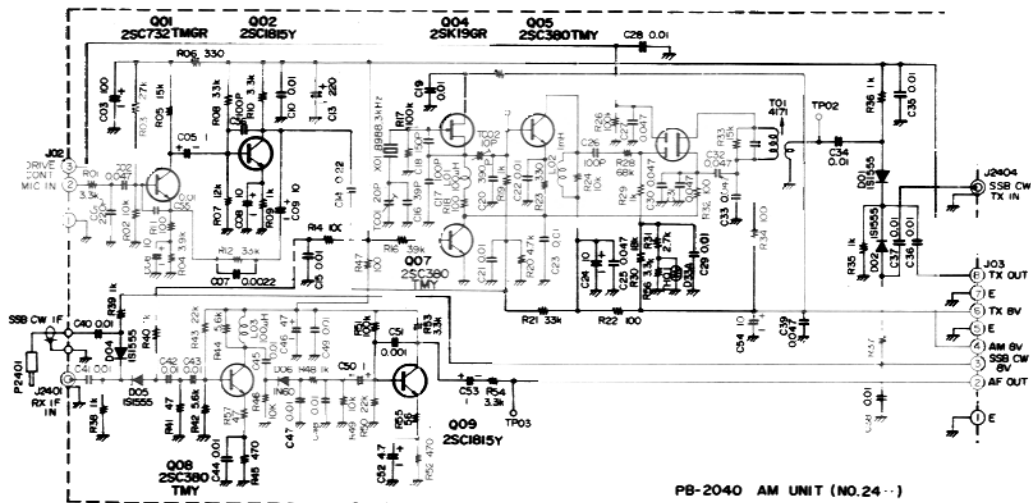

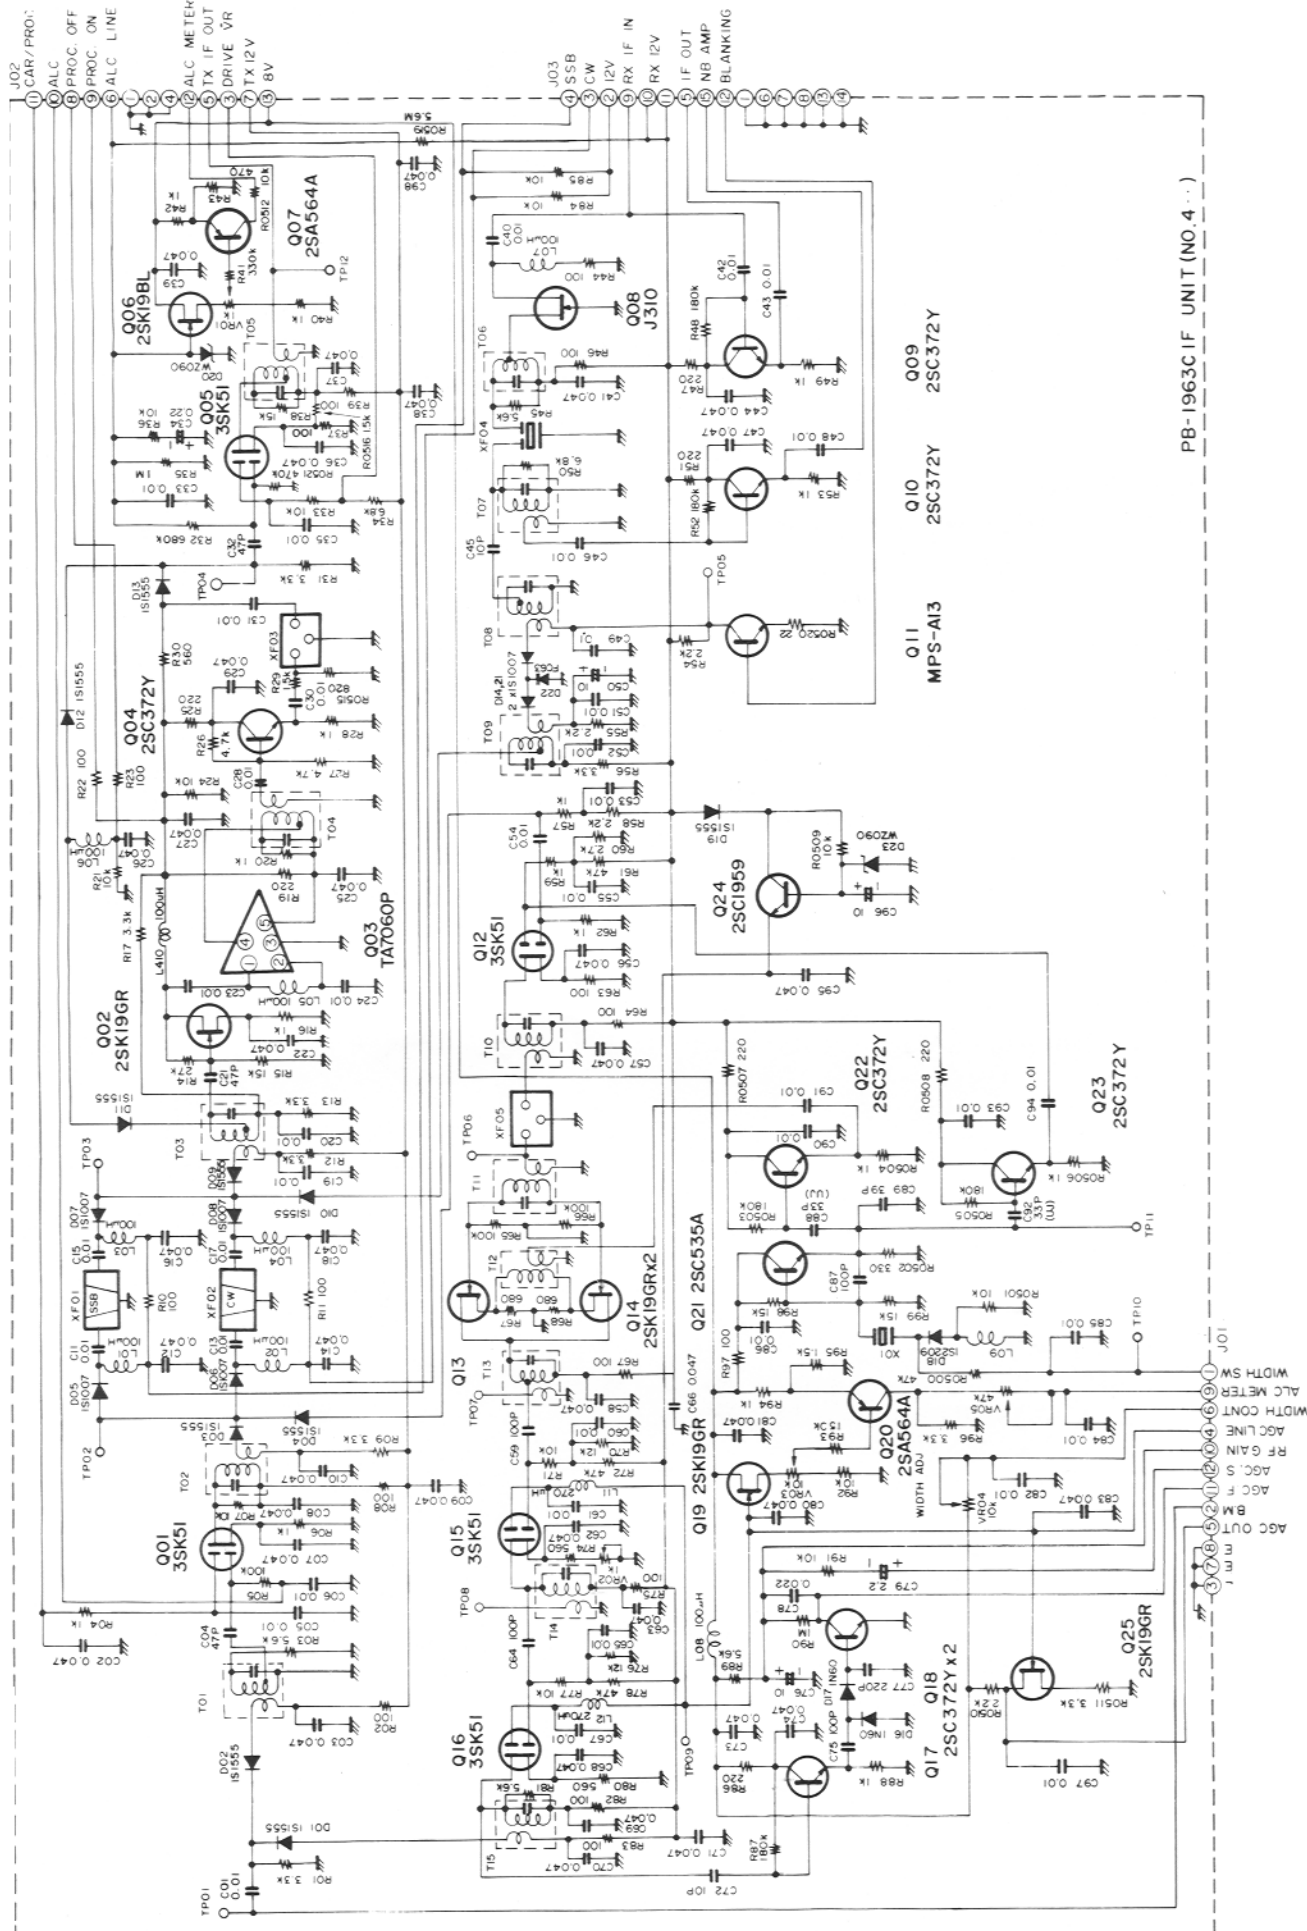

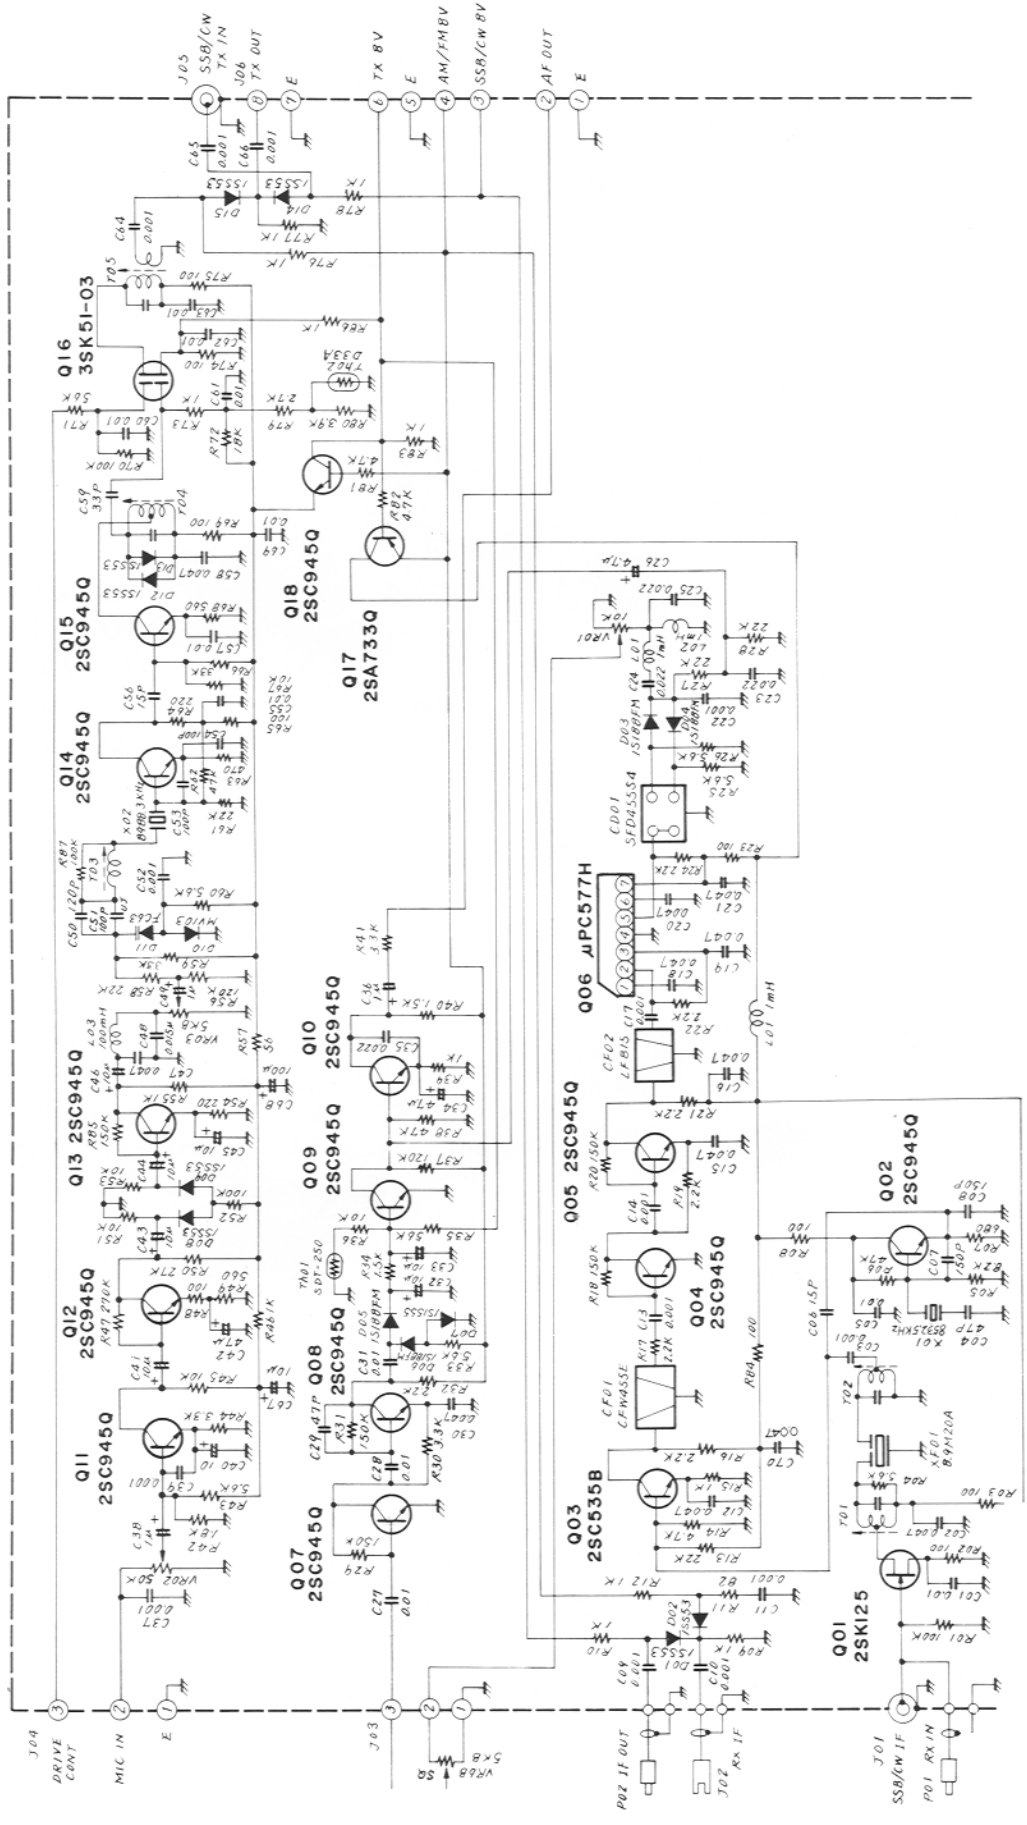

FM UNIT (PB-2219) OPTION

In the FM mode, the IF signal from the RF unit is fed to Q₂₅₀₁ (2SK125), where it is buffered and delivered through a 20 kHz band width monolytic filter, XF₂₅₀₁ (8.9M20A) to a mixer, Q₂₅₀₃ (2SC535B). The IF signal applied to Q₂₅₀₃ is heterodyned with the 8532.5 kHz signal delivered from the local signal oscillator, Q₂₅₀₂ (2SC945Q), thus producing a 455 kHz IF signal. Next the 455 kHz IF signal passes through a ceramic filter, CF₂₅₀₁ (CFW455E) and is amplified by a two-stage amplifier, Q₂₅₀₄, Q₂₅₀₅ (2SC945Q), and then is fed through another ceramic filter, CF₂₅₀₂ (LFB15) to an amplifier limiter, Q₂₅₀₆ (μ PC577H), where any amplified variations in the signal are removed.

A frequency discriminator consisting of CD₂₅₀₁ (SFD455S4) and D₂₅₀₃, D₂₅₀₄ (1S188FM) produces an audio output in response to a corresponding frequency shift in the 455 kHz IF signal. The discriminator output is first delivered through a de-emphasis circuit consisting of R₂₅₂₇, R₂₅₂₈ and C₂₅₂₃, and then sent to Q₂₅₁₀ (2SC945Q).

When no carrier is present in the 455 kHz IF, the noise at the discriminator output is amplified by Q₂₅₀₇ and Q₂₅₀₈, and detected by D₂₅₀₅, D₂₅₀₆ and D₂₅₀₇ (1S188FM) to produce a DC voltage. This voltage is applied to turn "on" Q₂₅₀₉ (2SC945Q). The thermistor, TH₂₅₀₁ (STD-250) maintains the threshold level of the squelch control, corresponding to temperature changes.

While the Q₂₅₀₉ is "on", the base of Q₂₅₁₀ (2SC945Q) is grounded to quiet the audio amplifier. When a carrier is present, the noise from the discriminator output is suppressed to turn "off" Q₂₅₀₉, preventing normal action of Q₂₅₁₀. The squelch control, VR_{6b}, sets the squelch threshold level.


NB-FIX UNIT (PB-1961)

A portion of the 8.9 MHz IF signal is fed through buffer Q₄₁₀ (2SC372Y) and amplified by Q₂₀₆ and Q₂₀₅ (2SC1583).

When a carrier of noise-free modulated signal is received, the IF signal is rectified by D₂₀₁ and D₂₀₂ (1N60), producing a DC voltage. This DC voltage is amplified by Q₂₀₂ (2SC372Y), which charges C₂₁₄, for AGC purposes. The AGC voltage is used to control the gain of Q₂₀₆ and Q₂₀₅.

When impulse-type noise is received, D₂₀₃ and D₂₀₄ (1N60) rectify the IF signal, producing a DC voltage which controls the NB switch Q₄₁₁ (2SC372Y).

Noise pulses have a very short duration, but high amplitude. Because of the very slow time constant of the C₂₁₄/R₂₁₂ discharge path, AGC voltage is not induced by these short-duration pulses. Therefore, Q₂₀₆ and Q₂₀₅ operate at full gain, providing

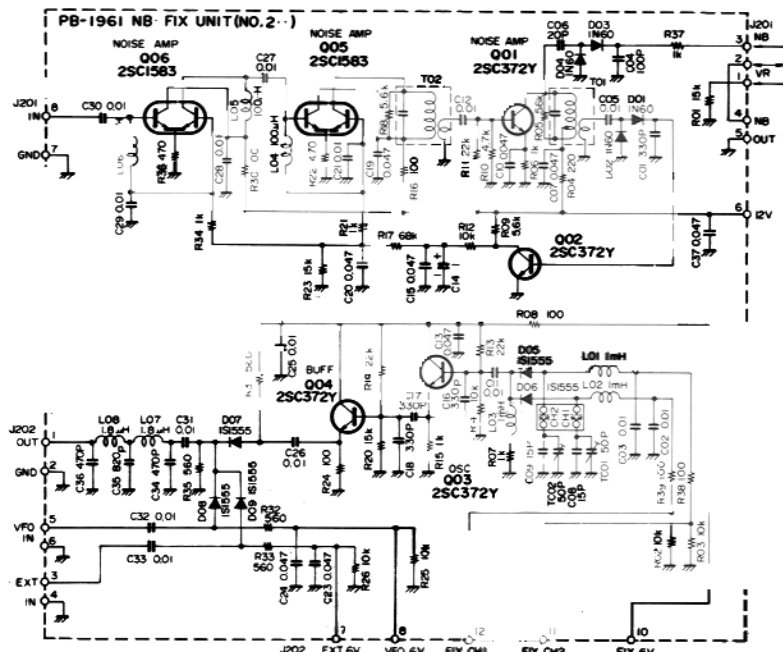

maximum voltage to the base of Q_{411} . When a pulse is received, Q_{411} biases D_{414} to block the signal path momentarily. When a desired signal and a noise pulse are received simultaneously, the blanking action is not impaired, because the relative amplitude difference between the desired signal and the noise pulse is still high. The front panel noise blanker level control varies the DC voltage applied to the base of Q_{411} .

AF UNIT (PB-1964)

The IF signal from pin 2 is fed through T_{501} to the ring demodulator, consisting of $D_{502} - D_{505}$ (1S1007), where the IF signal is demodulated into audio, using the carrier signal delivered from Q_{503} (2SC1815Y). The carrier signal is generated by oscillator Q_{514} (2SK19GR), and it oscillates at one of the following frequencies:

USB, CW·RX	8989 KHz
LSB	8986 KHz
CW·TX	8988.3 KHz

The audio signal is then amplified by audio amplifier Q_{507} , Q_{508} (2SC1000GR) and delivered to the APF UNIT. The audio signal from the APF UNIT is amplified by the audio power amplifier, Q_{5001} (μ PC2002H), delivering 3 watts of audio output to the speaker.

The audio spectrum is shaped by an active low-pass filter of $f_0 = 2.7$ kHz, -12 dB/octave.

APF UNIT (PB-2217)


The APF UNIT is placed in the audio circuit by the APF/NOTCH switch on the front panel. For APF operation, a selective active filter is formed by $Q_{1502(a)}$, and the output is delivered to the AF UNIT through the AF GAIN control.

The sections of $Q_{1502(b)}$, are also used for the high-Q notch filter. APF VR provides for adjustment of the center frequency of the audio peak and notch filter.


A portion of the audio signal at AF GAIN control is amplified by Q_{1501} (2SC1815Y) to provide a fixed level audio signal to the AF OUT jack on the rear panel.

MARKER GENERATOR

A 25 kHz marker signal is provided, for alignment and testing purposes. Marker generator Q_{509} (2SC1815Y) generates a basic 3200 kHz signal, which is divided into 25 kHz multiples by Q_{506} (MC14024B), a binary counter.

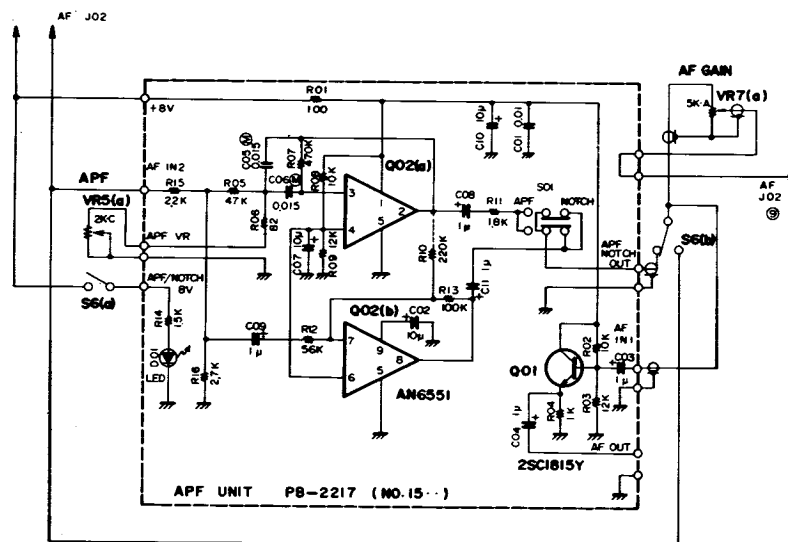

APF UNIT

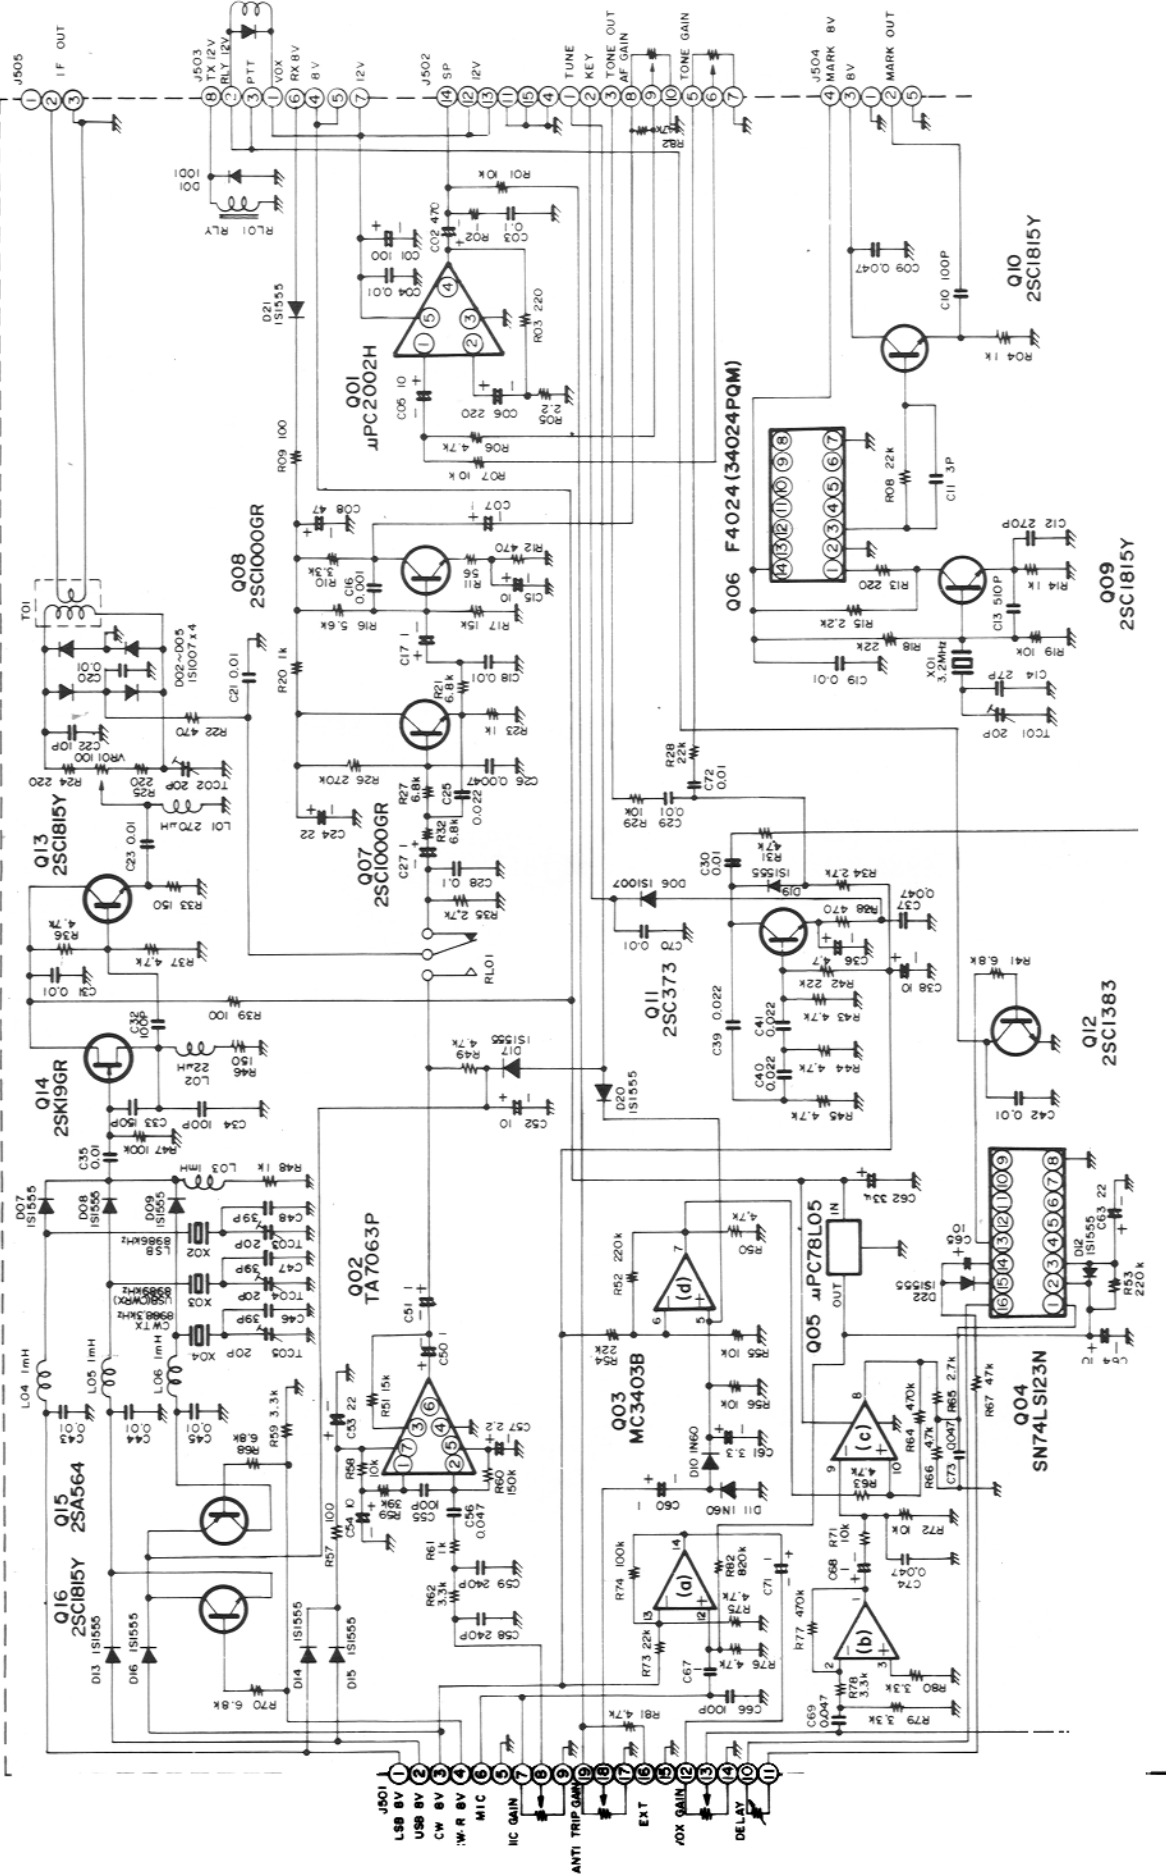

TRANSMIT CIRCUIT

SSB MODE

The output from microphone jack J₂ is fed through the MIC GAIN control VR_{3a} to pin 8 of the AF UNIT.

AF UNIT (PB-1964)

The speech signal from pin 8 is amplified by microphone amplifier Q₅₀₂ (TA7063P) and fed through relay RL₅₀₁ to the ring modulator, D₅₀₂ - D₅₀₅, where the speech signal modulates the carrier signal delivered from Q₅₁₃. The resulting double sideband signal is fed to the IF UNIT.

IF UNIT (PB-1963)

The 8.9875 MHz double sideband signal is amplified by Q₄₀₁ (3SK51-03) and passed through sideband filter XF₄₀₁ by diode switches D₄₀₃, D₄₀₉ (1S1555), D₄₀₅, and D₄₀₇ (1S1007). Here the signal is converted to a single sideband signal by removal of the unwanted sideband.

The signal is then fed to buffer amplifier Q₄₀₂ (2SK19GR). When the RF speech processor is OFF, diode switches D₄₁₁ and D₄₁₂ (1S1555) feed the IF signal to IF amplifier Q₄₀₅ (3SK51-03). When the RF speech processor is ON, the SSB signal is amplified by buffer amplifier Q₄₀₂ (2SK19GR) and further amplified by limiter Q₄₀₃ (TA7060P), where signals that exceed the preset clipping level are sliced out.

This highly clipped SSB signal is amplified by buffer amplifier Q₄₀₄ (2SC372Y) and passed through a selective filter, XF₄₀₃, which removes RF harmonics that result from signal clipping. The signal is then fed to IF amplifier Q₄₀₅, and subsequently delivered to the RF UNIT. The front panel COMP LEVEL control, VR₄, controls the voltage at gate 2 of Q₄₀₁, thus setting the processor level.

The return of the grid circuit of the final amplifier tubes is fed to Q₄₀₆ (2SK19BL), which produces ALC voltage. This voltage is fed to gate 1 of Q₄₀₅,

controlling the gain of this stage. When the RF processor is off, ALC voltage is also fed to gate 1 of Q₄₀₁. Q₄₀₇ (2SA564) amplifies the ALC voltage for indication on the front panel meter.

RF UNIT (PB-2154)

The IF signal from J₁₀₂ is delivered to the Schottky barrier diode module Q₁₀₂ (ND487C2-3R), where the IF signal is mixed with a local signal delivered from Q₁₀₄ (2SC2407), producing the RF output signal. The RF signal is then amplified by Q₁₀₅ (2SC2407) and Q₁₀₆ (3SK40M), and fed through diode switch D₁₁₀ (1S1007) to the DRIVE UNIT.

DRIVE UNIT (PB-1714), PA UNIT (PB-1715)

The RF signal is amplified by driver V₁₆₀₁ (12BY7A), and delivered to PA UNIT final amplifier tubes V₁₇₀₁ and V₁₇₀₂ (6146B). The output from the final tubes is fed to the antenna jack.

A portion of the RF signal is coupled through C₁₄ to the cathode of the 12BY7A driver, for the purpose of improving the linearity of the final amplifier. This technique is known as RF negative feedback.

CW MODE

For CW, the 8.9883 MHz carrier is generated by oscillator Q₅₁₄ at the frequency set by X₅₀₄. The carrier signal is fed through buffer Q₅₁₃ and fed to the ring modulator. The same carrier frequency is used in the tune mode.

DC voltage is applied through diode switch D₅₁₇ (1S1555) and relay RL₅₀₁, unbalancing the ring modulator for CW operation. The carrier signal is then fed to the IF UNIT. The signal path is identical to that on SSB, up to the DRIVE UNIT.

DRIVE UNIT (PB-1714), PA UNIT (PB-1715)

Keying of the transmitter is accomplished by changing the bias voltage to the driver and final tubes. During "key up," the tubes are cut off by application of -35 volts to V₁₆₀₁ and -110 volts to V₁₇₀₁ and V₁₇₀₂. These cutoff voltages are

reduced to -0.1 volt and -60 volts, respectively, during "key down" conditions.

The key is connected to the KEY 2 terminal on the RECT B board, PB-1968. When the key is closed, the base of Q_{1001} (2SA733) is grounded, causing Q_{1002} (2SC372Y) to conduct. The base of Q_{1003} (2SA639) is thus set to 0 when the transistor conducts. Under these circumstances, the bias voltage applied to V_{1601} , V_{1701} , and V_{1702} places these tubes in the normal operating condition.

VOX circuit

A portion of the microphone input signal is amplified by three stages of Q_{503} (MC3403P), which drive the VOX control gate, Q_{504} (SN74LS123N). The output from pin 13 of Q_{504} is fed to the base of Q_{512} (2SC1383), switching the VOX relay on and off according to the presence or absence of a speech signal.

A portion of the speaker output is detected by D_{510} and D_{511} (1N60), providing a bucking voltage which is fed to Q_{503} , preventing the speaker output from tripping the VOX.

The VOX delay may be set by adjusting VR_{2b} for the desired delay time.

CW SIDETONE

CW sidetone oscillator Q_{511} (2SC373) oscillates at a frequency of approximately 800 Hz. The output from Q_{511} is amplified by the final audio amplifier, Q_{501} , for delivery to the speaker. The output from the sidetone oscillator is also fed to VOX amplifier Q_{503} , providing semi-break-in operation for CW.

AM MODE

The speech signal from the microphone is amplified by Q_{2401} (2SC732GR) and Q_{2402} (2SC1815Y) and passed to modulator Q_{2405} (2SC380Y), where the speech signal modulates the AM carrier signal at 8988.3 kHz delivered from Q_{2404} (2SK19GR). The modulated signal is amplified by Q_{2406} (3SK51) and delivered to transmit mixer Q_{105}/Q_{106} .

FM MODE

The speech signal from the AF unit is fed through two stages of amplifier, consisting of Q_{2511} and Q_{2512} (2SC945Q), and this amplified signal is passed to the instantaneous deviation control (IDC) circuit, where both positive and negative peaks are clipped by D_{2508} and D_{2509} (1SS53). The output from the IDC is fed through Q_{2513} (2SC945Q), where the signal is amplified and then fed to the de-emphasis circuit, consisting of C_{2547} , C_{2548} and L_{2503} . This signal passes through VR_{2503} , where determines the maximum deviation, to the modulator D_{2511} (FC63) while Q_{2514} (2SC945Q) oscillates at a crystal frequency of 8988.3 kHz, and its frequency is modulated by variable capacitance diode D_{2511} . The output from Q_{2514} is amplified by Q_{2515} (2SC945) and Q_{2516} (2SK51-03) and then fed through a diode switch D_{2515} (1SS53) to pin 6 of J_{2506} . The output from the terminal is delivered to the IF unit.

VFO UNIT (PB-1440B-3420)

A modified Colpitts-type oscillator is used to generate a 5.0 - 5.5 MHz VFO signal, thus producing a 500 kHz tuning range. The oscillator signal generated by Q₈₀₁ (2SC372Y) is varied by VC₈₀₁, which is geared to a precision-built dial tuning mechanism. VC₈₀₁ consists of two sections; the sub-blades compensate for the capacitance variation of the main blades, which may result from extreme temperature change.

Varactor diode D₈₀₁ (1S2209) may be varied by tuning L₈₀₆, providing ±2.5 kHz offset from the dial frequency (clarifier).

The VFO signal is amplified by buffer amplifiers Q₈₀₂ (2SK19GR) and Q₈₀₃ (2SC372Y), and passed to the PREMIX UNIT.

NB & FIX UNIT (PB-1961)

Two crystal-controlled channels are provided for operation with this transceiver. The oscillator signal is generated by Q₂₀₃ (2SC372Y) and amplified by Q₂₀₄ (2SC372Y), and delivered to the PREMIX UNIT. Crystals X₂₀₁ and X₂₀₂ oscillate in the 5.0 - 5.5 MHz range.


Crystal oscillators Q₆₀₁–Q₆₁₂ (2SC380Y) generate the premix local signal at the frequencies shown in Table 3. Diode switches D₆₀₁–D₆₁₂ (1S1555) select the proper local signal for the band in use. The local signal is then delivered to the PREMIX UNIT.

PREMIX UNIT (PB-2152)



The premix signal is produced at Q₃₀₃ (SN76514N), a double-balanced mixer, where the premix local signal from Q₆₀₁–Q₆₁₂ is mixed with the VFO or crystal controlled 5 MHz signal. The premix output frequencies are shown in Table 3. The premix signal is passed through bandpass filter T₃₀₁–T₃₀₄, and amplified by Q₃₀₁, Q₃₀₂ (2SC1923R). The amplified signal is then fed to the RF UNIT, where the signal is further amplified by Q₁₀₇ for delivery to the transmitter and receiver mixers.

		XCO Frequency	PREMIX OUT Frequency
160m	X ₆₀₁	15.9875MHz	10.4875~10.9875MHz
		17.9875MHz	12.4875~12.9875MHz
	∇	21.4875MHz	15.9875~16.4875MHz
	X ₆₀₄	24.4875MHz	18.9875~19.4875MHz
	X ₆₀₅	28.4875MHz	22.9875~23.4875MHz
	X ₆₀₆	32.4875MHz	26.9875~27.4875MHz
15m	X ₆₀₇	35.4875MHz	29.9875~30.4875MHz
12m	X ₆₀₈		33.4875~33.9875MHz
10m A	X ₆₀₉		36.9875~37.4875MHz
10m B	X ₆₁₀	42.9875MHz	37.4875~37.9875MHz
10m C	X ₆₁₁	43.4875MHz	37.9875~38.4875MHz
10m D	X ₆₁₂	43.9875MHz	38.4875~38.9875MHz

Table 3

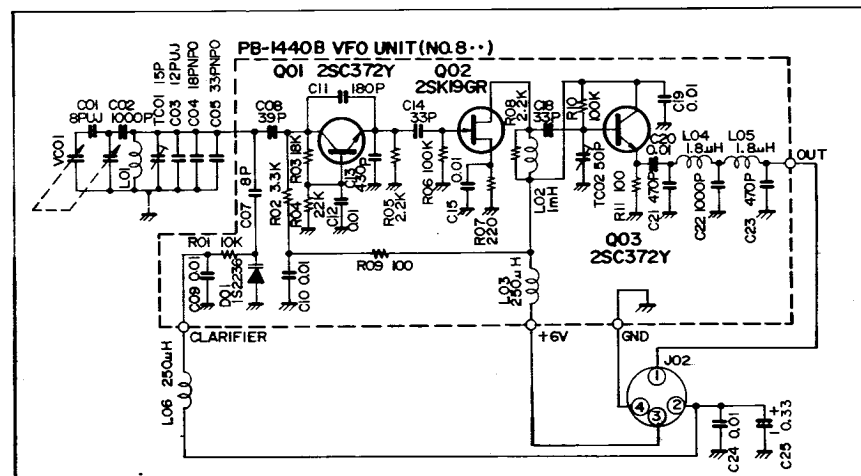

PB-2153 PREMIX LOCAL UNIT (NO.6-)

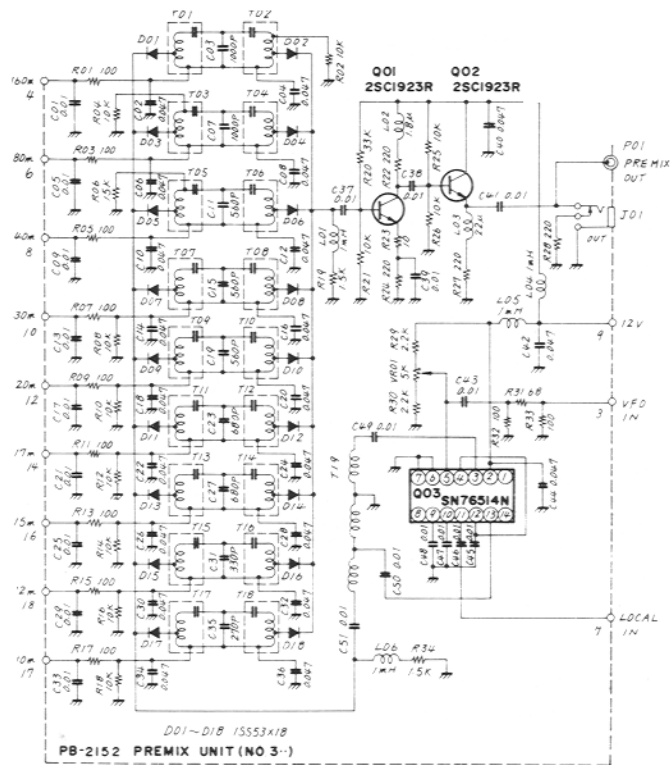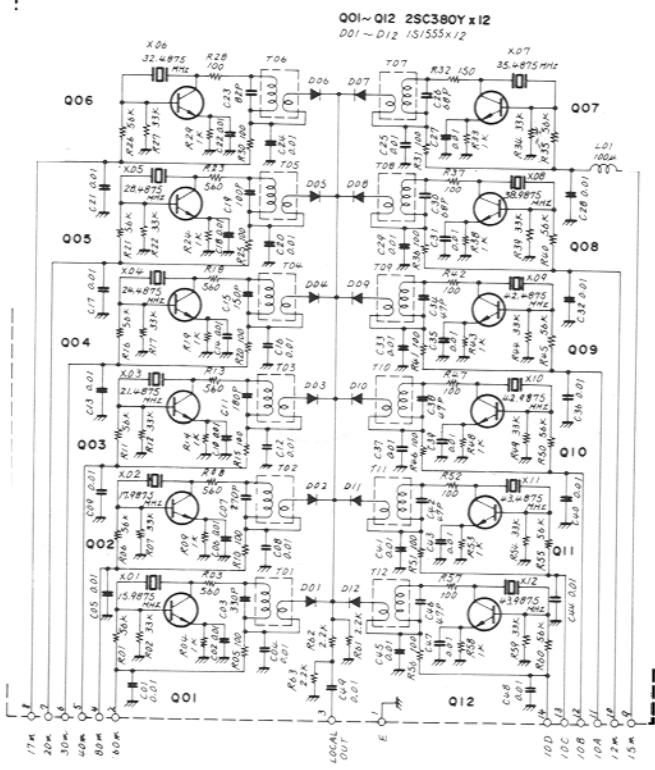

	Nominal Premix Local Frequency	L S B	U S B	CW, AM/FM
160m	10.4875-10.9875(MHz)	10.486-10.986(MHz)	10.489-10.989(MHz)	10.4883-12.9883(MHz)
80m	12.4875-12.9875	12.486-12.986	12.489-12.989	12.4883-12.9883
	15.9875-16.4875	15.986-16.486		15.9883-16.4883
	18.9875-19.4875	18.986-19.486	18.989-19.489	18.9883-19.4883
20m	22.9875-23.4875		22.989-23.489	22.9883-23.4883
17m	26.9875-27.4875	26.986-27.486	26.989-27.489	26.9883-27.4883
15m	29.9875-30.4875	29.986-30.486	29.989-30.489	29.9883-30.4883
12m	33.4875-33.9875	33.486-33.986	33.489-33.989	33.4883-33.9883
10m A	36.9875-37.4875	36.986-37.486		36.9883-37.4883
10m B	37.4875-37.9875	37.486-37.986		37.4883-37.9883
10m C	37.9875-38.4875	37.986-38.486		37.9883-38.4883
10m D	38.4875-38.9875	38.486-38.986		38.4883-38.9883

Table 4


COUNTER UNIT (PB-2086A-3420/PB-2098)

The local oscillator signal is applied to Large-Scale Integrated Circuit (LSI) chip for display on the front panel digital display.


The premix signal as shown in Table 4 from the LOCAL unit, is amplified by Q2301. The amplified signal is further amplified by Q2303 (2SC1674) and delivered to the LSI counter chip, Q2312 (MSM95 20RS). A portion of the output from Q2303 is

amplified by Q2304 (2SC1815Y) and fed to gate 2 of Q2301 controlling the gain of those amplifiers.

The output from the LSI is fed to the display. The output from pins 24 through 30 is delivered to segment drivers Q2313-Q2319 (2SA952L) and digit drivers Q2306-Q2311 (2SA952L) through a dynamic drive configuration. Display is performed by D2201-D2206 (HP5082-7623), seven-segment light-emitting diodes.

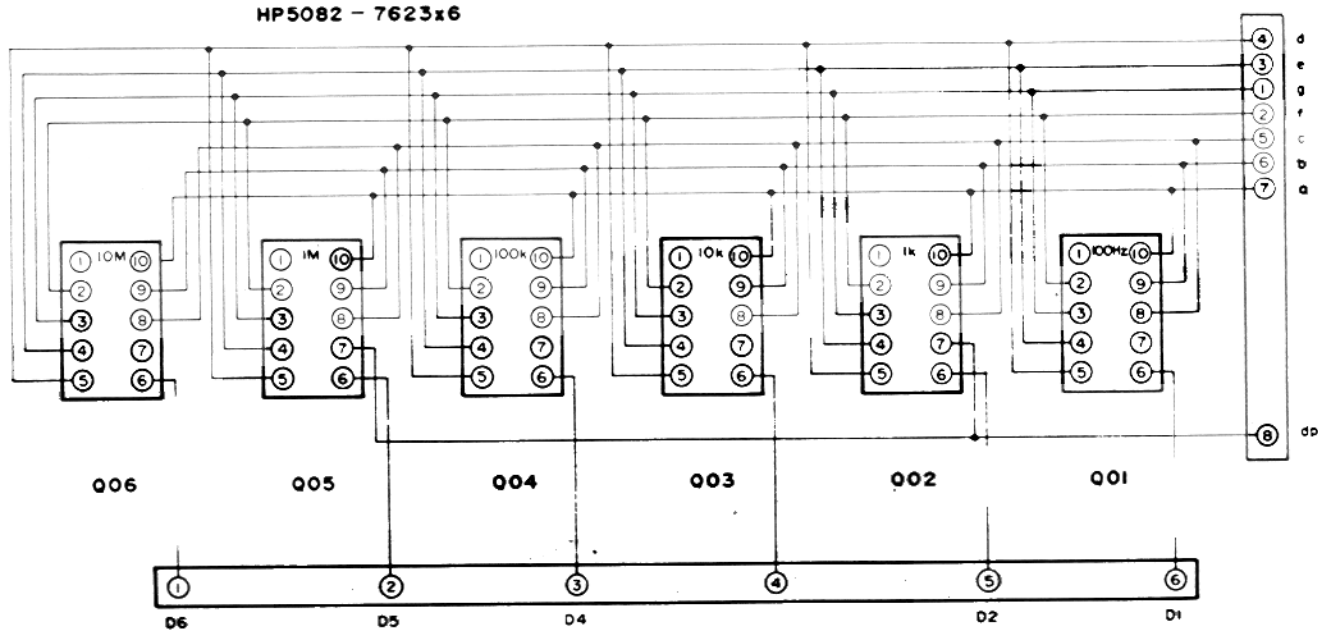

DISPLAY UNIT PB-209B

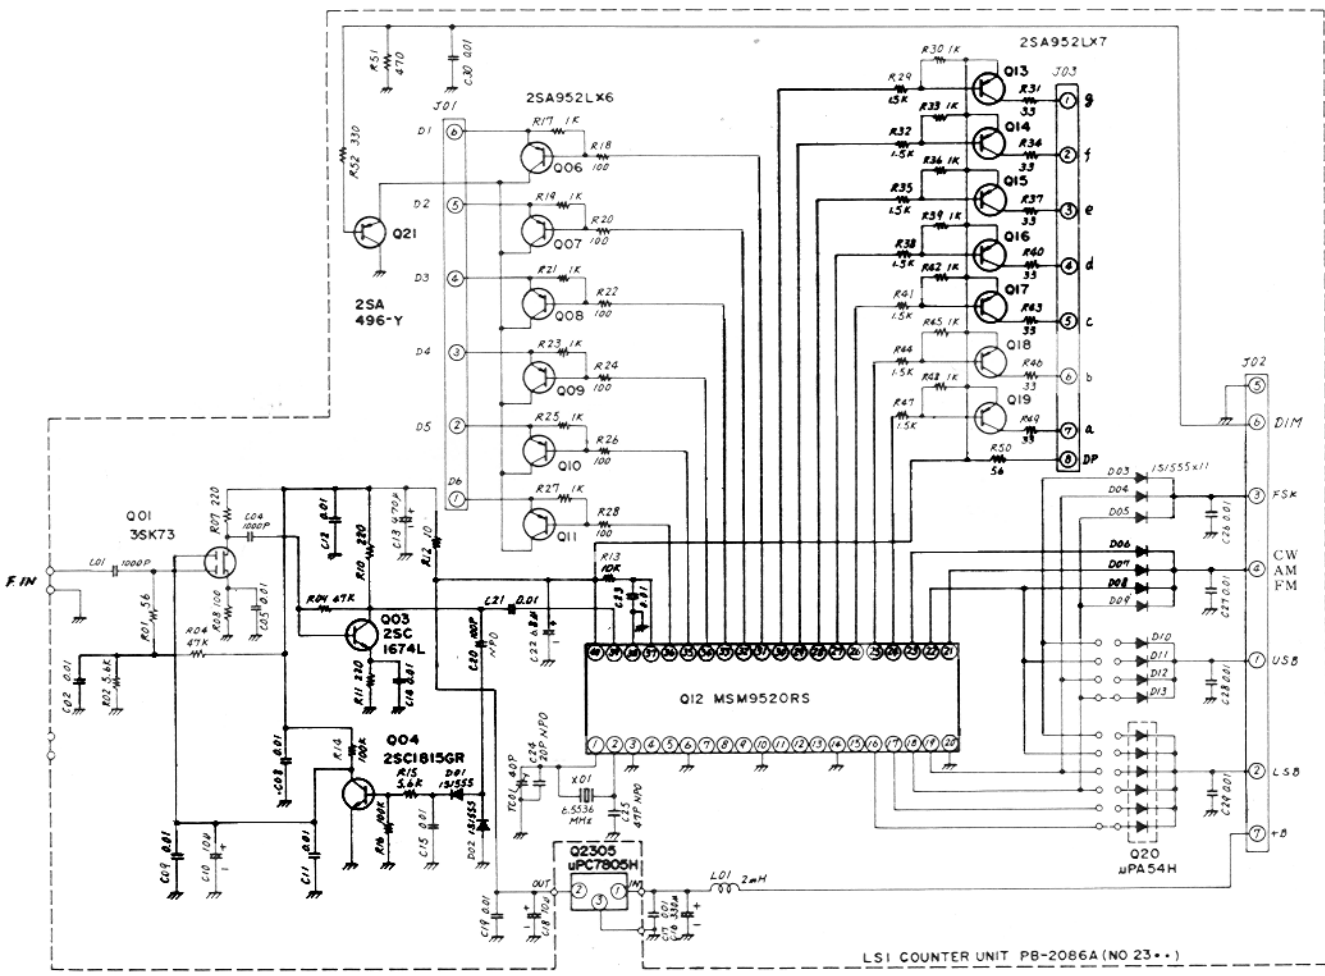

LSI COUNTER UNIT PB-2086A (NO 23...)

DISPLAY/COUNTER UNIT

POWER SUPPLY

The power supply is designed to operate from 100/110/117/200/220/234 volts AC. A DC-DC converter is an available option, providing operation from 13.5 volts DC. Insertion of the appropriate power plug into the rear panel receptacle makes the necessary connections for AC or DC operation.



When the transceiver is operated from a DC 13.5 volt power source, using the optional DC-DC converter, transistors Q₃₂₀₁ and Q₃₂₀₂ (T20A6) function as a low frequency oscillator, providing AC voltage at approximately 80 Hz to the power transformer. All of the tube heaters receive their power through the HEATER switch on the front panel. When the HEATER switch is OFF, voltage is still supplied to the receiver section, thus allowing continuous reception with reduced power consumption. The heaters of the two 6146B are connected in series to operate at 12 volts DC.


The 14 volt AC power delivered from the secondary winding of the power transformer is rectified by D₉₀₅ and D₉₀₆ (V06B). Voltage regulators Q₁ (2SB616), Q₉₀₁ (78L12), and Q₉₀₃ (2SA495) stabilize the DC supply at 12 volts. The supply voltage is further stabilized at 8 volts by Q₃ (μ PC14308) for delivery to the counter, AF, and other units. The 6 volt supply for the VFO is provided through zener diode D₉₀₈ (WZ061), while the 5 volt supply for the TTL integrated circuits is provided by Q₅₀₅ (78L05).

The power amplifier plate voltage of +800 volts is supplied from the bridge-controlled doubler, located on the RECT. A UNIT, and consisting of D₉₀₁ - D₉₀₄ (10D10).


AC 190 volts is rectified by D₁₀₀₂ (10D10), producing 210 volts for the screen grid supply of the power amplifier tubes. The screen grid voltage for the driver tube is obtained by rectifying 250 volts AC at D₁₀₀₁ (10D10), producing 300 volts. This voltage is dropped to 180 volts by a resistor for delivery to the driver tube screen grid.

The 120 volt AC power from the transformer secondary winding is rectified by D₁₀₀₃ (10D10) in order to obtain -140 volts for the driver and final amplifier tube grid bias.

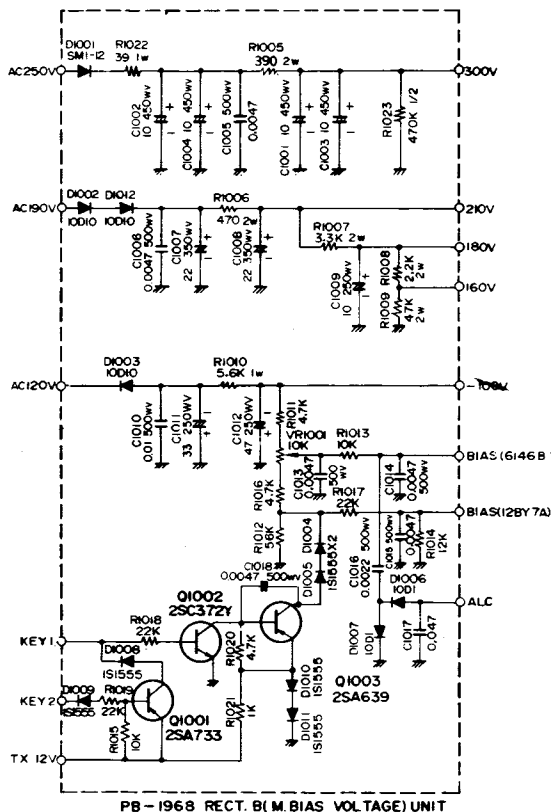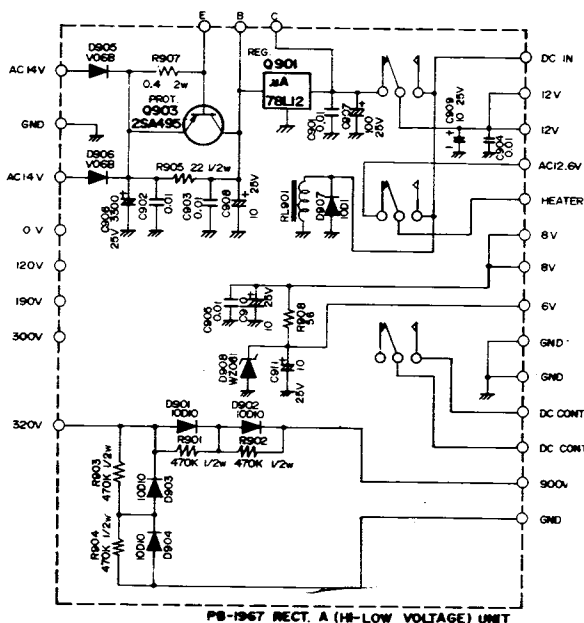

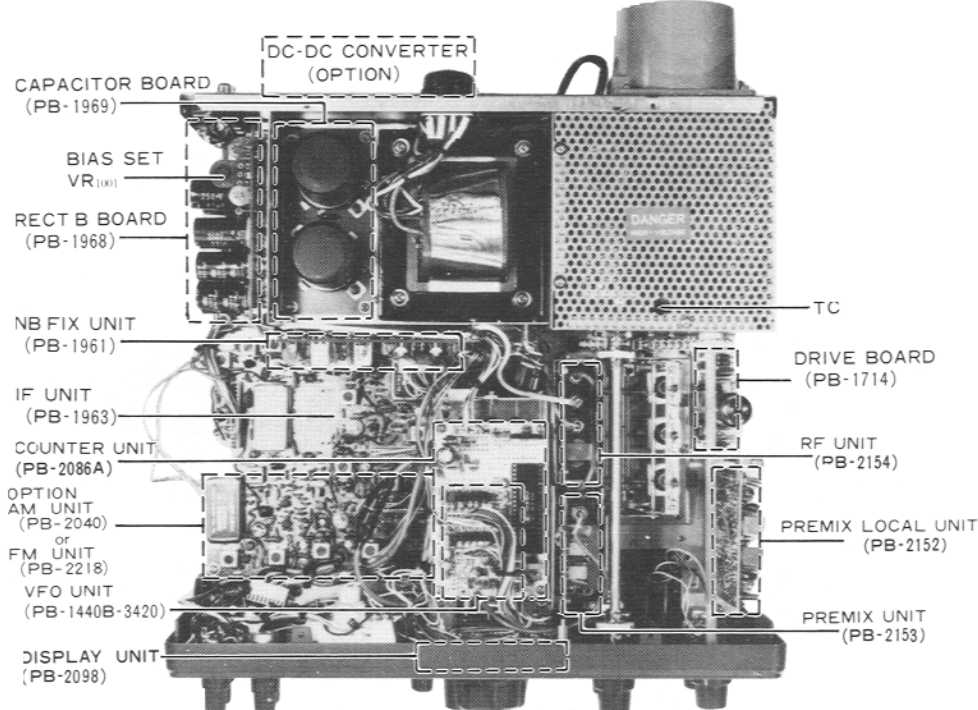

TOP VIEW

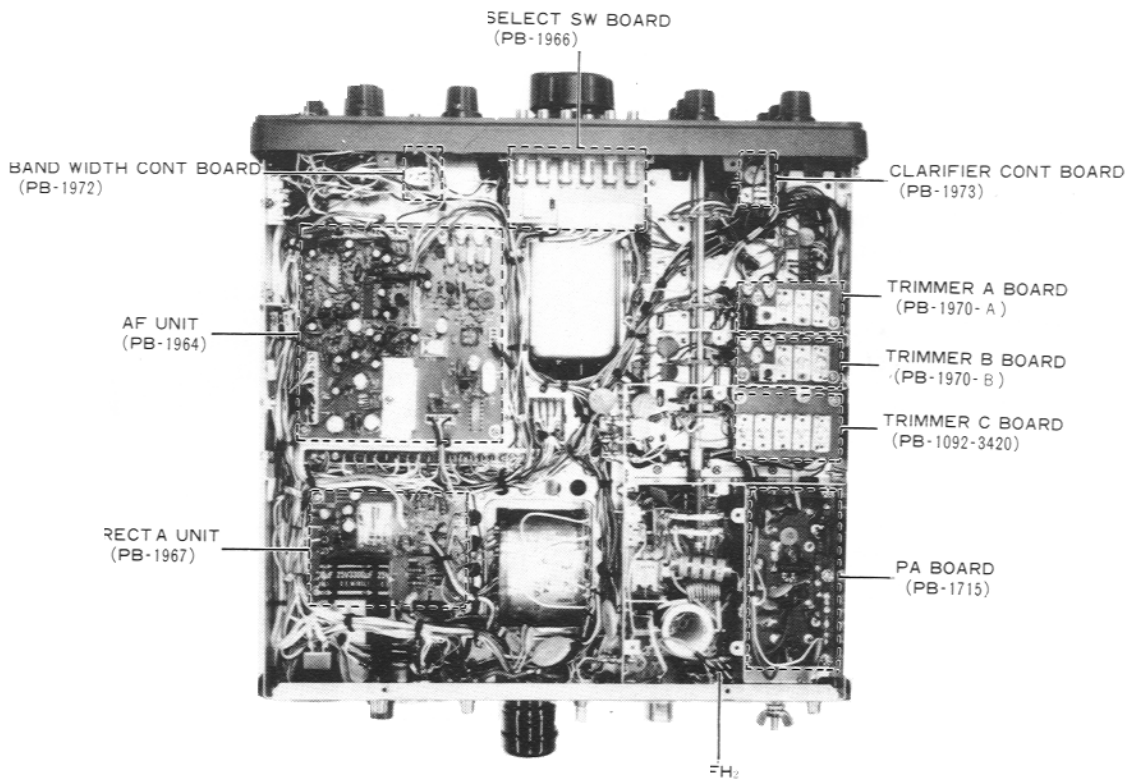

BOTTOM VIEW

MAINTENANCE AND ALIGNMENT

WARNING

DANGEROUS VOLTAGES ARE PRESENT WITHIN THIS TRANSCEIVER. USE EXTREME CAUTION WHEN WORKING ON THE TRANSCEIVER WITH THE COVERS REMOVED. DISCHARGE ALL CAPACITORS BY SHORTING THEM TO GROUND WITH AN INSULATED SCREWDRIVER AFTER POWER HAS BEEN REMOVED. OBSERVE NORMAL SAFETY PRECAUTIONS AT ALL TIMES.

CAUTION

Never operate this transceiver in the transmit mode without a matched antenna or dummy load connected to the antenna receptacle on the rear panel. It is possible to damage the final amplifier tubes and the pi network components if the transmitter is operated without the proper load termination.

GENERAL

This transceiver has been carefully aligned and tested at the factory. With normal use, it should not require other than the usual attention given to electronic equipment. Service or realignment of a major component may require substantial adjustment; under no circumstances, though, should realignment be attempted unless the operation of the transceiver is fully understood, the malfunction has been carefully analyzed, and the fault has definitely been traced to misalignment. Sudden difficulties are almost always caused by component failure rather than misalignment.

Service work should only be performed by experienced personnel, using the proper test equipment.

EQUIPMENT REQUIRED

(1) RF Signal Generator: Hewlett-Packard Model 606A or equivalent, with one volt output at 50 ohms, and frequency coverage to 30 MHz.

- (2) Vacuum Tube Voltmeter (VTVM): Hewlett-Packard Model 410B or equivalent, with an RF probe good to 40 MHz.
- (3) Dummy Load: Yaesu Model YP-150Z or equivalent, with 50 ohm non-reactive load impedance, rated to 150 watts average power.
- (4) AF Signal Generator: Hewlett-Packard Model 200AB or equivalent.
- (5) A general coverage receiver covering 3 to 30 MHz, with a 100 kHz crystal calibrator.
- (6) A frequency counter, Yaesu Model YC-500 or equivalent, with resolution to 0.01 kHz and frequency coverage to 30 MHz.
- (7) An oscilloscope, Hewlett-Packard Model 1740A or equivalent.

AF UNIT ALIGNMENT

VOX Circuit

A. Antitrip level setting

1. Tune in a signal on the FT-101ZD receiver, and adjust the AF GAIN control for a normal listening level. Position the microphone near the speaker, with the MODE switch in the SSB mode. Increase the VOX GAIN control on the front panel until the speaker output causes the VOX relay to switch the transceiver to transmit. Set the ANTITRIP control VR₉, located on the rear apron, to the point that will just prevent the speaker output from tripping the VOX relay.
2. Now place the microphone in the normal operating position, and speak into the microphone to see if your voice will activate the VOX relay. If not, VR₉ may be advanced too far.

B. VOX relay delay setting

1. Adjust the DELAY control VR_{2b}, located on the front panel, for the desired delay time. This may require a different setting for phone and CW operation, owing to differing operating techniques. For CW or phone operation using a footswitch, the VOX GAIN control may be rotated fully counter-clockwise to the PTT position.


1. The CW sidetone level may be adjusted by means of VR₁₀, located on the rear apron.

Marker Frequency setting

1. Preset the controls as follows:
 BAND 30 m
 DIAL 10 MHz
 PRESELECT . Peaked for maximum response
 MODE TUNE
2. Place the NB/MARK switch in the MARK position. Tune in the WWV or JJY signal, and adjust TC₅₀₁ for an exact zero beat with the carrier of the incoming signal.

A. SSB Carrier Point

1. Tune up the transmitter on 20 meters, LSB mode, into a dummy load. Apply a 1 kHz audio signal to the microphone input, and adjust the audio generator output until the transmitter power output is 60 watts, as indicated on the dummy load wattmeter.
2. Shift the audio generator output frequency to 300 Hz, without changing the output level. Adjust TC₅₀₃ for a power output reading of 15 watts on the wattmeter.
3. Shift the MODE switch to USB. Adjust TC₅₀₄ for an identical 15 watt reading on the wattmeter.

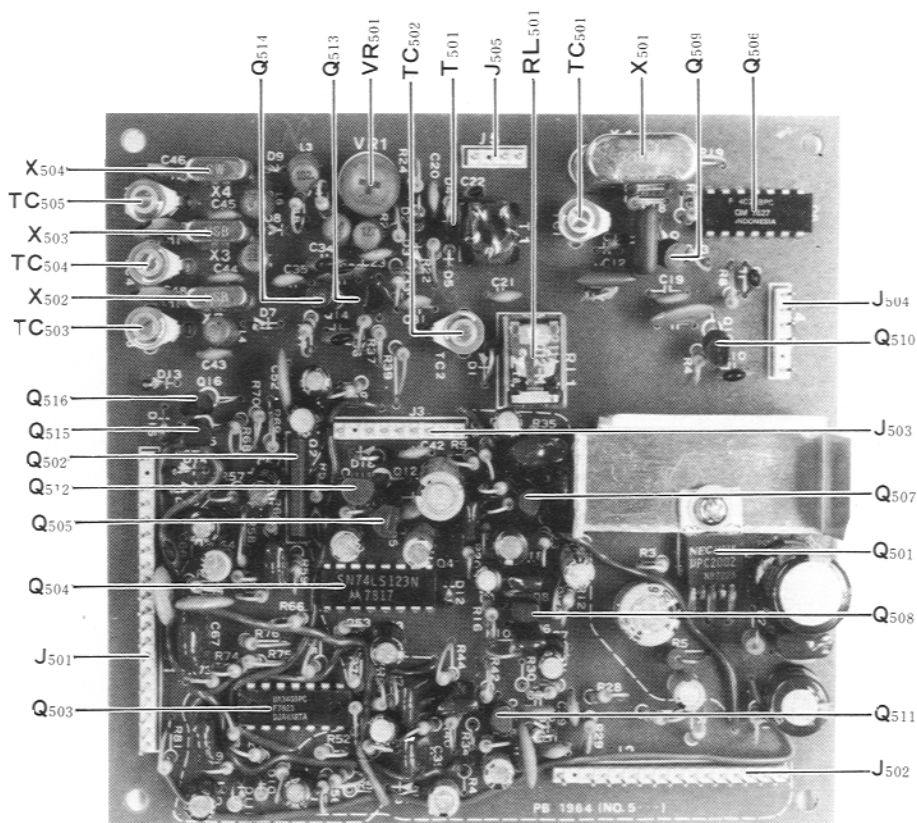

AF UNIT(PB-1964)

4. Recheck the LSB adjustment, as well as the carrier balance adjustment, after performing the carrier point alignment. The background noise, when switching between USB and LSB, should not change.

B. Carrier Balance


1. Tune up the transceiver on 20 meters, USB mode, into a dummy load. Set the main tuning dial to 14.250 MHz. Connect the RF probe of the VTVM to the antenna jack. Disconnect all microphones, etc., from the microphone jack.
2. Activate the transmitter by placing the VOX GAIN control into the MOX position. Adjust VR₅₀₁ and TC₅₀₂ for a minimum VTVM reading.
3. If a VTVM is unavailable, use an external

monitor receiver, tuned to the transmitter frequency, and adjust VR₅₀₁ and TC₅₀₂ for a minimum S-meter reading on the external receiver.

4. This adjustment should be repeated several times on LSB and USB, in order to ensure complete carrier nulling.

C. CW Carrier Point

1. Connect a frequency counter to TP₄₀₂, located on the IF UNIT. Place the MODE switch in the TUNE position.
2. Adjust TC₅₀₅ for a frequency counter reading of exactly 8988.3 kHz.
3. When using the optional CW filter, a substantial loss on transmit, when in the CW-N position, may indicate the need for adjustment as indicated in steps 1 and 2.

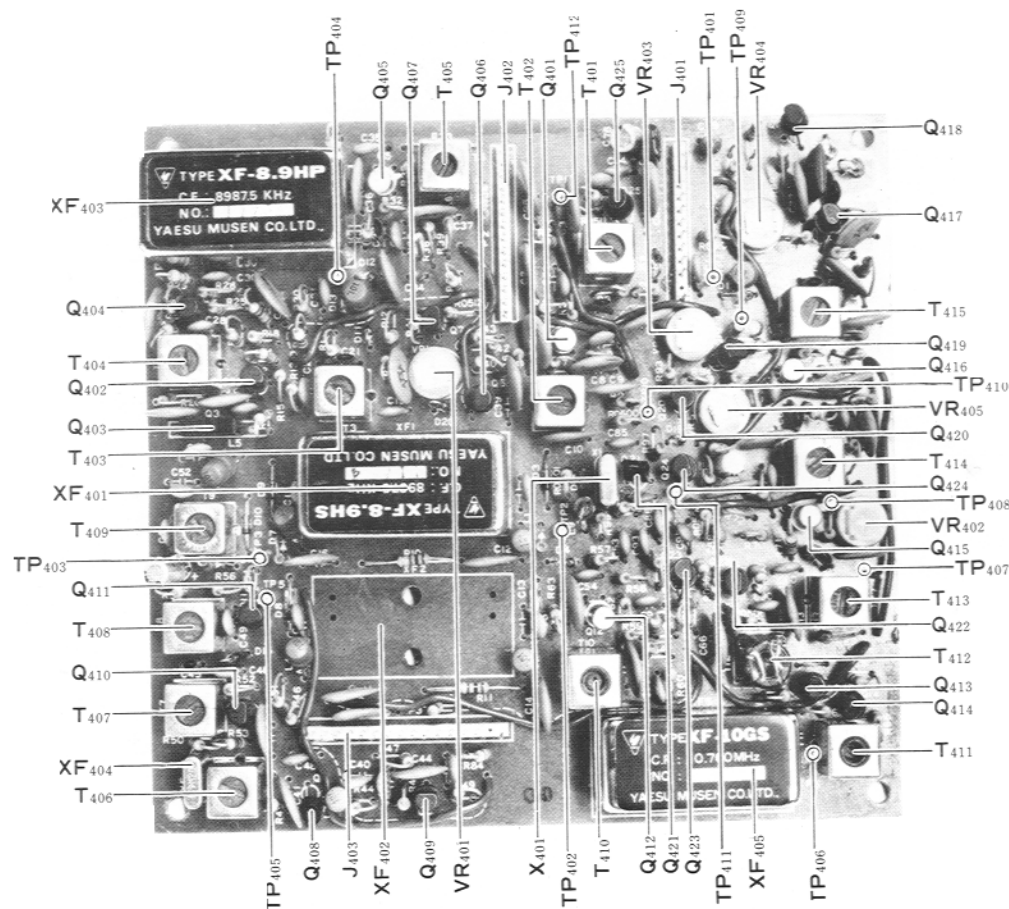

IF UNIT (PB-1963)

IF UNIT ALIGNMENT

S-Meter Sensitivity Adjustment

1. Set the BAND switch to 20 meters, the main dial to 14.250 MHz, and set the RF GAIN fully clockwise.
2. Set the signal generator to 14.250 MHz, and set its output to 6 dB. Tune the signal generator signal on the receiver, and peak the preselector for maximum signal strength. The S-meter should just begin to move with the 6 dB input.
3. Adjust VR₄₀₃ for a reading of 0 on the S-meter.
4. Set the generator output to 100 dB, and adjust VR₄₀₅ for a reading of S9 + 60 dB on the S-meter. Confirm that the preselector is peaked.
5. Return the signal generator output to 6 dB, and recheck the adjustment of VR₄₀₂.

Variable IF Bandwidth Alignment

1. Set the controls as follows:
BAND 20 m
DIAL 14.200 MHz
RF GAIN Fully clockwise
WIDTH control .. 12 o'clock position
MODE USB
Peak the preselector for maximum response against the marker signal or background noise.
2. Make sure that the WIDTH control is exactly in the 12 o'clock position. Adjust VR₄₀₄ for a reading of exactly 19.7475 MHz on the frequency counter.
3. Switch between USB and LSB, and observe the background noise.


ALC Meter Alignment

1. On any band, set the MODE switch to USB. Set the meter switch to ALC.
2. With no speech input, activate the transmitter. Adjust VR₄₀₁ for a 0 reading on the ALC meter scale.


RECTIFIER B UNIT

Bias Adjustment

1. Set the MODE switch to USB or LSB, and set the MIC GAIN control fully counterclockwise.
2. Place the METER switch in the IC position, and set the VOX GAIN control to VOX. Adjust the BIAS control located on the RECT B UNIT (PB-1968) VR₁₀₀₁, for a reading of 50 mA. For 10 watt models, the correct meter reading is 25 mA.

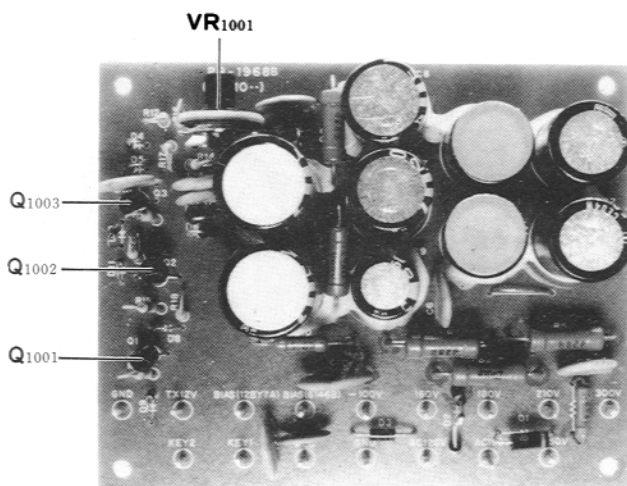

RECT B UNIT(PB-1968)

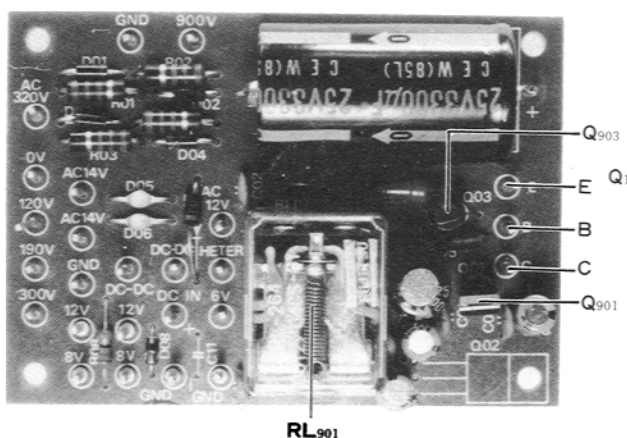

RECT A UNIT(PB-1967)

VFO UNIT


The VFO UNIT is very critical in its adjustment. As well, this is not an area which should ever require alignment. Questions regarding drift, etc., usually can be traced to other areas of the transmitter (instability in the supply voltage, etc.). For this reason, all cases regarding VFO repair should be referred to an experienced service technician.

The following components are of interest from a service standpoint:

TC₈₀₁ is the band set trimmer.

TC₈₀₂ is the VFO level set trimmer.

To confirm proper VFO injection, connect the VTVM to the VFO output. Adjust TC₈₀₂ for a reading of 100 mV.

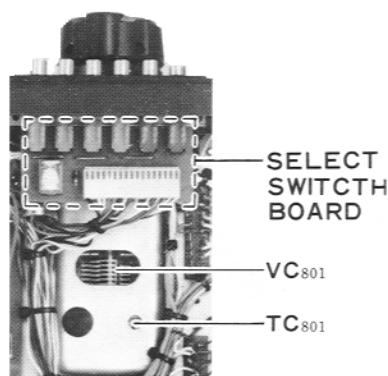

BAND	CRYSTAL	FREQUENCY	TRANSFORMER
160m	X ₆₀₁	15.9875MHz	T ₆₀₁
80m	X ₆₀₂	17.9875	T ₆₀₂
40m	X ₆₀₃	21.4875	T ₆₀₃
30m	X ₆₀₄	24.4875	T ₆₀₄
20m	X ₆₀₅	28.4875	T ₆₀₅
17m	X ₆₀₆	32.4875	T ₆₀₆
15m	X ₆₀₇	35.4875	T ₆₀₇
12m	X ₆₀₈	38.9875	T ₆₀₈
10m A	X ₆₀₉	42.4875	T ₆₀₉
10m B	X ₆₁₀	42.9875	T ₆₁₀
10m C	X ₆₁₁	43.4875	T ₆₁₁
10m D	X ₆₁₂	43.9875	T ₆₁₂

Table 6.

NB-FIX UNIT

Fixed Channel Frequency Alignment

When the optional fixed channel crystals are being used, they may be placed exactly on the correct frequency by adjusting TC₂₀₁ (for channel 1) and TC₂₀₂ (for channel 2). Confirmation of the correct frequency may be made with an external receiver or by loosely coupling a probe from the frequency

transmitter output. A 1-turn loop is usually sufficient to provide indication on the counter.

PREMIX LOCAL UNIT

Premix Local Alignment

1. Connect the RF probe of the VTVM to pin 1 of MJ₃.
2. Refer to Table 6, and adjust the appropriate transformer for a level of 300 mV for each band and crystal, as shown in the table.

PREMIX UNIT

For this alignment, a wideband (not peak) sweep generator, as well as an oscilloscope, should be used.


1. Press the EXT select switch. Apply 5.0 - 5.5 MHz sweep output to the VFO output terminal at the rear apron external VFO jack. Connect a high-impedance probe of an oscilloscope to J₃₀₁.
2. Adjust the transformers shown in Table 7 for a flat response across the entire passband. If you have never adjusted a bandpass filter previously, this may take some practice. Perform the adjustments on each band, according to the chart.

BAND	TRANSFORMER	PASSBAND
160m	T ₃₀₁ , T ₃₀₂	10.4-11.0(MHz)
80m	T ₃₀₃ , T ₃₀₄	12.4-13.0
40m	T ₃₀₅ , T ₃₀₆	15.9-16.5
30m	T ₃₀₇ , T ₃₀₈	18.9-19.5
20m	T ₃₀₉ , T ₃₁₀	22.9-23.5
17m	T ₃₁₁ , T ₃₁₂	26.9-27.5
15m	T ₃₁₃ , T ₃₁₄	29.9-30.5
12m	T ₃₁₅ , T ₃₁₆	33.5-34.0
10m	T ₃₁₇ , T ₃₁₈	36.9-39.0


AM UNIT

Table 7


1. Set the BAND switch to 40, the MODE switch to AM, and the DRIVE control to the 3 o'clock position. Tune up the transmitter in the usual fashion. Now adjust the core of T₂₄₀₁ for maximum power output into the dummy load/wattmeter.
2. Connect a frequency counter to TP₂₄₀₂. Adjust TC₂₄₀₁ for a counter reading of exactly 8988.3 kHz while transmitting.
3. Connect the RF probe of the VTVM to TP₂₄₀₁, and adjust TC₂₄₀₂ for a reading of 50 mV while transmitting.

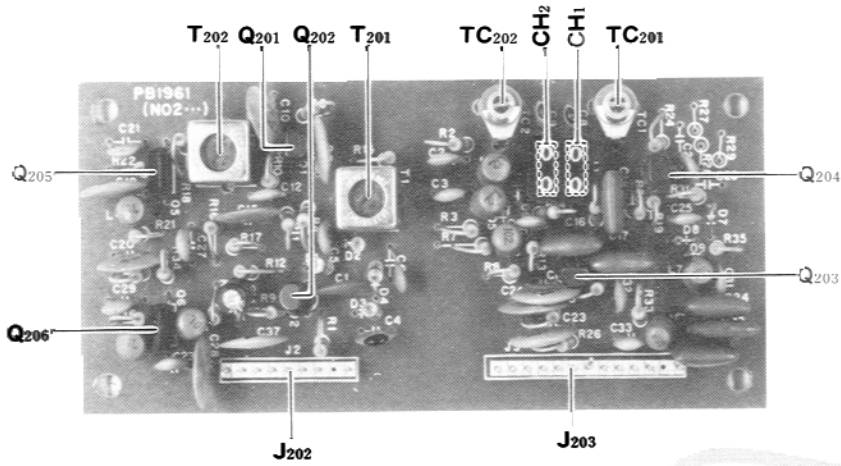


NB-FIX UNIT (PB-1961)

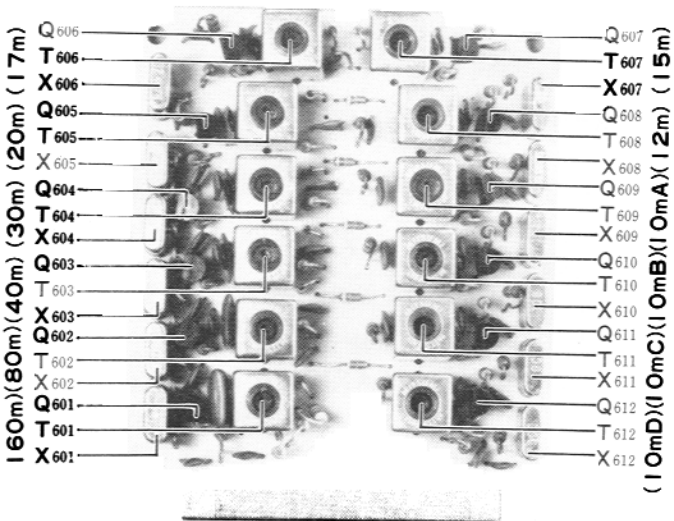

PREMIX LOCAL (XTAL) UNIT (PB-2153)

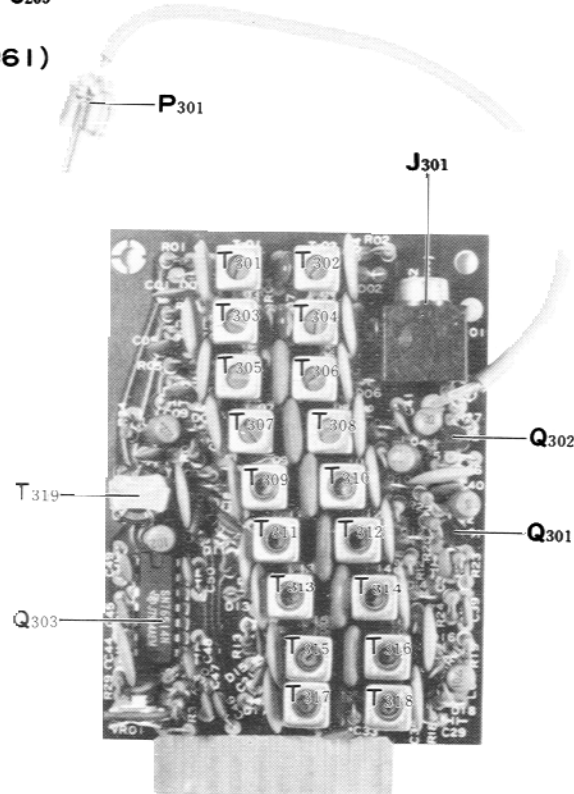


PREMIX UNIT (PB-2152)

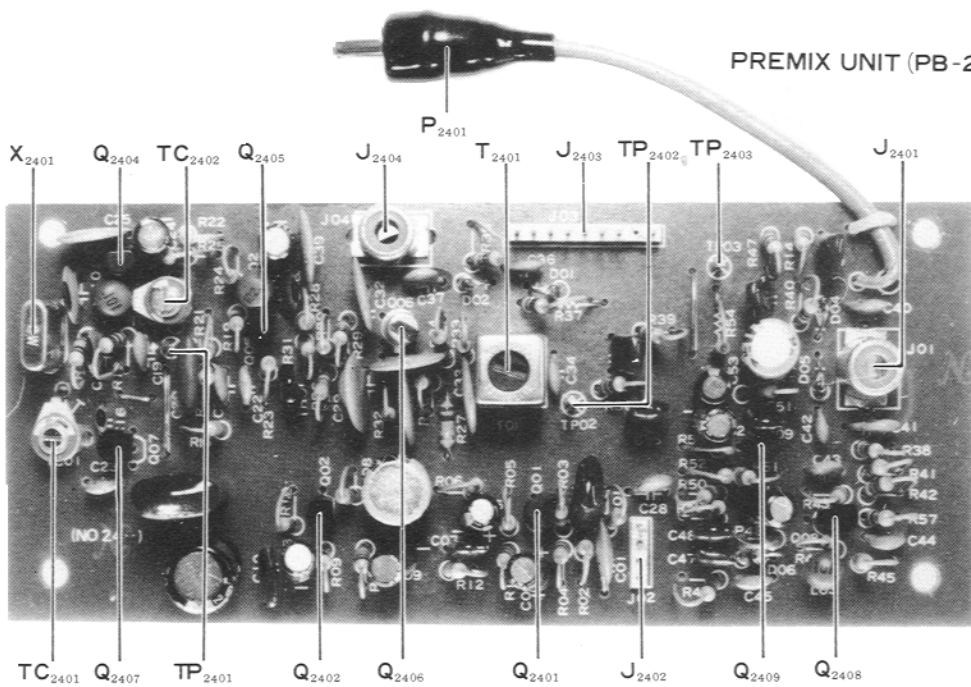

AM UNIT (PB-2040)

TRANSMIT RF/IF TRANSFORMER ALIGNMENT

- (1) Connect a dummy load to the antenna jack, and connect an audio signal generator to the microphone input. Tune up the transmitter at 14.2 MHz, and adjust the audio generator output for approximately 50 watts output into the dummy load, single-tone, SSB mode.
- (2) Peak T₄₀₁ - T₄₀₃ and T₄₀₅ (IF UNIT) for maximum power output. Switch the RF processor on, and adjust the COMP LEVEL control for approximately 50 watts output. Peak T₄₀₄ for maximum power output.

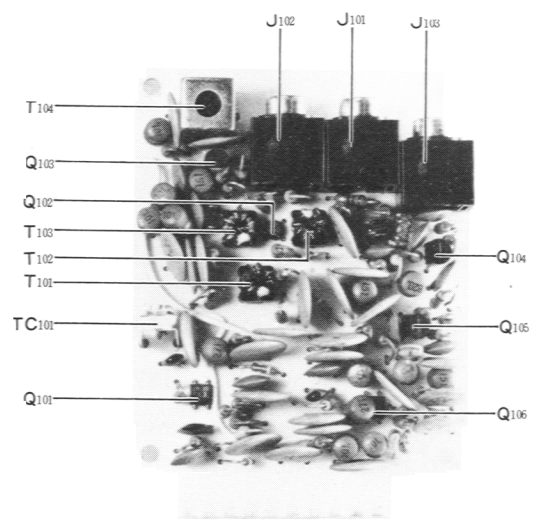


RF UNIT (PB-2154)

RECEIVER RF/IF/NB TRANSFORMER ALIGNMENT

- (1) Tune in the marker generator signal at 14.2 MHz, with a dummy load connected to the antenna jack. Peak the preselector for maximum S-meter indication.
- (2) Peak T₁₀₄ (RF UNIT) for maximum S-meter indication.
- (3) Peak T₄₀₆ - T₄₁₁ and T₄₁₃ - T₄₁₅ for maximum S-meter indication.
- (4) Connect the RF probe of a VTVM to the collector of Q₂₀₂ (NB-FIX UNIT). Reduce the RF GAIN control somewhat, and tune T₂₀₁ and T₂₀₂ for a dip in the VTVM indication. If no dip is observed, reduce the RF GAIN control further.

CLARIFIER ALIGNMENT

1. Tune in the marker generator signal on any band, and peak the preselector on the marker signal.
2. With the CLARIFIER control OFF, make sure that the CLARIFIER knob is exactly at the 12 o'clock position. Note the tone of the marker signal.
3. Switch the RX CLARIFIER to ON, and observe the tone of the marker signal. If it is different from when the clarifier was turned off, adjust VR₁₈₀₁ for an identical tone with the CLARIFIER knob exactly on the zero mark.

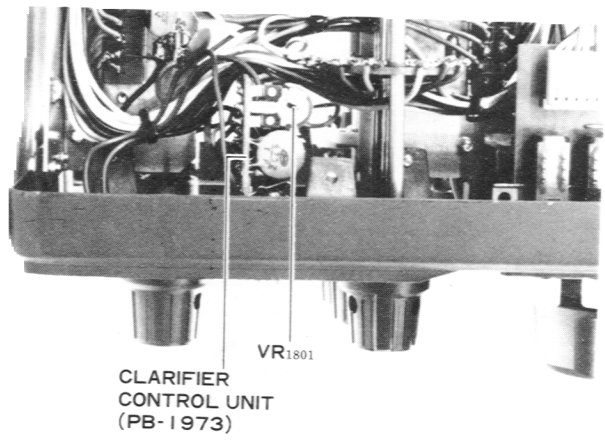

FINAL AMPLIFIER NEUTRALIZATION


Important Note: For this alignment, use a **NON-METALLIC** tuning wand.

Set the **BAND** switch to **10C**, set the tuning dial to **29 MHz**, and tune into a dummy load for approximately **70%** full output power.


2. Set the **METER** switch to **IC**, and observe the dip in the cathode current. The dip should occur at the same point that maximum power output (measured on the dummy load watt-meter) occurs. If this is not the case, adjust **TC₁**, located inside the final amplifier cage, for the required coincidence of maximum power output and dip on the **IC** meter.

CAUTION: HIGH VOLTAGES ARE PRESENT ON THE UNDERSIDE OF THE CHASSIS AND INSIDE THE FINAL AMPLIFIER COMPARTMENT. USE GREAT CARE WHILE MAKING ADJUSTMENTS IN AREAS OF EXPOSED WIRING.

Note: The final amplifier enclosure must be in place to provide the required RF shielding during the neutralization procedure.

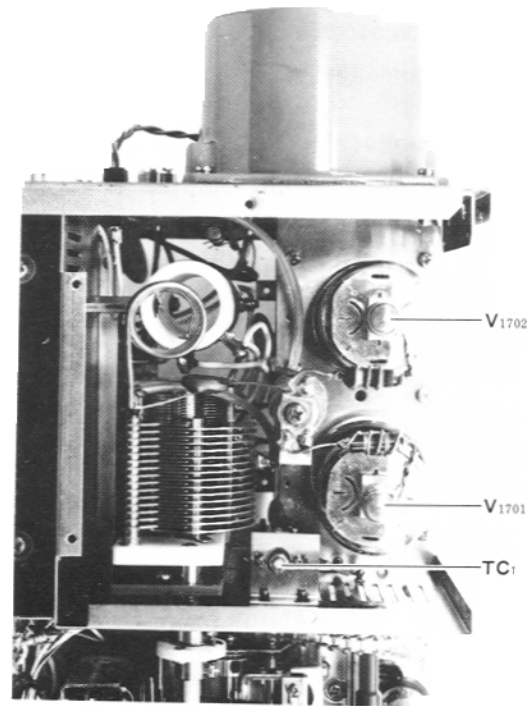

Final Amplifier Compartment

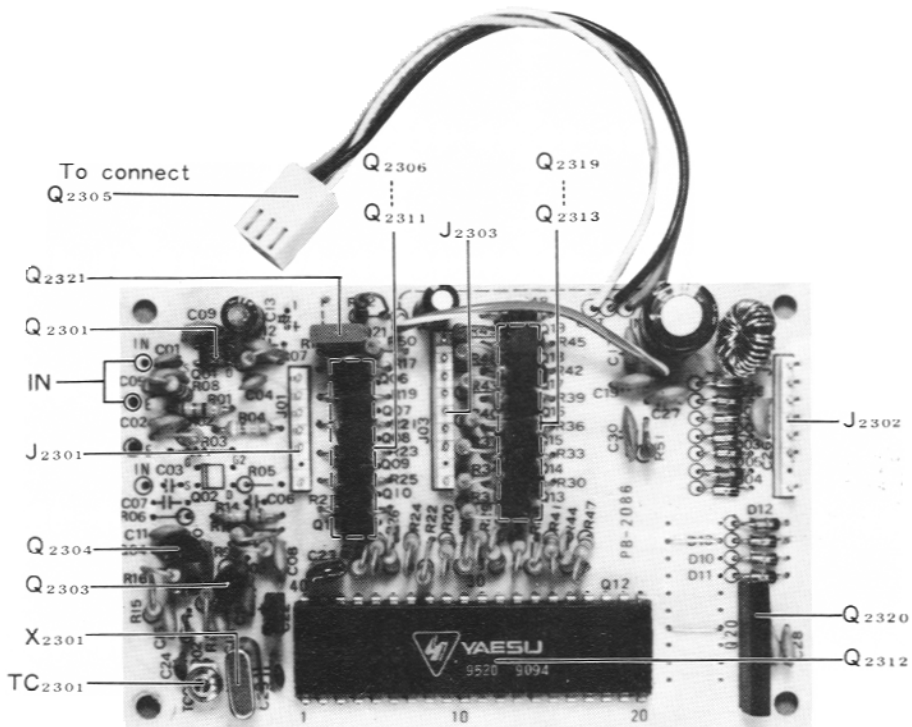

COUNTER UNIT (PB-2086A)

Set the transceiver to operate at 29.0 MHz (10 mC).

RX IF Adjustment

Turn the SQL control fully counterclockwise, and adjust T₂₅₀₁ and T₂₅₀₂ for maximum receiver noise from the speaker, with no signal applied to the ANT connector.

Squelch Threshold Adjustment

Set the SQL control at the 10 o'clock position, and adjust VR₂₅₀₁ to the point where the receiver noise just disappears.

Carrier Frequency Adjustment

Connect a frequency counter to pin 8 of J₂₅₀₁, and set the MIC GAIN control fully counterclockwise.

Adjust T₂₅₀₁ for a reading of exactly 8988.3 kHz.

TX IF Adjustment

Connect the probe of a VTVM to pin 8 of J₂₅₀₆, and adjust T₂₅₀₄ and T₂₅₀₅ for a maximum reading on the VTVM. While this adjustment is being made, the DRIVE control should be adjusted so as not to clip the signal in the IF stage. If the DRIVE control is set too excessively high, the peak cannot be accurately obtained.

It may be necessary to perform this adjustment a few times in order to obtain a definite reading.

Deviation Adjustment

Connect a deviation meter to the antenna jack, and connect an audio signal generator to the microphone input terminal, as shown in Figure 17.

Set the MIC GAIN control fully clockwise, and set VR₂₅₀₂ at the 9 o'clock position. Apply a 1 kHz, 15 mV signal to the microphone terminal, and adjust VR₂₅₀₃ for a deviation of ±4.5 kHz, as shown on the deviation meter.

Set the MIC GAIN control at the 2 o'clock position, and reduce the output of the signal generator to 2 mV. Now adjust VR₂₅₀₂ for a deviation of ±3.5 kHz on the deviation meter.



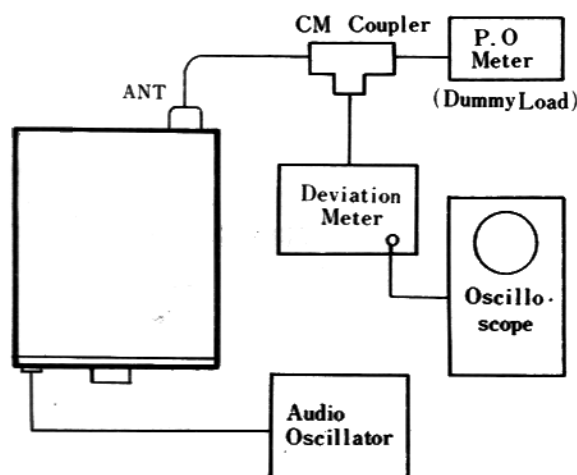


Figure 17

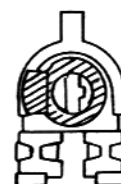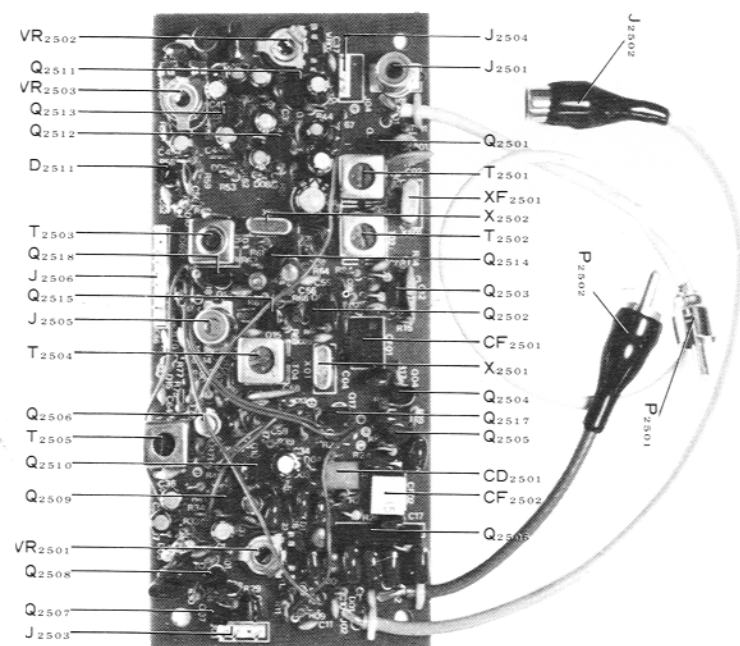

VR₂₅₀₂ at the 9 o'clock position.

MAIN CHASSIS			C5	K30279062	Dipped mica 500 WV 3000 pF (DM19-302K5)		
Symbol No.	Part No.	Description					
		IC, TRANSISTOR	C59, 66	K31306800	Moulded mica	1 KWV	80 pF
Q2	G3104960Y	TR 2SA496(Y)	C17	K02279001	Ceramic	500 WV	1 pF
Q1	G3206160R	" 2SB616R(S)	C10	K02279002	"	"	5 pF
Q4	G34023500	" 2SD235(O)	C18	K02279003	"	"	47 pF
Q3	G1090070	IC μ PC14308	C11	K00279001	"	"	200 pF
Q5	G1090080	" μ PC78L08	C20	K00279002	"	"	470 pF
			C16	K0030	"	1 KV	3 pF
			C15	K02309002	"	"	5 pF
		DIODE	C14	K02309003	"	"	100 pF
D1	G2090029	Ge 1N60	C3	K00329002	"	1.5 KWV	460 pF
D2-5	G2015550	Si 1S1555	C9	K00359001	"	3 KV	100 pF
D6	G2090001	" 10D1	C1	K12359001	"	"	1000 pF
			C74, 75	K13170102		50WV	0.001 μ F
			C29, 34, 35, 41, 64, 73	K13170103	"	50 WV	0.01 μ F
		RESISTOR	C12, 22-24, 39, 40, 56, 58, 60, 68, 69	K13170473	"	"	0.047 μ F
R22, 24	J01245220	Carbon film 1/4W TJ 22 Ω					
R23	J00245330	" " " VJ 33 Ω					
R14	J01245560	" " " TJ 56 Ω					
R7, 11	J01245101	" " " " 100 Ω	C27, 28, 36	K12279004	"	500 WV	0.0047 μ F
R18	J01245821	" " " " 820 Ω	C30,32,33,54,	K12279002	"	"	0.01 μ F
R4, 5	J01245102	" " " " 1 k Ω	55, 61				
R6	J01245152	" " " " 1.5 k Ω	C2, 25, 26	K12329002	"	1.4 KV	0.0047 μ F
R19	J01245182	" " " " 1.8 k Ω	C31, 37	K12329001	"	"	0.01 μ F
R17	J01245222	" " " " 2.2 k Ω	C42-51	K21270002	Feed thru	500 WV	0.001 μ F
R20	J01245474	" " " " 470 k Ω					(ECK-L2H102PE)
R2	J10276100	Carbon composition 1/2W GK 10 Ω	C63	K40120476	Electrolytic	16 WV	47 μ F
R9, 10 (with L5, L6)	-	" " 1W " 56 Ω	C72	K40120107	"	50WV	100 μ F
			C65	K40120337	"	"	330 μ F
R3	J10276101	" " " " 100 Ω	C70	K40120106	"	"	10 μ F
R1, 8	J10276222	" " " " 2.2 k Ω	C67	K40100336	"	10 WV	33 μ F
R25		Cement 3W 15 Ω	C71	K50177104	Mylar	50 WV	0.1 μ F
		POTENTIOMETER			VARIABLE CAPACITOR		
VR1	J60800035	VM11AB06A5M1112 10 k Ω B	VC1	K90000026	YB-250		250 pF
VR2	J62800032	DM10A039A 500 k Ω B/20 k Ω B	VC2	K90000016	C134E125		
VR3	J62800033	DM10A039A 5 k Ω A/5 k Ω B					
VR4	J60800043	VM10A592A 5 k Ω A			TRIMMER CAPACITOR		
VR5, 6	J60800036	VM10A592A 5 k Ω B	TC1	K91000007	TSN120C	10P x 2	
VR7	J62800034	DM10A39A 5 k Ω B/5 k Ω A					
VR8	J60800037	VM10A654A 1 k Ω B					
VR9, 10	J60800038	VM10A654A 5 k Ω B					
VR11	J60800039	VM10AB08A 5 k Ω B			INDUCTOR		
			L1	L0020534C			
			L2	L0020611			
			L3	L1020065			
		CAPACITOR	L4	L1020064			
		Dipped mica 500 WV 5 pF	L5, L6 (R9, R10)	L1020308A			
C13, 19, 21	K30276271	" " " 270 pF (LCQ1727271K5)	L7	L1190001	EL0710-251K		250 μ H
C8	K30276331	" " 500 WV 330 pF (DM-15-331K5)	L8	L1190017	FL-5H-102J		1 mH
C7	K30276621	" " 500 WV 620 pF (DM19D621K5)	L9	L0020705			
C6	K30279052	" " 500 WV 1100 pF (DM19-112K5)					

		TRANSFORMER			
T1	L0020544				
T2, T3	L0020074				
					MULTI JACK
			MJ1	P4090001	121S-10B-105A
			MJ2	P4090007	220D-20B-205A
			MJ3	P4090002	121S-14B-105A
		METER			
M1	M0090002	Y-45-02			
					PLUG
			P1	P1090079	5047-12A (with wire T9201410B)
		SPEAKER	P2	P1090080	5047-13A (" " T9201300D)
SP1	M4090005	SA-92Y 4 Ω 3 W	P3	P1090082	5047-15A (" " T9201310D)
			P4	P1090086	5047-19A
			P5	P1090082	5047-15A (with wire T9201330C)
			P6	P1090075	5047-08A
		POWER TRANSFORMER	P7	P1090072	5047-05A (with wire T9201350A)
PT1	L3030028	52-74	P8	P1090082	5047-08A
			P9	P1090079	5047-12A (" " T9201310C)
			P10	P1090083	5047-16A
			P18	P1090070	5047-03A (with wire T9201420A)
		RELAY	P11, 14, 22	P0090045	SQ4052
RL1	M1190004	FRL-263 D012/04CS01	P15	P0090002	SI5908
RL2	M1090002	MX2P	P16	P0090005	SI-7502
			P19	P1090070	5047-03A
			P20	P1090075	5047-08A
			P21	P0090075	P-7015
		RELAY SOCKET			
RLS1	M1490010	263H204			FUSE
RLS2	M1490001	PX08	F1	Q0000005	5 A (100V-117V)
				Q0000004	3 A (200V-234V)
		SWITCH			
S1	N0190070	#250041 (SRS)			FUSE HOLDER
S2	N0190071	#250044 (RS2-4-11)	FH1	P2000012	SN2059
S3 *(Lot 1-7)	N0190025	ESR-E485R20	FH2	P2000003	F3265
S3 *(Lot 8-→)	N0190037	ESR-E486R20			
S4, 5	N7090005	WD9223			
					PILOT LAMP
		COOLING FAN	PL1	Q1000026	M1041.5.9 (BF311-04071A)
FAN1	M2090001	2SB10A	PL2-5	Q1000033	K0252-6-8 (BQ054-32732B)
		RECEPTACLE			
J1	P1090004	SG7814		Q5000010	Thru terminal FT-SM1
J3	P1090134	SG7627		Q4000002	" A339 (HV)
J2	P0090011	FM144S		Q6000042	Terminal block ML-3182 20P
J4	P1090033	D6-701B00		Q6000004	" 1L2PS (2-0)
J5	P1090075	5047-08 (with wire T9203200)		Q6000007	" 1L3PS (2-0-1)
J6	P1090014	SI7501-1		Q6000	" 1L5PS (4-0-1)
J7	P1090028	M-BR-06B		Q6000003	" 1L2PS (1-0-1)
J8	P1090040	SA607B00		Q6000008	" 1L3P (3-0)
J9-14, 18	P1090025	STR-01			" 1L3PS (1-0-2)
J15	P1090230	SG-8022			
J16	P1090045	AC9-PF			
J17	P0090047	QS-DB6-ML			
J19	P1090111	J-7015			

***** LED B BOARD *****

***** LED B BOARD *****				CAPACITOR		
PB-1390	F0001390	P.C. Board		C138	K02179003	Ceramic 50WV CH 2 pF
D9	G2090060	GD4-203-SRD		C106	K02172040	" " " 4 pF
				C125, 126	K00175680	" " SL 68 pF
				C103	K00175101	" " " 100 pF
				C124	K30176391	" " " 390 pF
				C102, 104, 116, 119- 121, 130, 131, 135, 140	K13170103	" " " 0.01 μF
RF UNIT				C101, 105, 107-115, 117, 118, 122, 123 127-129, 132-134, 136, 137, 139	K13170473	" " " 0.047 μF
Symbol No.	Part No.	Description				
PB-2154	F0002154	Printed Circuit Board				
	C0021540	P.C.B. with components				
		IC, FET & TRANSISTOR				
Q102	G2090135	IC (Ring Module) ND487C2-3R				
Q106	G4800400M	FET	3SK40M			TRIMMER CAPACITOR
Q101	G4800510C	"	3SK51-03	TC101	K91000019	ECV-1ZW 10 x 40 10 pF
Q103	G3090019	"	J310			INDUCTOR
Q104, 105	G3324070	TR	2SC2407	L107	L0020491	0.32 μH
				L108	L1190005	1 μH
				L112	L1190033	FL5H-820K 82 μH
				L102, 103, 105, 106, 113, 114	L1190016	FL5H-101K 100 μH
		DIODE		L104, 109, 111	L1190020	FL5H-151K 150 μH
D110	G2010070	Ge	1S1007	L101, 110, 115	L1190038	FL5H-271K 270 μH
D103, 104	G2015550	Si	1S1555			
D101, 102, 105-109	G2090027	"	1SS53			
						TRANSFORMER
		RESISTOR		T101-103	L0020788A	
R122, 131,	J00245479	Carbon film 1/4W	VJ 4.7 Ω	T104	L0020221	
R109, 110, 115, 116, 124, 125, 140	J00245100	" " " "	10 Ω			JACK
				J101-103	P1090018	SQ-3081
				NB-FIX UNIT		
R135	J00245560	" " " "	56 Ω	Symbol No.	Part No.	Description
R106, 107, 113, 114, 139, 140	J00245101	" " " "	100 Ω		C0019610	NB-FIX unit with components
					PB-1961B	F0001961B P.C. Board
R108, 117, 126	J00245121	" " " "	120 Ω			TRANSISTOR
				Q201-204	G3303720Y	2SC372Y
R121, 130	J00245151	" " " "	150 Ω	Q205, 206	G3315830	2SC1583
R123, 132	J00245221	" " " "	220 Ω			
R136	J00245331	" " " "	330 Ω			DIODE
R119, 128	J00245561	" " " "	560 Ω	D201-204	G2090029	Ge 1N60
R105, 111, 112, 120, 129	J00245102	" " " "	1 kΩ	D205-209	G2015550	Si 1S1555
						RESISTOR
R118, 127	J00245152	" " " "	1.5 kΩ	R208, 216, 224, 230, 238, 239,	J00245101	Carbon film 1/4W VJ 100 Ω
R141	J00245222	" " " "	2.2 kΩ			
R102	J00245272	" " " "	2.7 kΩ	R204	J00245221	" " " " 220 Ω
R104, 133	J00245562	" " " "	5.6 kΩ	R222, 236	J00245471	" " " " 470 Ω
R138	J00245103	" " " "	10 kΩ	R231-233, 235	J00245561	" " " " 560 Ω
R137	J00245183	" " " "	18 kΩ	R206, 215, 221, 234, 237	J00245102	" " " " 1 kΩ
R103, 134	J00245393	" " " "	39 kΩ			
R101	J00245225	" " " "	2.2 MΩ	R207	J00245222	" " " " 2.2 kΩ

R210, 240	J00245472	Carbon film 1/4W VJ	4.7 kΩ			RESISTOR		
R205,209,218	J00245562	" " " "	5.6 kΩ	R323	J00245100	Carbon film ¼W VJ	10 Ω	
R202,203,212, 214,225,226	J00245103	" " " "	10 kΩ		J00245680	" " " "	68 Ω	
R201,220,223	J00245153	" " " "	15 kΩ	R301, 303, 305, 307, 309, 311, 313, 315, 317, 332, 333, 331	J00245101	" " " "	100 Ω	
R211,213,219	J00245223	" " " "	22 kΩ					
R217	J00245683	" " " "	68 kΩ					
		CAPACITOR						
C201,216-218	K30176331	Dipped mica 50WV	330 pF	R322, 324, 327,328,336	J00245221	" " " "	220 Ω	
C234, 236	K30176471	" " " "	470 pF					
C235	K30176821	" " " "	820 pF	R319, 334	J00245152	" " " "	1.5 kΩ	
	K02175150	Ceramic 50WV NPO	15 pF	R329, 330	J00245222	" " " "	2.2 kΩ	
	K00179005	" " SL	20 pF	R302, 304, 308, 310, 312, 314, 316, 318, 321, 325, 326	J00245103	" " " "	10 kΩ	
	K00175101		100 pF					
C202,203,205, 211,212,221, 225-227, 229-233	K13170103							
C207,210,213, 215,219,220, 223,224,228, 237	K13170473		0.047 μF	R306	J00245153	" " " "	15 kΩ	
				R320	J00245333	" " " "	33 kΩ	
						POTENTIOMETER		
C214	K40170105	Electrolytic 50WV	1 μF	VR301		V10K-8-1-2	5 kΩB	
C238	K40140475	" 10WV	4.7 μF			CAPACITOR		
		TRIMMER CAPACITOR		C335	K30176271	Dipped mica 50WV	270 pF	
				C331	K30176331	" " " "	330 pF	
TC201, 202	K91000016	ECV-1ZW 50 x 32	50 pF	C341	K30176391	" " " "	390 pF	
		INDUCTOR		C311, 315, 319	K30176561	" " " "	560 pF	
L207, 208	L1190007	FL-4H 1R8K	1.8 μH	C323, 327	K30176680	" " " "	680 pF	
L204-206	L1190016	FL-5H 101K	100 μH	C301, 305, 309, 313, 317, 321, 325, 329, 333, 337- 339, 343, 345- 351	K13170103	Ceramic "	0.01 μF	
L201-203	L1190017	FL-5H 102K	1 mH					
		TRANSFORMER						
T201, 202	L0020140	R12-4170		C302, 304, 306, 308,310, 312, 314, 316, 318, 320, 322, 324, 326, 328, 330, 332, 334, 336, 340, 342, 344	K13170103	Ceramic 50WV	0.047 μF	
		CRYSTAL SOCKET						
XS201	P3090025	S-14 2P						
		MINI CONNECTOR						
J201	P0090037	5048-08A						
J202	P0090038	5048-12A						
PREMIX UNIT				C303, 307	K50177102	Mylar "	0.001 μF	
Symbol No.	Part No.	Description				INDUCTOR		
	C0021520	PREMIX unit with components		L302	L1190007	FL4H-1R8M	1.8 μH	
PB-2152	F0002152	P.C. Board		L303	L1190023	FL5H-220K	22 μH	
				L301, 304- 306	L1190017	FL5H-102K	1 mH	
		IC, FET, TRANSISTOR						
Q303	G1090062	IC	SN76514N					
Q301	G3319230R	TR	2SC1923R					
						TRANSFORMER		
				T301, 302	L0020500			
				T303, 304	L0020501			
		DIODE		T305, 306	L0020502			
D301-318		Si	1SS53	T307, 308	L0020835			

T309, 310	L0020504			XF403	H1100890		XF8.9HP
T311, 312	L0020836			XF404	H1100470		8.9M20A
T313, 314	L0020837			XF405	H1100900		XF10GS (XF-10HW)
T315, 316	L0020838						THERMISTOR
T317, 318	L0020839			TH401			D-33A
T319	L0020210						RESISTOR
				R0517, 0518, 0520	J00245220	Carbon film	1/4W VJ 22 Ω
		JACK					
J301	P1090018	SQ3081		R410, 411	J01245101	" " " "	TJ 100 Ω
P301	P0090045	SQ4052		R402,408,422, 423,437,439, 444,446,463, 464,469,475, 482,483,497	J00245101	" " " "	VJ 100 Ω
				R419,425,447, 451,486, 0507,0508	J00245221	" " " "	220 Ω
IF UNIT							
Symbol No.	Part No.	Description					
	C0019630	IF unit with components		R0502	J00245331	" " " "	330 Ω
PB-1963C	F0001963C	P.C. Board			J00245391		390 Ω
				R443	J00245471	" " " "	470 Ω
				R430, 474, 480,0522	J00245561	" " " "	560 Ω
		IC, FET, TRANSISTOR		R467, 468	J00245681	" " " "	680 Ω
Q403	G1090063	IC	TA7060P		J00245821	" " " "	820 Ω
Q406	G3800190B	FET	2SK19BL	R406,416,428, 437,440,442, 449,453,457, 459,462,488, 494,0504, 0506,0515	J00245102	" " " "	1 kΩ
Q402,413,414, 419, 425	G3800190G	"	2SK19GR				
Q401,405,412, 415, 416	G4800510C	"	3SK51-03				
Q408	G3090019	"	J310				
	G3105641	TR	2SA564A	R429	J00245122	" " " "	1.2 kΩ
Q404,409,410, 417, 418, 422-424	G3303720Y	"	2SC372Y	R495	J00245152	" " " "	1.5 kΩ
				R0516	J01245152	" " " "	TJ 1.5 kΩ
				R454,455,458, 0510	J00245222	" " " "	VJ 2.2 kΩ
Q421	G3305350A	"	2SC535A	R460	J00245272	" " " "	2.7 kΩ
	G3090005	"	MPSA13	R401,409,412, 413,431,456, 496,0511	J00245332	" " " "	3.3 kΩ
				R426,427,476	J00245472	" " " "	4.7 kΩ
		DIODE		R403,445,478, 489	J00245562	" " " "	5.6 kΩ
D416, 417	G2090029	Ge	1N60	R434, 450	J00245682	" " " "	6.8 kΩ
D405-408, 414, 421	G2010070	" (GB)	1S1007	R404,407,420, 421,424,436, 471,477,481, 484,485,491, 492, 0501, 0509, 0512	J00245103	" " " "	10 kΩ
D401-404, 409-413, 419, 424	G2015550	Si	1S1555				
D418	G2022090	Varactor	1S2209				
D422	G2090040	"	FC63				
D420, 423	G2090010	Zener	WZ090	R433	J01245103	" " " "	TJ 10 kΩ
				R470	J00245123	" " " "	VJ 12 kΩ
				R415,498,499	J00245153	" " " "	15 kΩ
				R414	J00245273	" " " "	27 kΩ
		CRYSTAL		R461,472 0500	J00245473	" " " "	47 kΩ
X401	H0100431	HC-18/U 19.7475 MHz		R405,465,466	J00245104	" " " "	100 kΩ
				R493	J00245154	" " " "	150 kΩ
				R448,452,487, 0503, 0505	J00245184	" " " "	180 kΩ
		CRYSTAL FILTER					
XF401	H1100860	XF8.9HS					
XF402(Option)	H1100880	XF8.9HC			J00245334	" " " "	330 kΩ

D501, 518	G2090001	Si 10D1		C513	K30176511	Dipped mica 50WV	510 pF
				C511	K02172050	Ceramic 50 WV CH	5 pF
				C522	K02173100	" " "	10 pF
				C514	K02179011	" " "	27 pF
		CRYSTAL		C546-548	K02175390	" " "	39 pF
X501	H0100260	HC-6/W 3200 kHz		C510,532,534,555,566	K02175101	" " "	100 pF
X502	H0100421	HC-18/U 8986 kHz					
X503	H0100422	" 8989 kHz		C533	K02175151	" " "	150 pF
X504	H0100423	" 8988.3 kHz		C558, 559	K00179020	" " SL	240 pF
				C512	K06175271	" " UJ	270 pF
				C504,519-521,523,531,535,542-545,570	K13170103	" " "	0.01 μF
		RESISTOR					
R511	J00245560	Carbon film 1/4W VJ	56 Ω				
R509,539,557	J00245101	" " " "	100 Ω	C509,537,574	K13170473	" " "	0.047 μF
R533, 546	J00245151	" " " "	150 Ω	C516	K50177102	Mylar 50 WV	0.001 μF
R503,513,524,525	J00245221	" " " "	220 Ω	C526	K50177472	" " "	0.0047 μF
R512,522,538	J00245471	" " " "	470 Ω	C518,529,530,572	K50177103	" " "	0.01 μF
R504,514,520,523,548,561	J00245102	" " " "	1 kΩ	C525,539-541	K50177223	" " "	0.022 μF
R515	J00245222	" " " "	2.2 kΩ	C528,556,567,569,573,574	K50177473	" " "	0.047 μF
R534,535,565	J00245272	" " " "	2.7 kΩ	C503	K50177104	" " "	0.1 μF
R510,562,569,578-580,571	J00245332	" " " "	3.3 kΩ	C507,517,527,550,551,560,568,571	K40170105	Electrolytic "	1 μF
R583	J01245472	" " " TJ	4.7 kΩ				
R506,531,536,537,542,544,545,549,550,563,566,575,576,581	J00245472	" " " VJ	4.7 kΩ	C557	K40170225	" " "	2.2 μF
				C561	K40170335	" " "	3.3 μF
				C536	K40140475	" 25 WV	4.7 μF
				C505,515,538,552,554,564,565	K40126106	" 16 WV	10 μF
R521,527,532	J00245562	" " " "	5.6 kΩ	C524,553,563	K40126226	" " "	22 μF
R541,568,570	J00245682	" " " "	6.8 kΩ	C508	K40126476	" " "	47 μF
R501,507,519,529,555,556,558,572	J00245103	" " " "	10 kΩ	C501	K40126107	" " "	100 μF
R517, 551	J00245153	" " " "	15 kΩ	C506	K40126227	" " "	220 μF
R508,518,528,540,554,573	J00245223	" " " "	22 kΩ	C502	K40126477	" " "	470 μF
R559	J00245393	" " " "	39 kΩ	C562	K40126336	" " "	33 μF
R567	J00245473	" " " "	47 kΩ				
R516	J00245563	" " " "	56 kΩ	TC501-505	K91000013	ECV-1ZW 20 x 32	20 pF
R547, 574	J00245104	" " " "	100 kΩ				
R560	J00245154	" " " "	150 kΩ				
R552, 553	J00245224	" " " "	220 kΩ				
R526	J00245274	" " " "	270 kΩ	L502	L1190023	FL-5H 220	22 μH
R564, 577	J00245474	" " " "	470 kΩ	L501	L1190038	FL-5H 271	270 μH
R582	J00245824	" " " "	820 kΩ	L503-506	L1190017	FL-5H 102	1 mH
R505	J10276229	" composition 1/2W GK	2.2Ω				
R502	J32276010	Wire wound 1W	1 Ω				
						TRANSFORMER	
				T501	L0020209		
		POTENTIOMETER					
VR501	J51727101	CR-19R	100 ΩB				
						RELAY	
				RL501	M1190002	FBR211A D012M	

MINI CONNECTOR			CAPACITOR		
J501	P0090043	5048-19A	C607	K30176271	Dipped mica 50WV 270 pF
J502	P0090040	5048-15A	C603	K30176331	" " " 330 pF
J503	P0090037	5048-08A	C634, 638, 642, 646	K02175470	Ceramic " CH 47 pF
J504	P0090042	5048-05A			
J505	P0090041	5048-03A	C626, 630	K02175680	" " " 68 pF
			C623	K02175820	" " " 82 pF
			C619	K02175101	" " " 100 pF
	R0042800	HEAT SINK	C615	K02175151	" " " 150 pF
			C611	K02179023	" " " 180 pF
			C601, 602, 604-606, 608-610, 612-614, 616-618, 620-622, 624, 625, 627-629, 631-633, 635-637, 639-641, 643-645, 647-649	K13170103	" " 0.01 μF
PREMIX LOCAL UNIT					
Symbol No.	Part No.	Description			
	C0021530	PREMIX LOCAL unit with components			
PB-2153	F0002153	P.C. Board			
		TRANSISTOR			
Q601-612	G3303800Y	2SC380TMY			
		DIODE			
D601-612	G2015550	Si 1S1555			
					CRYSTAL
			X601	H0100411	HC-18/U 15.9875 MHz
			X602	H0101480	" 17.9875 MHz
			X603	H0101490	" 21.4875 MHz
			X604	H0102294A	" 24.4875 MHz
			X605	H0101500	" 28.4875 MHz
			X606	H0102295A	" 32.4875 MHz
			X607	H0101510	" 35.4875 MHz
			X608	H0102296A	" 38.9875 MHz
			X609	H0101520	" 42.4875 MHz
			X610	H0101530	" 42.9875 MHz
			X611	H0101540	" 43.4875 MHz
			X612	H0101550	" 43.9875 MHz
					TRANSFORMER
			T601-612	L0020017	
					INDUCTOR
			L601	L1190016	FL5H-101K 100 μH
					SELECT SWITCH UNIT
Symbol No.	Part No.	Description			
	C0019660	SELECT SW unit with components			
PB-1966C	F0001966C	P.C. Board			
					DIODE
D701	G2090001	Si 10D1			
					RELAY
RL701	M1190002	FBR211A D012M			
					SWITCH
S701	M4090006	6B0003CC2060			


		MINI CONNECTOR		TRIMMER CAPACITOR	
J701	P0090049	5048-16A		TC801	K90000001 TSN-100D15 15 pF
				TC802	K91000016 ECV-1ZW 50 x 32 50 pF
					INDUCTOR
VFO UNIT				L801	L0020268
Symbol No.	Part No.	Description		L804, 805	L1190007 Micro inductor FL-4H 1.8 μH
	C0014400	VFO assembly 3420		L803, 806	L1190001 " " 250 μH
		PCB with components		L802	L1190040 " " S4 102K 1 mH
PB-1440B	F0001440B	P.C. Board			
					RECEPTACLE
		FET & TRANSISTOR		J801	P1090012 SI-6303-1
Q802	G3800190G	FET	2SK19GR		
Q801, 803	G3303720Y	Transistor	2SC372Y		
					TERMINAL
					Q5000005 Lighthouse type
		DIODE			Q5000011 Wrapping terminal C
D801	G2022360	Varactor	1S2236		
		RESISTOR			
R809, 811	J00245101	Carbon film	1/4W VJ 100 Ω	RECT. A UNIT	
R807	J00245221	" "	" " 220 Ω	Symbol No.	Part No.
R805, 808	J00245222	" "	" " 2.2 kΩ		C0019670 RECT. A unit with components
R802	J00245332	" "	" " 3.3 kΩ	PB-1967	F0001967 P.C. Board
R801	J00245103	" "	" " 10 kΩ		
R803	J00245183	" "	" " 18 kΩ		
R804	J00245223	" "	" " 22 kΩ		
R806, 810	J00245104	" "	" " 100 kΩ		IC, TRANSISTOR
				Q901	G1090162 IC μPC78L12
				Q903	G31049500 TR 2SA495(O)
		CAPACITOR			
C807	K02173080	Ceramic disc	50WV CH 8 pF		
C801	K06173080	" "	" " UJ 8 pF		DIODE
C803	K06175120	" "	" " 12 pF	D907	G2090001 Si 10D1
C804	K02175180	" "	" " CH 18 pF	D901-904	G2090002 " 10D10
C805, 814	K02179013	" "	" " 33 pF	D905, 906	G2090003 " V06B
C808, 818	K02175390	" "	" " 39 pF	D908	G2090007 Zener WZ061
C811	K02179023	" "	" " 180 pF		
C821, 823	K00175471	" "	" " 470 pF		
C809,810,812, 815,819,820, 824,826	K13170103	" "	" " 0.01 μF		
					RESISTOR
				R908	J01245560 Carbon film 1/4W TJ 56 Ω
C813	K30176431	Dipped mica	" 430 pF	R905	J10276220 " composition 1/2W GK 22 Ω
C802, 822	K30209001	" "	" 1000 pF	R901-904	J10276474 " " " 470 kΩ
C825	K70167334	Tantalum	10WV 0.33 μF	R907	J20339001 Metallic film 2W 0.4 Ω
		VARIABLE CAPACITOR			CAPACITOR
VC801	K90000024	C521 R112		C901-905	K13170103 Ceramic 50WV 0.01 μF
				C908-911	K40140106 Electrolytic 25WV 10 μF
				C907	K40140107 " " 100 μF

		RESISTOR					CAPACITOR	
R1605	J10276470	Carbon composition 1/2W GK 47 Ω			C1703	K12279001	Ceramic disc	500WV 0.001 μF
R1602, 1604	J10276560	"	"	" " 56 Ω	C1704, 1710	K12279002	" "	" 0.01 μF
R1603	J10276101	"	"	" " 100 Ω	C1705-1709, 1711, 1712	K13170473	" "	50WV 0.047 μF
R1601	J10276473	"	"	" " 47 kΩ				
					C1701	K31306102	Moulded mica	1kWV 1000 pF
					C1702	K30273050	Dipped mica	500WV 5 pF
		CAPACITOR						
C1601, 1602	K12279002	Ceramic disc 500WV 0.01 μF						
C1603, 1604, 1606	K13170473	" " 50WV 0.047 μF					INDUCTOR	
C1605	K30279051	Dipped mica 500WV 1000 pF			L1701	L1190020	Micro inductor	150 μH
					L1704	L1190039	" "	560 μH
					L1702, 1703 (R1701,1702)	L1020307	RF choke	
		INDUCTOR						
L1601	L1190020	Micro inductor FL5H 150 μH						
L1602(R1602)	L1020029					Q5000011	Wrapping terminal C	
	Q5000011	Wrapping terminal C						
					CLARIFIER CONTROL UNIT			
					Symbol No.	Part No.	Description	
						C0019730	CLAR.CONT.unit with components	
					PB-1973B	F0001973B	P.C. Board	
		FINAL BOARD						
Symbol No.	Part No.	Description						
	C0017151	Final board with components (without vacuum tube)						
PB-1715B	F0001715B	P.C. Board					DIODE	
					D1801	G2090001	Si	10D1
					D1802	G2090060	LED	GD4-203SRD
		VACUUM TUBE						
V1701, 1702	G6090001	6146B					RESISTOR	
					R1803	J00245102	Carbon film	1/4W VJ 1 kΩ
					R1804, 1805	J00245152	" " " "	1.5 kΩ
					R1802	J00245332	" " " "	3.3 kΩ
		VACUUM TUBE SOCKET			R1801	J00245472	" " " "	4.7 kΩ
VS1701, 1702	P3090024	SB-3606						
							POTENTIOMETER	
		DIODE			VR1801	J50710501	V10K8-1-2	500 ΩB
D1701	G2090002	Si 10D10						
							CAPACITOR	
		RESISTOR			C1801-1803	K13170473	Ceramic	50WV 0.047 μF
R1701, 1702 (L1702, 1703)	J10276560	Carbon composition 1/2W GK 56 Ω						
R1703, 1704, 1705	J10276101	" " " " 100 Ω						
R1706	J31333010	Meter shunt 2W 1 Ω			RL1801	M1190002	RELAY FBR211A D012M	

SWITCH			PLUG		
SW1801	N4090011	2B0005FC206	P2201		5047-06 (with wire T9202430)
			P2202		5047-08 (" " T9202440A)
COUNTER UNIT (3420)					
LED BOARD			Symbol No.	Part No.	Description
Symbol No.	Part No.	Description		C0020862	P.C.B. with components
	C0019740	LED board with components	PB-2086A	F0002086A	Printed Circuit Board
PB-1974A	F0001974A	P.C. Board			
					IC, FET & TRANSISTOR
			Q2312	G1090249	IC MSM9520RS
		LED	Q2320	G1090079	" μ PA54H
D1901-1906	G2090060	GD4-203SRD	Q2305	G1090299	" μ PC7805H
			Q2301	G4800730	FET 3SK73
			Q2321	G3104960Y	TR 2SA496Y
			Q2306-2311, 2313-2319	G3109520L	" 2SA952L
		RESISTOR			
R1901, 1902	J01245102	Carbon film 1/4W TJ 1 k Ω	Q2303	G3316740L	" 2SC1674L
			Q2304	G3318150G	" 2SC1815GR
					DIODE
			D2301-2313	G2015550	Si 1S1555
LEVER SWITCH BOARD					
Symbol No.	Part No.	Description			
	C0019750	LEVER SW board with components			CRYSTAL
PB-1975A	F0001975A	P.C. Board	X2301	H0102272	HC-18/U 6.5536 MHz
					RESISTOR
		RESISTOR	R2312	J00245100	Carbon film 1/4W VJ 10 Ω
R2006	J01245560	Carbon film 1/4W TJ 56 Ω	R2331, 2334, 2337, 2340, 2343, 2346, 2349	J00245330	" " " " 33 Ω
R2005	J01245101	" " " " 100 Ω			
R2001	J01245121	" " " " 120 Ω			
R2002	J01245391	" " " " 390 Ω			
R2008	J00245562	" " " VJ 5.6 k Ω	R2350	J00245560	" " " " 56 Ω
R2004	J01245683	" " " TJ 68 k Ω	R2308, 2318, 2320, 2322, 2324, 2326, 2328	J00245101	" " " " 100 Ω
		SWITCH	R2301	J01245221	" " " TJ 220 Ω
S2001-2004	N3090002	SLE62301	R2307, 2310, 2311	J00245221	" " " VJ 220 Ω
S2005	N3090008	SLE64251			
			R2352	J00245331	" " " " 330 Ω
			R2351	J00245471	" " " " 470 Ω
			R2317, 2319, 2321, 2323, 2325, 2327, 2330, 2333, 2336, 2339, 2342, 2345, 2348	J01245102	" " " TJ 1 k Ω
DISPLAY UNIT (3420)					
Symbol No.	Parts No.	Description			
	C0020982	P.C.B. with components			
PB-2098A	F0002098A	Printed Circuit Board			
			R2329, 2332, 2335, 2338, 2341, 2344, 2347	J00245152	" " " VJ 1.5 k Ω
		DISPLAY LED			
D2201-2206	G2090069	HP5082-7623	R2302, 2315	J00245562	" " " " 5.6 k Ω

AM UNIT				CAPACITOR			
Symbol No.	Part No.	Description					
				C2420	K30176331	Dipped mica 50 WV	390 pF
	C0020400	AM unit with components		C2416	K02175390	Ceramic " CH	39 pF
PB-2040	F0002040	P.C. Board		C2417, 2426	K02175101	" " "	100 pF
				C2418	K02175151	" " "	150 pF
		FET & TRANSISTOR		C2401	K02175221	" " "	220 pF
Q2404	G3800190G	FET	2SK19GR	C2419, 2421-	K13170103	" " "	0.01 μF
Q2406	G4800510C	"	3SK51-03	2423, 2428,			
Q2405, 2406, 2407	G3303800Y	TR	2SC380TM-Y	2429, 2434,			
Q2401	G3307320G	"	2SC732TM-GR	2436, 2437-			
	G3318150Y	"	2SC1815Y	2440, 2445,			
				2449			
				C2425, 2427,	K13170473	" " "	0.047 μF
		DIODE		2430-2433,			
D2406	G2090029	Ge.	1N60	2436, 2439			
D2401, 2402, 2404, 2405	G2015550	Si.	1S1555	C2451	K50177102	Mylar " "	0.001 μF
				C2407	K50177222	" " "	0.0022 μF
				C2410, 2415,	K50177103	" " "	0.01 μF
		CRYSTAL		2435, 2438,			
X2401	H0100423	HC-18/U	8988.3 kHz	2447, 2448,			
				2449			
		RESISTOR		C2402	K50177473	" " "	0.047 μF
R2441, 2457	J00245470	Carbon film	¼W VJ 47 Ω	C2414	K50177224	" " "	0.22 μF
R2455	J00245560	" " "	" " 56 Ω	C2405, 2450,	K40170105	Electrolytic " "	1 μF
R2411, 2414, 2418, 2422, 2425, 2432, 2434, 2447	J00245101	" " "	" " 100 Ω	2453			
R2406, 2423	J00245331	" " "	" " 330 Ω	C2452	K40140475	" 25 WV	4.7 μF
R2445, 2452	J00245471	" " "	" " 470 Ω	C2406, 2408,	K40126106	" 16 WV	10 μF
R2409, 2419, 2435, 2436, 2438-2440 2448	J00245102	" " "	" " 1 kΩ	2409, 2424,			
				2454			
R2437	J01245102	" " "	TJ 1 kΩ	C2446	K40126476	" " "	47 μF
R2431	J00245272	" " "	VJ 2.7 kΩ	C2403	K40126107	" " "	100 μF
R2401, 2410, 2453, 2456	J00245332	" " "	" " 3.3 kΩ	C2413	K40126227	" " "	220 μF
R2454	J01245332	" " "	TJ 3.3 kΩ			TRIMMER CAPACITOR	
R2404	J00245392	" " "	VJ 3.9 kΩ	TC2402	K91000012	ECV 1ZW 10 x 32	10 pF
R2420, 2429	J00245472	" " "	" " 4.7 kΩ	TC2401	K91000013	" 20 x 32	20 pF
R2442, 2444	J00245562	" " "	" " 5.6 kΩ			INDUCTOR	
R2402, 2424, 2446, 2449, 2458	J00245103	" " "	" " 10 kΩ	L2401, 2403	L1190016	FL5H-101K	100 μH
R2407	J00245123	" " "	" " 12 kΩ	L2402	L1190017	FL5H-102K	1 mH
R2405, 2433	J00245153	" " "	" " 15 kΩ			TRANSFORMER	
R2430	J00245183	" " "	" " 18 kΩ	T2401	L0020141	R12-4171	
R2443, 2450	J00245223	" " "	" " 22 kΩ			CONNECTOR	
R2403	J00245273	" " "	" " 27 kΩ	J2401, 2404	P1090016	SQ3056	
R2408, 2412, 2421	J00245333	" " "	" " 33 kΩ	J2402	P0090041	5048-03A	
R2416	J00245393	" " "	" " 39 kΩ	J2403	P0090037	5048-08A	
R2427	J00245563	" " "	" " 56 kΩ	P2401	P0090075	P-7015	
R2428	J00245683	" " "	" " 68 kΩ				
R2417, 2426, 2451	J00245104	" " "	" " 100 kΩ			Q5000011	Wrapping terminal C
						B4025945B	P.C.B. support D
		THERMISTOR					
TH2401	G9090003	D33A					

FM UNIT (OPTION)			R2502, 2503, 2508, 2523, 2548, 2565, 2569, 2574, 2575, 2584	J00245101	Carbon film 1/4W VJ	100 Ω
Symbol No.	Parts No.	Description				
	C0022180	PCB with components				
PB-2218	F0002218	Printed Circuit Board				
			R2554, 2564	J00245221	" " " "	220 Ω
		IC, FET & TRANSISTOR	R2563	J00245471	" " " "	470 Ω
Q2506	G1090072	IC μPC577H	R2549, 2568	J00245561	" " " "	560 Ω
Q2501	G3801250	FET 2SK125	R2507	J00245681	" " " "	680 Ω
Q2516	G4800510C	" 3SK51-03	R2509, 2510, 2512, 2515, 2539, 2546, 2555, 2573, 2576, 2577, 2581, 2583, 2586	J00245102	" " " "	1 kΩ
	G3107330Q	TR 2SA733Q				
	G3305350B	" 2SC535B				
Q2502, 2504, 2505, 2507- 2515, 2518	G3309450Q	" 2SC945Q				
			R2578	J01245102	" " " TJ	1 kΩ
			R2534, 2540	J00245152	" " " VJ	1.5 kΩ
		DIODE	R2542	J00245182	" " " "	1.8 kΩ
D2503-2506	G2001880F	Ge 1S188FM	R2516, 2517, 2519, 2521, 2522, 2524, 2532	J00245222	" " " "	2.2 kΩ
D2507	G2015550	Si 1S1555				
D2501, 2502, 2508, 2509, 2512-2515	G2090027	" 1SS53	R2579	J00245272	" " " "	2.7 kΩ
D2511	G2090040	Varactor FC63	R2530, 2541, 2544	J00245332	" " " "	3.3 kΩ
D2510	G9090005	Varistor MV103				
			R2580	J00245392	" " " "	3.9 kΩ
			R2514, 2582	J00245472	" " " "	4.7 kΩ
			R2504, 2525, 2526, 2533, 2543, 2560	J00245562	" " " "	5.6 kΩ
		CRYSTAL				
X2501	H0100431	HC-18/U 8532.5 kHz				
X2502	H0100440A	" 8988.3 kHz	R2505	J00245822	" " " "	8.2 kΩ
			R2536, 2545, 2551, 2553, 2567	J00245103	" " " "	10 kΩ
		CRYSTAL FILTER	R2572	J00245183	" " " "	18 kΩ
XF2501	H1100470	8.9M20A	R2513, 2527, 2528, 2558, 2561	J00245223	" " " "	22 kΩ
			R2550	J00245273	" " " "	27 kΩ
			R2559, 2566	J00245333	" " " "	33 kΩ
CF2501	H3900201	CFW455E	R2506, 2538, 2562	J00245473	" " " "	47 kΩ
CF2502	H3900030	LF-B15				
			R2535, 2571	J00245563	" " " "	56 kΩ
			R2501, 2552, 2570, 2587	J00245104	" " " "	100 kΩ
		CERAMIC FILTER	R2537, 2556	J00245124	" " " "	120 kΩ
CD2501	H7900040	SFD455-S4	R2518, 2520, 2529, 2531, 2585	J00245154	" " " "	150 kΩ
			R2547	J00245274	" " " "	270 kΩ
		THERMISTOR				
TH2501	G9090001	SDT-250				
TH2502	G9090003	D-33A				
			VR2503	J51721502	EVL-S3A A00B53	5 kΩB
			VR2501	J51721103	EVL-S3A A00B14	10 kΩB
			VR2502	J51721503	EVL-S3A A00B54	50 kΩB
R2557	J00245560	Carbon film 1/4W VJ				56 Ω
R2511	J00245820	" " " "				82 Ω

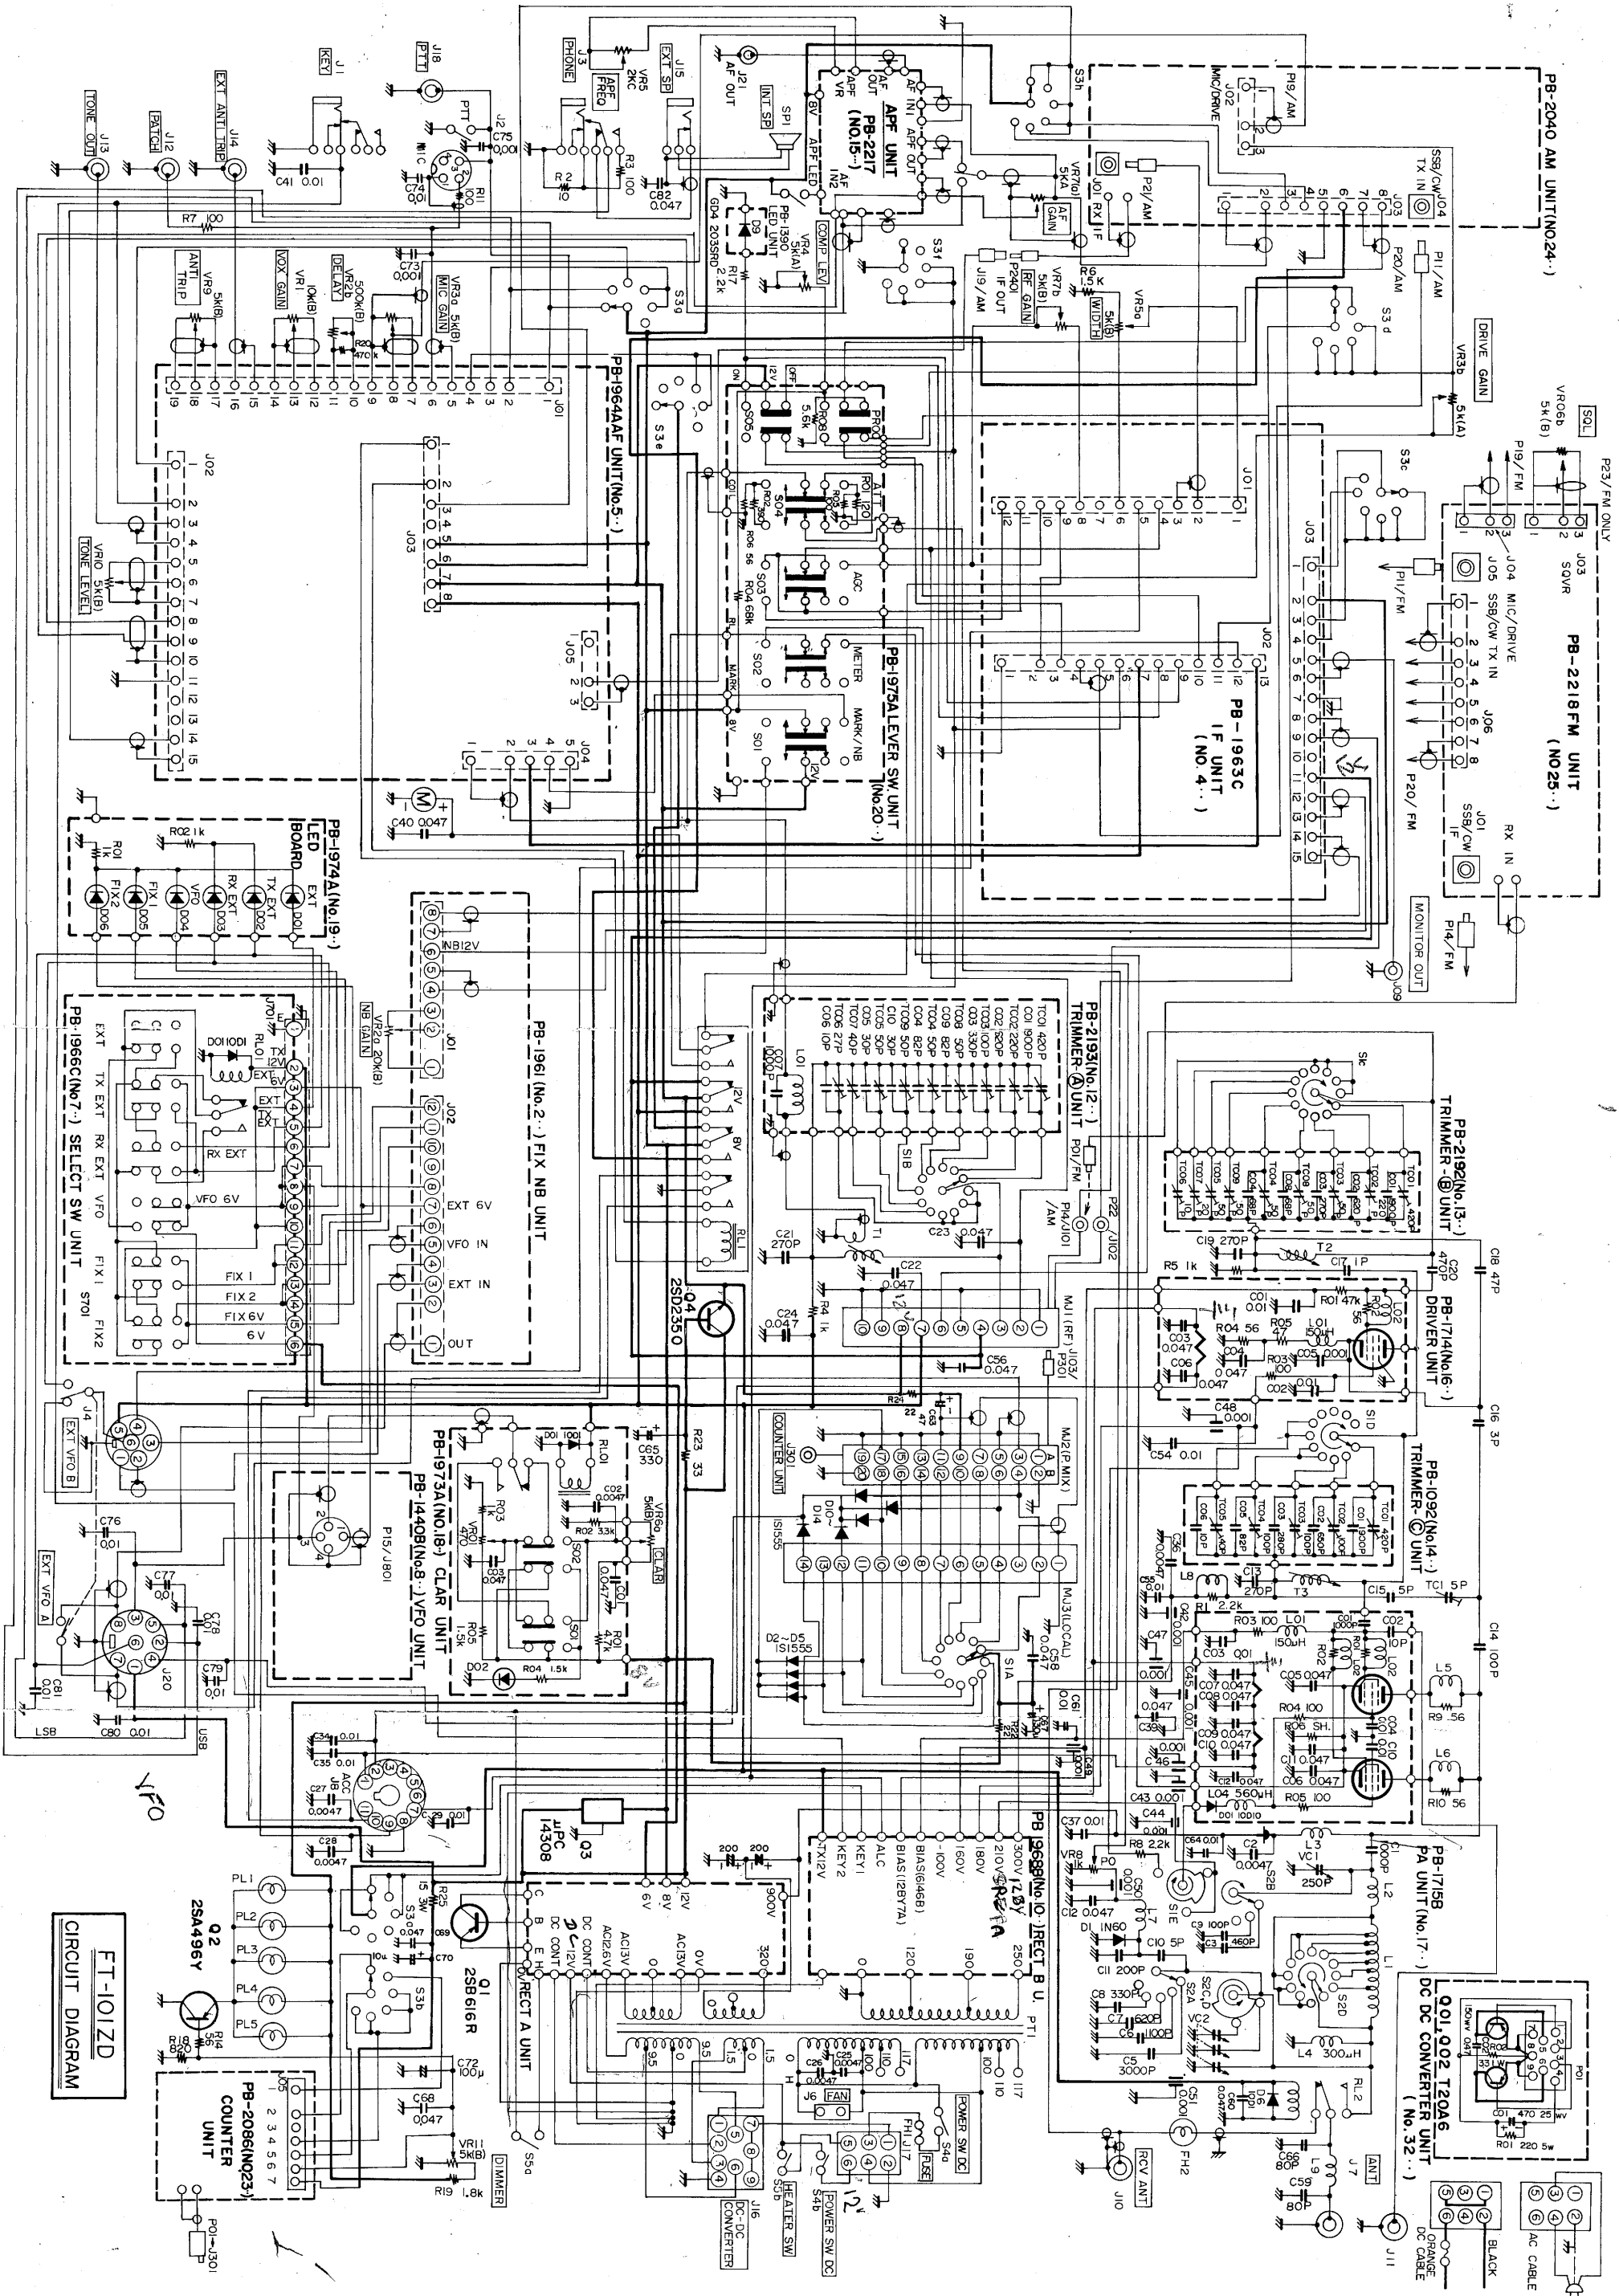

FT-101ZD
CIRCUIT DIAGRAM

PB-2086(No. 23-1)
COUNTER
UNIT