

YAESU
The radio

C4FM/FM 144/430MHz
DUAL BAND DIGITAL TRANSCEIVER

FTM-200DR

FTM-200DE

Advance Manual



Contents

Digital Personal ID (DP-ID) feature	6
About the Digital Personal ID (DP-ID) feature	6
Registering the DP-ID to a DR-2X digital repeater	6
DR-2X Remote Control Feature	6
Registering the DP-ID of other stations	6
Deleting a registered DP-ID	8
Communicating with specified stations in the Analog FM mode ...	9
Selecting the squelch type in the analog FM mode	9
Tone squelch feature	10
Setting CTCSS Tone frequency	10
Searching for the CTCSS Tone transmitted by the other Station	10
Digital Code Squelch (DCS) feature	11
Setting the DCS CODE	11
Searching for the DCS Code Used by the Other Station	11
New Two-Tone CTCSS Pager Function	12
Using the Pager Function	12
Setting the Code for this Station	12
Receiving “Pager Code” calls from a Remote Station (Standby Operation) ...	13
Notification of a Call from a Remote Station by the Bell Function	13
Convenient memory function	14
Programmable Memory Channel Scan (PMS)	14
Registering to the Programmable Memory Channels	14
Performing Programmable Memory Channel Scan	14
Receiving Weather Broadcast Channels	15
Assigning the “WX” function to a programmable key on the microphone	15
Recalling the weather channels	15
Listening with weather alert	15
DTMF Operation	16
Registering the DTMF memory	16
Setting the auto dialer function	16
Transmitting DTMF code automatically using DTMF memory	16
Manually Transmitting the DTMF Code	16
Using the GPS Function	17
Positioning Using GPS	17
Smart Navigation Function	18
Real-Time Navigation Function	18
Backtrack Function	18
Saving GPS Information (GPS Log Function)	20
Checking Tracks on Your PC	20
GPS Screen Information and Operation	21
Measuring the altitude	22

Functions used as needed	23
Timer / Clock function	23
Using the lap timer	23
Using the countdown timer	24
Using the Voice Guide unit FVS-2	25
Mounting the voice guide unit “FVS-2”	25
Using the voice memory	26
Setting the voice memory operation	26
Recording the receive audio	27
Replaying the recorded audio	27
Selecting the track	27
Erasing the recorded audio	27
Voice announcement of the operating frequency	28
Setting the announce function operation	28
Voice announcement of the operating frequency	29
Copying the Radio Data to another Transceiver	30
Connecting an external device	31
Connecting to a computer	31
Transmitting GPS location information	32
Updating the transceiver firmware	32
Using the transceiver for packet communications	33
Setup Menu	36
Setup Menu Operation	36
Tables of Setup Menu Operations	37
Setup Menu Operations	46
DISPLAY	46
1 FREQUENCY INPUT	46
2 LCD BRIGHTNESS	46
3 FREQUENCY COLOR	46
4 BAND SCOPE	46
5 LOCATION INFO	46
6 COMPASS	47
7 DISPLAY MODE	47
TX	47
8 TX POWER	47
9 AMS TX MODE	47
10 MIC GAIN	48
11 VOX	48
12 AUTO DIALER	48
13 TOT	48
14 DIGITAL VW	48
RX	49
15 FM BANDWIDTH	49
16 RX MODE	49

MEMORY	49
17 HOME	49
18 MEMORY LIST	49
19 MEMORY LIST MODE	49
20 PMG CLEAR	49
CONFIG	50
21 BEEP	50
22 BAND SKIP	50
23 RPT ARS	50
24 RPT SHIFT	50
25 RPT SHIFT FREQ	50
26 RPT REVERSE	51
27 MIC PROGRAM KEY	51
28 DATE&TIME ADJUST	51
29 DATE&TIME FORMAT	51
30 TIME ZONE	51
31 STEP	52
32 CLOCK TYPE	52
33 UNIT	52
34 APO	52
35 GPS DATUM	52
36 GPS DEVICE	53
37 GPS LOG	53
AUDIO	53
38 RECORDING	53
39 REC/STOP	53
SIGNALING	53
40 DTMF	53
41 DTMF MEMORY	54
42 SQL TYPE	54
43 TONE SQL FREQ / DCS CODE	54
44 SQL EXPANSION	54
45 PAGER CODE	54
46 PR FREQUENCY	54
47 BELL RINGER	54
48 WX ALERT	55
SCAN	55
49 SCAN	55
50 DUAL RCV MODE	55
51 DUAL RX INTERVAL	55
52 PRIORITY REVERT	55
53 SCAN RESUME	56
DIGITAL	56
54 DIGITAL POPUP	56
55 LOCATION SERVICE	56
56 STANDBY BEEP	56
GM	56
WIRES-X	57

DATA	57
66 COM PORT	57
67 DATA BAND	58
68 DATA SPEED	59
69 DATA SQL	59
APRS	59
SD CARD	60
104 BACKUP	60
105 MEMORY INFO	60
106 FORMAT	60
OPTION	61
107 Bluetooth	61
108 VOICE MEMORY	61
109 FVS REC	61
110 TRACK SELECT	61
111 PLAY	61
112 STOP	61
113 CLEAR	61
114 VOICE GUIDE	61
115 USB CAMERA	61
CLONE	62
RESET	62
118 CALLSIGN	62
119 MEMORY CH RESET	62
120 APRS RESET	62
121 CONFIG SET	63
122 CONFIG RECALL	63
123 SOFTWARE VERSION	63
124 FACTORY RESET	63
Appendix	64
The folder configuration of the micro-SD card	64
Maintenance	65
Care and maintenance	65
Replacing the fuse	65
Troubleshooting	66
There is no power	66
There is no sound	66
There is no transmission	66
The keys or knobs do not operate	66

Digital Personal ID (DP-ID) feature

About the Digital Personal ID (DP-ID) feature

When operating in digital C4FM communications, each transceiver is programmed with, and sends its own individual ID information (Radio ID) in each transmission. The DP-ID function and the individual identification information, makes possible group communications between stations that are within communications range. The Digital Personal ID (DP-ID) feature opens the speaker audio only when a signal set to the same DP-ID in the Digital Mode is received, even if each transceiver is set to a different Digital Group ID (DG-ID) number.



To utilize this function, Digital C4FM mode transceivers compatible with the DG-ID function are required.

Registering the DP-ID to a DR-2X digital repeater

After registering the transceiver's DP-ID to the DR-2X repeater, the settings and functions of the DR-2X can be remotely controlled. Remote control cannot be performed from a transceiver that has not been registered with the DP-ID, so it is possible to securely manage repeaters. The transceiver with DP-ID registered in DR-2X is allowed preferential access in an emergency, even when used without the DG-ID setting.



To register the transceiver DP-ID in the DR-2X C4FM digital repeater, refer to the DR-2X instruction manual.

DR-2X Remote Control Feature

To display the FTM-200D remote-control screen while in C4FM digital mode, press and hold the [*] key on the microphone. To return to normal mode, press the [*] key on the microphone. For details on the remote-control function of the DR-2X, refer to the DR-2X instruction manual.

- Activate the repeater operation
- Deactivate the repeater operation
- Set the repeater to C4FM mode
- Set the transmit power
- Voice Message Control (Rec / Play / Stop)
- Set the Emergency Call

Registering the DP-ID of other stations



- Once registered, the DP-ID is stored until deleted.
- Register each other's DP-ID with nearby transceivers.
- When setting the DG-ID code to "00", the transceiver will receive signals from all digital C4FM stations. To utilize the DP-ID function, it is necessary to set the receive DG-ID code to a number other than "00".


1. Press and hold the [F MENU] key → [57 DP-ID LIST] → Press the **DIAL** knob
 - The DP-ID list is displayed.
 - If several DP-IDs are displayed, rotate the **DIAL** knob to register the desired DP-ID.

- A transmission in the digital C4FM mode from another transceiver will register the DP-ID.

When a signal from the other station is received, the call sign and "Registration" are displayed on the LCD.



- When a signal from another registered transceiver is received, nothing is displayed on the LCD.
- When a transceiver is previously registered with a different call sign, the DP-ID listing is changed to the newly registered call sign.

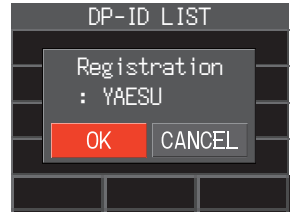


- Press the **DIAL** knob to save the setting.
 - When registering the DP-ID is complete, the display returns to the DP-ID list screen.
 - If not registering a DP-ID, rotate the **DIAL** knob to select "**CANCEL**" then press the **DIAL** knob.
 - If registering several DP-IDs, repeat step 2 and 3.
 - A maximum of 24 stations may be registered.
- Press any key (except Power Switch) or **PTT** switch to finish the setting and return to the original screen.
 - All the other communicating stations should similarly register the DP-IDs to the DP-ID lists of their transceivers.
 - The DP-ID setting is complete.



To communicate using the DP-ID function, register the DP-ID of each other's transceiver on both transceivers. By registering the DP-ID, users may communicate even if the Digital group ID (DG-ID) is a different setting.

The transceivers may communicate even if the Digital Group ID (DG-ID) is a different setting because Station **A** and station **B** have registered each other's DP-IDs on both transceivers.

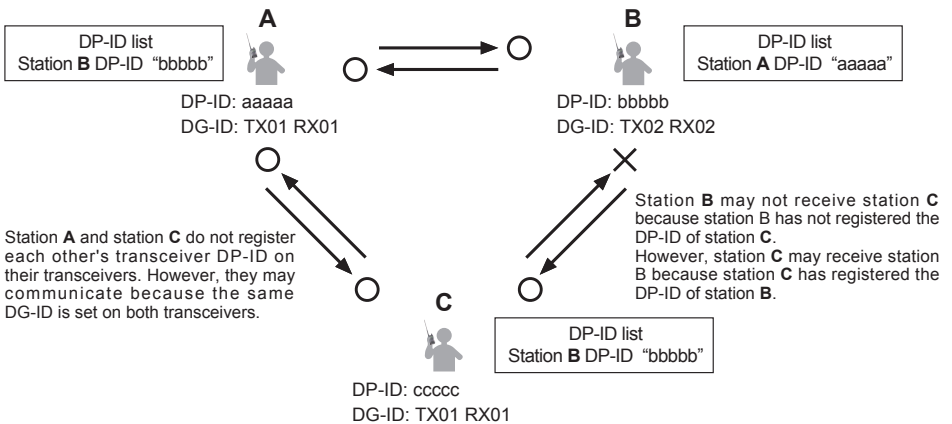


Deleting a registered DP-ID

1. Press and hold the [F MENU] key → [57 DP-ID LIST] → Press the **DIAL** knob
The DP-ID list is displayed.



2. Rotate the **DIAL** knob to select the call sign of the other transceiver, then press the [F MENU] key.
3. Press the **DIAL** knob.
Confirmation screen “**DELETE?**” is displayed.

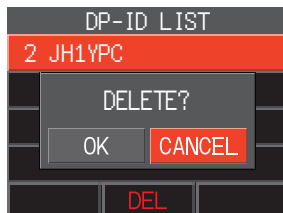

4. Press the **DIAL** knob to select [OK] then press the **DIAL** knob to delete.
 - If not deleting in the DP-ID list, select [CANCEL] then press the **DIAL** knob.
 - If deleting several DP-IDs, press the [F MENU] key, then repeat step 2 and 3.
5. Press any key (except Power Switch) or **PTT** switch to finish the setting and return to the original screen.

Communicating with specified stations in the Analog FM mode

Selecting the squelch type in the analog FM mode

1. Press the [F MENU] key → [SQL] → Press the DIAL knob or press and hold the [F MENU] key → [1 FREQUENCY INPUT]
2. Rotate the DIAL knob to select the type of squelch, refer to the table below.
3. Press any key (except Power Switch) or PTT switch to finish the setting and return to the original screen.

KEYPAD	HOME
SCAN	TXPWR HIGH
SQL OFF	ARS AUTO
RPT-R	TOUR 100.0
DTMF	APRS OFF
OFF	



Tone squelch (CTCSS), DCS and the New PAGER (EPCS) functions do not operate in the C4FM digital mode. Press the [D X] key to change to the Analog FM mode, or turn the AMS function ON.

Squelch type	Description
OFF	Deactivates the CTCSS and DCS functions. Returns to the normal squelch operation in the Analog FM mode.
T-ENC (TONE ENC)	Activates the CTCSS tone for Analog FM Transmissions. Receives with normal squelch operation.
T-SQL (TONE SQL)	Activates the CTCSS tone squelch function on Analog FM receive.
REV-T (REV TONE)	Activates the reverse tone function. Used to monitor communications based on the squelch control system. When a signal contains the designated tone, the squelch is not opened, and when the tone signal disappears, the squelch opens, and communication starts.
DCS	Activates the Digital Code Squelch (DCS) function. The DCS code may be selected from 104 codes (from 023 to 754).
PRFRQ (PR FREQ)	Activates the no-communication squelch function for radios. The no-communication signal tone frequencies may be specified within the range of 300 Hz to 3000 Hz in steps of 100 Hz.
PAGER	Activates a new two-tone CTCSS pager function. When communicating with transceivers among friends, specify personal codes (each code is composed of two tones) so that only specific stations are called.
D-ENC* (DCS ENC)	Transmits the signal containing the DCS CODE. Receives as a normal squelch operation.
T-DCS* (TONE DCS)	Sends a tone signal when transmitting, and receives only signals with a matching DCS code.
D-TSQ* (DCS TSQ)	Sends a DCS CODE when transmitting and receives only signals that contain a matching tone signal when receiving.

* Press and hold [F MENU] key → [44 SQL EXPANSION] → Press the DIAL knob to access “ON”, “D-ENC (DCS ENC)”, “T-DCS (TONE DCS)” and “D-TSQ (DCS TSQ)” setting values are activated.



- The squelch type may be set for each frequency band (BAND).
- The CTCSS and DCS squelch settings are also active during scanning. If scanning is performed with the CTCSS and DCS squelch function activated, scanning stops only when a signal containing the specified CTCSS tone or DCS code is received.
- Pressing the program key on the microphone to which the "SQL OFF" function is assigned, allows all signals that do not contain a tone or DCS code, and signals with different tones, DCS codes, digital mode signals to all be heard.

Tone squelch feature

The tone squelch opens the speaker audio only when a signal containing the specified CTCSS tone is received. The receiver will be quiet while waiting for a call from a specific station.



The Tone Squelch does not function in digital mode. Press the [D X] key to change from Digital, to Analog FM or to AMS function.

Setting CTCSS Tone frequency

The tone may be selected from 50 frequencies (67.0 Hz to 254.1 Hz).

1. Press the [F MENU] key → [SQL] → Press the **DIAL** knob
2. Rotate the **DIAL** knob to select [T-SQL] then press the **DIAL** knob.
3. Rotate the **DIAL** knob to select [TONE] then press the **DIAL** knob.
4. Rotate the **DIAL** knob to select the tone frequency.
5. Press any key (except Power Switch) to finish the setting and return to the original screen.

KEYPAD	HOME
SCAN	TXPWR HIGH
SQL T-SQL	ARS AUTO
RPT-R	TONE 100.0
DTMF	APRS OFF
100.0 Hz	



- The tone frequency setting is common with the squelch types as follows:
"T-ENC (TONE ENC)", "T-SQL (TONE SQL)", "REV-T (REV TONE)",
"T-DCS (TONE DCS)", "D-TSQ (DCS TSQ)"
- The default setting is "100.0 Hz"

Searching for the CTCSS Tone transmitted by the other Station

Search and display the CTCSS tone transmitted by the other station.



- Tone search does not function in digital mode. Press the [D X] key to change from Digital to Analog FM or the AMS function.
- To set the transceiver operation when scanning stops, press and hold the [F MENU] key → [53 SCAN RESUME] → press the **DIAL** knob. This setting is common with the scan setting, tone search function and DCS search function.

1. Press the [F MENU] key → [SQL] → Press the **DIAL** knob
2. Rotate the **DIAL** knob to select [T-SQL] then press the **DIAL** knob.
3. Rotate the **DIAL** knob to select [TONE] then press the **DIAL** knob.
4. Press and hold the microphone [UP] or [DWN] switch.
 - The transceiver begins searching for a matching tone frequency.
 - When a corresponding tone frequency is detected, the searching stops and the audio is heard.
 - Press the **PTT** switch or the [UP] or [DWN] switch to stop searching.

5. Press the **DIAL** knob or the **[SQL BACK]** key.
6. Press any key (except Power Switch) to save the detected tone frequency and return to normal operation.

Digital Code Squelch (DCS) feature

The Digital Code Squelch opens the speaker audio only when a signal containing the specified DCS code is received. The DCS code may be selected from 104 types (from 023 to 754).



The DCS Squelch does not function in digital mode. Press the **[D X]** key to change from Digital to Analog FM or AMS mode.

Setting the DCS CODE

1. Press the **[F MENU]** key → **[SQL]** → Press the **DIAL** knob
2. Rotate the **DIAL** knob to select **[DCS]** then press the **DIAL** knob.
3. Rotate the **DIAL** knob to select **[DCS]** then press the **DIAL** knob.
4. Rotate the **DIAL** knob to select the DCS code.
5. Press any key (except Power Switch) to finish the setting and return to the original screen.

KEYPAD	HOME
SCAN	TXPWR HIGH
SQL DCS	ARS AUTO
RPT-R	DCS 023
DTMF	APRS OFF
023	



- The DCS code set in the above operation is common for all transmissions with a DCS Code (“DCS”, “D-ENC (DCS ENC)”, “T-DCS (TONE DCS)”, “D-TSQ (DCS TSQ)”).
- The default DCS code is “023”.

Searching for the DCS Code Used by the Other Station

Search for the DCS code used by the other station.



- The DCS search does not function in digital mode. Press the **[D X]** key to change from Digital to Analog FM or AMS mode.
- To set the transceiver operation when scanning stops, press and hold the **[F MENU]** key → **[53 SCAN RESUME]**. This setting is common with the scan setting, tone search and DCS search functions.

1. Press the **[F MENU]** key → **[SQL]** → Press the **DIAL** knob
2. Rotate the **DIAL** knob to select **[DCS]** then press the **DIAL** knob.
3. Rotate the **DIAL** knob to select **[DCS]** then press the **DIAL** knob.
4. Press and hold the Microphone **[UP]** or **[DWN]** switch.
 - The transceiver begins searching for a matching DCS code.
 - When a corresponding DCS code is detected, the searching stops and the audio is heard.
 - Press the **PTT** switch or the **[UP]** or **[DWN]** switch to stop searching.
5. Press any key (except Power Switch) to save the detected DCS code and return to normal operation.

New Two-Tone CTCSS Pager Function

When using **FTM-200DR/DE** transceivers with a group of friends, setting the Two-Tone CTCSS personal codes allows calling just the specific stations. Even when the person who is called is not near the transceiver, the information on the LCD indicates that a call was received.



The new two-tone CTCSS pager feature does not operate in digital mode. Press the **[D X]** key to change from Digital to Analog FM or the AMS function.

Using the Pager Function

1. Press the **[F MENU]** key → **[SQL]** → Press the **DIAL** knob
2. Rotate the **DIAL** knob to select **[PAGER]** then press the **DIAL** knob.
3. Press any key (except Power Switch) or **PTT** switch to finish the setting and return to the original screen.

Setting the Code for this Station

Set the “pager code” to be called by other stations.

1. Activate the pager function (refer to “Using the pager function” above).
2. Press and hold the **[F MENU]** key → **[45 PAGER CODE]** → Press the **DIAL** knob
3. Rotate the **DIAL** knob to select **[RX CODE 1]** then press the **DIAL** knob.

SIGNALING	
45 PAGER CODE	
RX CODE 1	05
RX CODE 2	47
TX CODE 1	05
TX CODE 2	47

4. Rotate the **DIAL** knob to select the RX CODE 1 of the code from 01 to 50.
5. Press the **DIAL** knob or the **[SQL BACK]** key.

SIGNALING	
45 PAGER CODE	
RX CODE 1	05
RX CODE 2	47
TX CODE 1	05
TX CODE 2	47

6. Rotate the **DIAL** knob to select **[RX CODE 2]** then press the **DIAL** knob.
7. Rotate the **DIAL** knob to select the RX CODE 2 of the code from 01 to 50.
The same code cannot be used for RX CODE 1 and RX CODE 2.

SIGNALING	
45 PAGER CODE	
RX CODE 1	05
RX CODE 2	47
TX CODE 1	05
TX CODE 2	47

Next, set the pager code for directing a call to a specific partner station.

8. Rotate the **DIAL** knob to select **[TX CODE 1]** then press the **DIAL** knob.

9. Rotate the **DIAL** knob to select the TX CODE 1 of the codes from 01 to 50.
10. Press the **DIAL** knob or the **[SQL BACK]** key.
11. Rotate the **DIAL** knob to select **[TX CODE 2]** then press the **DIAL** knob.
12. Rotate the **DIAL** knob to select the TX CODE 2 of the codes from 01 to 50.
The same code cannot be used for TX CODE 1 and TX CODE 2.
13. Press any key (except Power Switch) or **PTT** switch to finish the setting and return to the original screen.
14. Press the **PTT** switch to transmit a call to the specific station.

-
- The reverse combination works as the same code, that is “05 47” is the same as “47 05”.
 - If the same code is specified for all individuals, all the individuals can be called at the same time.
 - The default code is “05 47”.
 - When receiving the codes, the sound of the tones may be heard intermittently.
-



Receiving “Pager Code” calls from a Remote Station (Standby Operation)

When the Pager function is activated, the audio of received calls with a corresponding Pager Code is heard.

Furthermore, when the Bell function (see below) is activated, the bell rings when receiving calls from the other station.

Notification of a Call from a Remote Station by the Bell Function

The Bell may be set to sound an Alert when a call from another station containing a corresponding tone, DCS or pager code is received.

1. Press and hold the **[F MENU]** key → **[47 BELL RINGER]** → Press the **DIAL** knob
2. Rotate the **DIAL** knob to select the desired number of times (1 - 8 times or continuous) the Bell rings.
OFF / 1 time / 3 times / 5 times / 8 times / CONTINUOUS



If the setting is “CONTINUOUS”, the bell keeps sounding until an operation is made.

SIGNALING	
44	SQL EXPANSION
45	PAGER CODE >
46	PQ FREQUENCY
47	BELL RINGER
OFF	

3. Press any key (except Power Switch) or **PTT** switch to finish the setting and return to the original screen, the “📞” icon appears on the display.

Convenient memory function

Programmable Memory Channel Scan (PMS)

Registering to the Programmable Memory Channels

50 sets of PMS memory channels (L01/U01 to L50/U50) are available.

- Register the lower and upper frequencies of the frequency range in a pair of Programmable Memory Channels.

L nn: Lower limit memory channel

U nn: Upper limit memory channel

- PMS memory channels are displayed between channel 999 and channel 001. On the Memory Channel List screen, press the **[A]** key on the microphone to jump the “L01” PMS Memory Channel.
- For more details on registering frequencies to the memory channels, see “Writing to Memory” in the Operating Manual.



- Make sure to use the corresponding numbers for the lower and upper limit memory channels.
- Set the Programmable Memory scanning (PMS) lower and upper limits as follows:
 - The scan width between the lower and upper limit frequencies must be 100 kHz or more.
 - The lower and upper limit memory channels must be within the same frequency band.
 - The lower and upper limit memory channels must not be registered in reverse.

Performing Programmable Memory Channel Scan

The programmable memory channel scan allows scanning a specified frequency range within the same frequency band.

1. Press the **[V/M mw]** key to enter the memory mode.
2. Recall the PMS memory channel to which the lower limit (Lnn) or upper limit (Unn) of the frequency band is registered.
3. Press and hold the **[UP]** or **[DWN]** switch of the microphone.
 - Programmable memory channel scanning starts.
 - Pressing the program key on the microphone set to the “SCAN” function also starts the PMS scan operation.
 - During scanning, “**PMS**” appears on the display.
 - If the **DIAL** knob is rotated while scanning is in progress, the scanning will continue up or down in frequency according to the direction of the **DIAL** knob rotation.If the scanner halts on an incoming signal, the frequency will blink. Scanning will resume in about five seconds.

4. Press the **PTT** switch or the **[UP]** or **[DWN]** switch on the microphone, to cancel the scanning.

In this state (displayed as “**PMS**” at the upper left of the display), the frequency can be changed only in the range stored by the lower and upper PMS memories, by rotating the **DIAL** knob.

● Disable the PMS function

1. Press the **[V/M]** key.
Returns to the normal memory mode.

Receiving Weather Broadcast Channels

This transceiver includes the preprogrammed VHF Weather Broadcast Station Memory Channel Bank, and can receive the broadcast or the weather alert by recalling or scanning a desired channel.

The following channels are stored in the transceiver weather station memory bank:

Channel No.	Frequency	Channel No.	Frequency
WX-01	162.550 MHz	WX-06	162.500 MHz
WX-02	162.400 MHz	WX-07	162.525 MHz
WX-03	162.475 MHz	WX-08	161.650 MHz
WX-04	162.425 MHz	WX-09	161.775 MHz
WX-05	162.450 MHz	WX-10	163.275 MHz

This “WX” function can only be utilized when it is assigned to a programmable key [P2] to [P4] on the microphone.

In the USA version of FTM-200DR, “WX” function is assigned to P4 by factory setting.

Assigning the “WX” function to a programmable key on the microphone

1. Press and hold the **[F MENU]** key.
2. Rotate the **DIAL** knob to select **[27 MIC PROGRAM KEY]** then press the **DIAL** knob.
3. Rotate the **DIAL** knob to select the [P2], [P3] or [P4] key to assign a function, then press the **DIAL** knob.
4. Rotate the **DIAL** knob to select **[WX]** then press the **DIAL** knob.
5. Press any key (except Power Switch) or **PTT** switch to finish the setting and return to the original screen.

Recalling the weather channels

Example: When “WX” is assigned to [P4]

1. Press **[P4]** on the microphone.
The WX function is activated, and the weather channel selected last time the WX function was activated will be displayed on the screen.
2. Rotate the **DIAL** knob to select the other channels.
3. Press the **PTT** switch on the microphone to search for additional WX stations.
Scanning of the channels stored in the weather station memory bank will start. When the scanning pauses on a station, press the **PTT** switch once to halt the scan, or press it twice to restart the scan.
4. Press the **PTT** switch to finish the scan.
5. Press **[P4]** on the microphone.
The WX function will be inactivated and the display will return to the previous screen.

Listening with weather alert

In the event of extreme weather disturbances, such as storms and hurricanes, the NOAA (National Oceanic and Atmospheric Administration) sends a weather alert accompanied by a 1050 Hz tone and a subsequent weather report on one of the NOAA weather channels. Receiving the weather alert tone may be disabled **[48 WX ALERT]** in the Setup Menu.

DTMF Operation

DTMF (Dual Tone Multi Frequencies) are the tone signals sent to make telephone calls, or control repeaters and network links. Up to 10 registers of 16-digit DTMF tone codes can be stored as telephone numbers to make calls through the public telephone network using a phone patch or to connect through the WIRES-X analog node station.

Registering the DTMF memory

1. Press and hold the [F MENU] key → [41 DTMF MEMORY] → Press the **DIAL** knob
2. Rotate the **DIAL** knob to select the desired channel (1 to 9) to register the DTMF code, then press the **DIAL** knob.
The DTMF memory channel input screen is displayed.
3. Use the **DIAL** knob or the numeric keypad of the microphone to input the DTMF code up to a maximum of 16 digits.
4. Press and hold the **DIAL** knob to save the DTMF code.
5. Press any key (except Power Switch) or **PTT** switch to finish the setting and return to the original screen.

Setting the auto dialer function

Use the auto dialer function to automatically transmit the DTMF code registered in the DTMF memory.

1. Press and hold the [F MENU] key → [12 AUTO DIALER] → Press the **DIAL** knob
2. Rotate the **DIAL** knob to select "ON".
3. Press any key (except Power Switch) or **PTT** switch to complete the setting and return to the original screen.

When set to "ON", the DTMF icon "☎" will be shown on the display.

Transmitting DTMF code automatically using DTMF memory

1. Set the "ON" by referring to "Transmitting the Registered DTMF Code" (above).
2. Press the [F MENU] key → [DTMF] → Press the **DIAL** knob
3. Rotate the **DIAL** knob to select the desired DTMF memory (1 to 9).
4. Press the **PTT** switch.
 - The DTMF code registered in the DTMF memory channel is automatically transmitted.
 - Even after releasing the **PTT** switch, the transmission continues until the DTMF code is completed. The transceiver is automatically returned to receive mode.
 - To send DTMF memory, press the number key of that number on the microphone during transmission.
5. Press any key (except Power Switch) to return to the original screen.

Manually Transmitting the DTMF Code

1. While pressing and holding the **PTT** switch, use the numeric keypad of the microphone and press each digit of the DTMF code in sequence to transmit the code.



The DTMF code can be sent manually regardless of whether the auto dialer is set to ON or OFF.

Using the GPS Function

The transceiver is equipped with an internal GPS receiver to acquire and display the position information. The GPS information can be used as described in the following examples:

Display the location information of the partner station in digital mode

→ Refer to “Real-Time Navigation Function” (Page 18)

Save the position information in the memory and use it for navigation purposes

→ Refer to “Backtrack Function” (Page 18)

Save this station location information and display the route on a computer

→ Refer to “Saving GPS Information (GPS Log Function)” (Page 20)


Save the DP-ID of frequently contacted stations and check whether they are within the sphere of communications

→ Refer to the separate “Operating Manual GM Edition”


Exchange position information and messages through data communications with other stations

→ Refer to the separate “Operating Manual APRS Edition”

Positioning Using GPS

The built-in GPS receiver function is enabled when the power of the **FTM-200DR/DE** is turned ON. The satellite search will begin and the “” icon will be shown at the top of the display. The **FTM-200DR/DE** automatically obtains the internal clock setting, and the location information setting from the GPS data.



- It may take several minutes to acquire the GPS satellites.
- When three or more satellites cannot be acquired, the “” icon will disappear. In this case, positioning is not possible, and the position information cannot be used.

About Positioning by GPS

“Positioning” refers to calculation of the current position from the satellite orbit information and radio propagation time. At least 3 satellites must be acquired for successful positioning. If positioning fails, move away from buildings as far as possible away buildings and position the GPS receiver in an area with open sky.

● About errors

The measurement environment may result in positioning errors of several hundred meters. Under favorable conditions, positioning can be performed successfully using only three satellites. However, under the following poor conditions, the positioning accuracy can decrease, or positioning can fail:


- Between tall buildings
- Narrow paths between buildings
- Indoors or near large buildings
- Between trees such as in forests or woods
- Under elevated roads or high voltage power lines
- Inside a tunnel or underground
- Through heat reflective glass
- Areas with strong magnetic fields

● When not in use for a long time

When using the GPS functions for the first time after purchase, or when it has been unused in a while, a few minutes may be required to acquire the satellites. Also, if the GPS function has been turned OFF for several hours, a few minutes may be required to search for satellites.

Smart Navigation Function


GPS position information and voice signals are simultaneously transmitted in the V/D mode of C4FM digital. Consequently, the position and direction of the remote station can be displayed in real time, even while communicating.


 To use the "latitude/longitude display" with the smart navigation function, press and hold the [F MENU] key → [5 LOCATION INFO] and set to "NUMERIC". (The factory setting is "COMPASS")

Real-Time Navigation Function



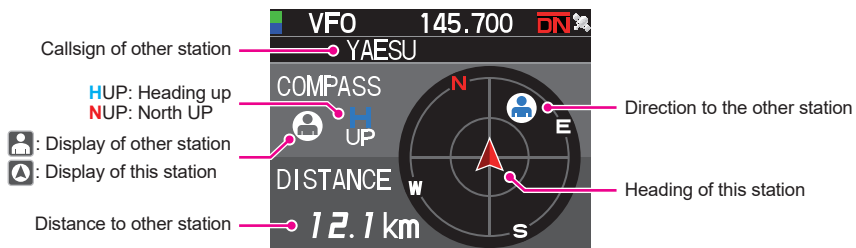

1. Press and hold the [F MENU] key → [7 DISPLAY MODE] → Press the DIAL knob
2. Rotate the DIAL knob to select [BACKTRACK] then press the DIAL knob.
The distance and direction to the remote station operating on the same frequency in the V/D mode are displayed.

 The screen selected in "7 DISPLAY MODE" can be called by simply pressing and holding the [DISP] key.



 On the real-time navigation screen, press the PTT switch to communicate with the partner station by voice as usual. You can be also change the communication mode and frequency, and recall memory channels.


● Switch between partner station display and own station display

1. In the Real-Time Navigation screen, press the [F MENU] key.
2. Rotate the DIAL knob to select "  " (Display of other station) or "  " (Display of this station) then press the DIAL knob.
"  " or "  " icon is displayed on the screen.


Backtrack Function

By registering a navigation point in advance (such as the departure point), the distance and direction to the registered point from the current position can be displayed in real time.

● Registering the Current Position (Departure Point)

1. In the Real-Time Navigation screen, press the [F MENU] key.
2. Rotate the DIAL knob to select "  " (Display of your station) then press the DIAL knob.
3. Press the [F MENU] key.

- Rotate the **DIAL** knob to select **[MEM]** then press the **DIAL** knob.
 - “★”, “L1” and “L2” blink.
 - Without the latitude and longitude information, the location cannot be registered.

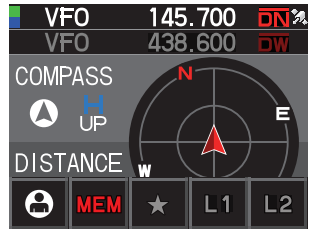


- Rotate the **DIAL** knob to select the mark (**[★]**, **[L1]** or **[L2]**) to register the position information.
- Press the **DIAL** knob.
The location information is registered with the selected mark and navigation starts.
- Press the **[DISP]** key return to normal operation display.




If you select **[DISP]** (Display of other station) in step 2 above and perform the registration operation when the location information of the partner station is displayed, you can register the current latitude and longitude of the partner station as the destination.

● Using the Back Track Function

- In the Real-Time Navigation screen, press the **[F MENU]** key.
- Rotate the **DIAL** knob to select the mark (**[★]**, **[L1]** or **[L2]**) to register the location information for back tracking.
Marks for which location information has not been registered are displayed in gray.
- Press the **DIAL** knob.
 - Navigation will start.
 - The green point in the compass indicates the direction of the registration point (departure point), so by proceeding so that the green point is always on top, the registration point can be reached. (When the compass is in heading up display).
- Press the **[DISP]** key to end the navigation and return to normal operation display.

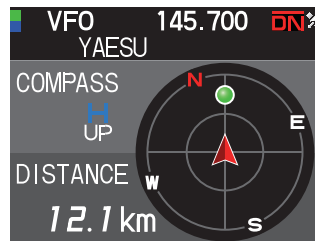

● Description of the BACK TRACK Function Screen

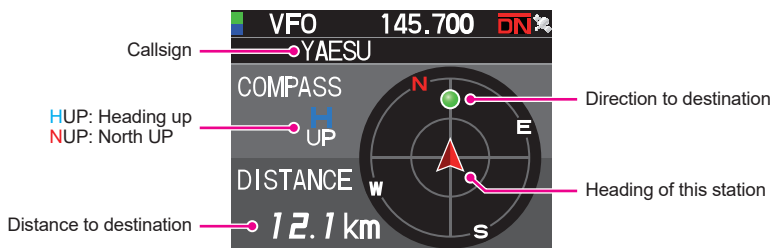

● Changing the direction of the compass panel

The compass panel can be set to “HEADING UP” where the direction of travel is always displayed at the top, or “NORTH UP” where North is always displayed at the top.

1. Press and hold the [F MENU] key → [6 COMPASS] → Press the DIAL knob
2. Rotate the DIAL knob to select [HEADING UP] or [NORTH UP].
3. Press any key (except Power Switch) or PTT switch to finish the setting and return to the original screen.

Saving GPS Information (GPS Log Function)

The GPS position information can automatically be saved periodically onto a microSD memory card. Using the saved data, tracks can be displayed on a computer with commercially available map software*.

* Technical support for the map software is not provided by YAESU.

1. Press and hold the [F MENU] key → [37 GPS LOG] → Press the DIAL knob
2. Rotate the DIAL knob to select the GPS data logging interval.
OFF / 1 sec / 2 sec / 5 sec / 10 sec / 30 sec / 60 sec
3. Press any key (except Power Switch) or PTT switch to finish the setting and return to the original screen.

The GPS log function is activated, and GPS log “LOG” icon will be displayed.

- The position information is saved periodically unless “OFF” is selected in step 2 (shown above) or the power of the transceiver is turned OFF.
 - Reselecting the GPS data logging interval in step 2 or turning on the transceiver again, begins saving the GPS data under a different file name.
 - To use the GPS log function, a commercially available micro SD card must be inserted in the **FTM-200DR/DE**. Refer to the Operating Manual for details.
-



Checking Tracks on Your PC

1. Turn the transceiver OFF.
 2. Remove the microSD memory card from the transceiver.
 3. Connect the microSD memory card to a PC using a commercially available memory card reader.
 4. Open the “FTM200D” folder in the microSD memory card.
 5. Open the “GPSLOG” folder.
 - The data is saved as “yymmddhhmmss.log”
 - The [yymmddhhmmss] part of the name consists of year (yy), month (mm), day (dd), hour (hh), minute (mm), and second (ss).
-




- Tracks can be displayed on the map by importing the data to commercially available map software.
 - For information on importing, please refer to the operation manual for the map software you use.
-

GPS Screen Information and Operation

Activating the GPS function presents the following information on the display.

1. Press and hold the [F MENU]key → [7 DISPLAY MODE] → Press the **DIAL** knob
2. Rotate the **DIAL** knob to select [GPS INFORMATION] then press the **DIAL** knob.

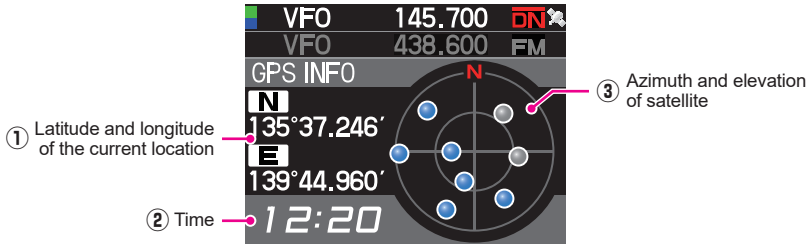

- ① Displays the latitude and longitude

Latitude (upper side)

Display format: X DD°MM.MMM'

X: X=N: North latitude, X=S: South latitude, DD: Degree, MM:MMM Minute

Example: N 35°38.250 (35 degrees, 38 minutes, 15 seconds north latitude)

Longitude (lower side)

Display format: X DDD°MM.MMM'

X: X=E: East longitude, X=W: West longitude, DDD: Degree, MM:MMM Minute

Example: E 139°42.500 (139 degrees, 42 minutes, 30 seconds east longitude)

- ② Current time (24-hour display)

- ③ Displays the satellite azimuth and elevation angles. Displays in North-up mode. Receiving satellites are displayed in blue.


- When the GPS function is used, the accurate time and date are obtained from GPS and shown on the LCD in 24-hour format. This time data is displayed on the GPS and APRS screens.
- The geodetic system datum (WGS-84 / TOKYO MEAN) of the built-in GPS unit may be changed by pressing and holding the [F MENU] key → [35 GPS DATUM] in Set mode. However, since APRS uses the WGS-84 geodetic system, it is recommended not to change it.
- The time zone may be set at 30-minute increments by pressing and holding the [F MENU] key → [30 TIME ZONE] (the default setting: UTC 0:00).
- The position information obtained from an externally connected GPS device may be used by pressing and holding the [F MENU] key → [36 GPS DEVICE] and then setting "EXTERNAL". In this case, the data from the internal GPS will be ignored.
- When using an external GPS device, move it away from the transceiver to reduce interference.



Measuring the altitude

The changes in the altitude of the current position and the distance traveled can be displayed on a graph.

1. Press and hold the [F MENU] key → [7 DISPLAY MODE] → Press the **DIAL** knob
2. Rotate the **DIAL** knob to select [ALTITUDE] then press the **DIAL** knob.
The altitude screen is displayed.

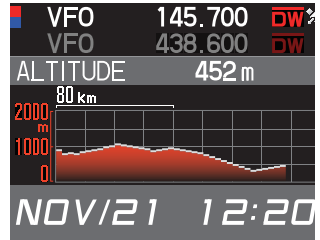

● Changing the altitude scale

1. In the Altitude scale screen, press the [F MENU] key.
2. Rotate the **DIAL** knob to select [SCALE].
3. Press the **DIAL** knob, the scale value will change in the following order.
5mi (5km) / 20mi (20km) / 40mi (40km) / 80mi (80km)



The maximum altitude scale will be automatically set based on the present altitude values.

● Erasing the previous altitude changes

1. In the Altitude scale screen, press the [F MENU] key.
2. Rotate the **DIAL** knob to select [CLEAR] then press the **DIAL** knob.
The graph (history) is deleted.

Functions used as needed

Timer / Clock function


1. Press and hold the [F MENU] key → [7 DISPLAY MODE] → Press the **DIAL** knob
2. Rotate the **DIAL** knob to select [TIMER/CLOCK] then press the **DIAL** knob.
The Clock screen will be displayed.
3. The following functions can be selected each time the **DIAL** knob is pressed after pressing the [F (SETUP)] key.
Clock screen / Lap timer screen / Countdown timer screen
4. Press any key (except Power Switch) or **PTT** switch to finish the setting and return to the original screen.

Using the lap timer

1. In the Timer / Clock function screen, press the [F MENU] key.
2. Rotate the **DIAL** knob to select [MODE] then press the **DIAL** knob several times to display the TIMER screen.


● Start measurement

1. Rotate the **DIAL** knob to select [START] then press the **DIAL** knob.
The timer will start.

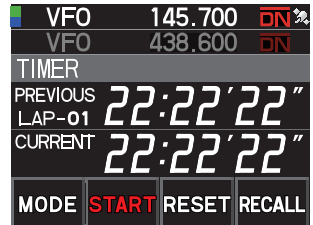

● Measure lap time

1. Rotate the **DIAL** knob during measurement and select [LAP].
2. Each time the **DIAL** knob is pressed, the lap time is stored.
Up to 99 lap times can be saved in the memory.

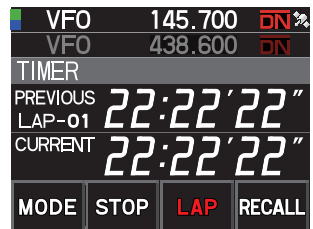

● Call lap time

1. Rotate the **DIAL** knob to select [RECALL] then press the **DIAL** knob.
The lap time and split time are displayed.
2. When there are multiple lap times, rotate the **DIAL** knob to select [▲] or [▼] then press the **DIAL** knob to switch between the lap times.

● Stop measurement

1. Rotate the **DIAL** knob to select [STOP] then press the **DIAL** knob.
The timer will stop.

● Clear the measurement result

1. When measurement is stopped, turn the **DIAL** knob to select [RESET] then press the **DIAL** knob.
All measurement results will be erased.

Using the countdown timer

1. In the Timer/Clock function screen, press the [F MENU] key.
2. Rotate the **DIAL** knob to select [MODE] then press the **DIAL** knob several times to display the count down timer screen.

● Set the timer

1. Rotate the **DIAL** knob to select [SETUP] then press the **DIAL** knob.

The countdown timer setting screen will be displayed.
The factory default is 15 minutes.

2. Rotate the **DIAL** knob to select [-] or [+] then press the **DIAL** knob to set the hour.

The hour can be set between 00 and 99.

3. Rotate the **DIAL** knob to select [SETUP] then press the **DIAL** knob.

4. Rotate the **DIAL** knob to select [-] or [+] then press the **DIAL** knob to set the minute.

The minute can be set between 00 and 59.

5. Rotate the **DIAL** knob to select [SETUP] then press the **DIAL** knob.

● Start the timer


1. Rotate the **DIAL** knob to select [START] then press the **DIAL** knob.

- The countdown timer will start.
- When the set time has elapsed, a beep will sound.

● Stop the timer

1. Rotate the **DIAL** knob to select [STOP] then press the **DIAL** knob.

- To restart, turn the **DIAL** knob to select [START] then press the **DIAL** knob.
- To reset the timer to the set value, turn the **DIAL** knob to select [RESET] then press the **DIAL** knob.

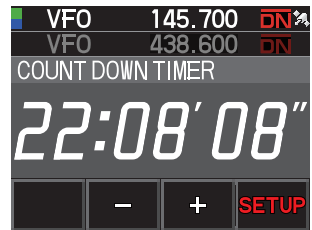


Using the Voice Guide unit FVS-2

The receive audio can be recorded and then played back later using the optional voice guide unit “FVS-2”. The frequency of the operating band can also be announced by voice when the announce function is set to ON.

Mounting the voice guide unit “FVS-2”

● Preparations

- Voice guide unit “FVS-2” (optional)
- Phillips screwdriver

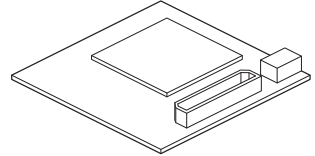

● Mounting procedure




- Avoid touching the electronic components with your hands as the semiconductors may be damaged by static electricity.
- Note that labor charges to install optional items by our customer service support staff shall be separately chargeable.

1. Turn the transceiver OFF.
2. Turn the external power supply OFF.
3. Unplug the control cable, microphone, and DC power supply cables from the main chassis.
4. Remove the eight screws from the main body, four on top and two each at the sides.




※: Please note that the 2 screws on the front panel side of the top cover are longer than the other 6 screws.

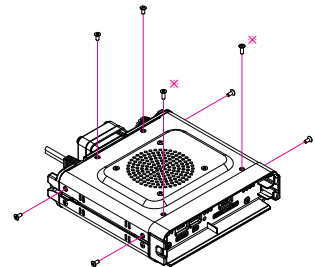

5. Carefully lift the top cover of the main body.



Do not lift the top cover by force. This may result in cables connected between the circuit boards and the speaker inside the cover to be cut.

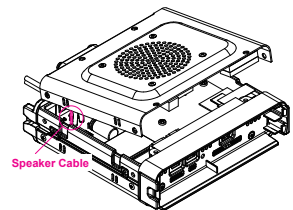

6. Unplug the speaker cables extending from the top cover from the socket on the board inside the main body before removing the cover.



Hold the connector when unplugging the cable without pulling on the cable itself.



7. Refer to the figure on the right to mount the FVS-2.



Check the direction of the connector and plug the FVS-2 in all the way to the back.

8. Plug in the speaker cables extending from the main body top cover to the original connector on the board.

9. Attach the main body top cover and secure it using the eight screws.

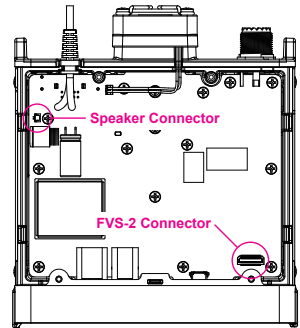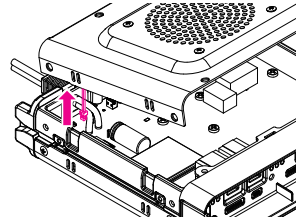

Using the voice memory

The voice memory permits recording the received audio in the optional FVS-2 that is mounted inside the radio. The saved audio can be replayed on the radio and erased later.

Setting the voice memory operation

1. Press and hold the [F MENU] key → [108 VOICE MEMORY] → Press the **DIAL** knob
 - The screen for the detailed settings will be displayed.
 - Cannot be selected when the optional FVS-2 is not installed.
2. Rotate the **DIAL** knob to select [PLAY/REC].
3. Each time press the **DIAL** knob, the recording operation switches.
 - FREE 5min:** A total of 5 minutes of audio in 8 recording areas can be recorded.
 - LAST 30sec:** The last 30 seconds will be recorded.
 - Factory default value: **FREE 5min**
4. Press any key (except Power Switch) or **PTT** switch to finish the setting and return to the original screen.

Recording the receive audio

1. Press and hold the **[F MENU]** key → **[109 FVS REC]** → Press the **DIAL** knob
The recording will be started.
2. Rotate the **DIAL** knob to select **[112 STOP]**, then press the **DIAL** knob.
The recording will stop.
3. Press any key (except Power Switch) or **PTT** switch to return to the original screen.

Replaying the recorded audio

1. Press and hold the **[F MENU]** key → **[111 PLAY]** → Press the **DIAL** knob
 - Replay will be started.
 - Replay will stop automatically at the end of the selected track.
2. Rotate the **DIAL** knob to select **[112 STOP]**, then press the **DIAL** knob.
The replay will stop.
3. Press any key (except Power Switch) or **PTT** switch to return to the original screen.

Selecting the track

1. Press and hold the **[F MENU]** key → **[110 TRACK SELECT]** → Press the **DIAL** knob
2. Rotate the **DIAL** knob to select the track number to be replayed.
“ALL”, “1”, “2”... , “8”
 - When “ALL” is selected, all the recorded tracks will be replayed in sequence.
3. Press any key (except Power Switch) or **PTT** switch to finish the setting and return to the original screen.

Erasing the recorded audio

1. Press and hold the **[F MENU]** key → **[113 CLEAR]** → Press the **DIAL** knob
The confirmation screen will be displayed.
2. Rotate the **DIAL** knob to select **[OK]**, then press the **DIAL** knob.
A beep will sound, and erasing will be started.




- All recorded audio will be erased. When there are two or more recordings, individual tracks cannot be erased.
 - It takes about 10 seconds to erase.
-

3. Press any key (except Power Switch) or **PTT** switch to finish the setting and return to the original screen.

Voice announcement of the operating frequency

Setting the announce function operation

Set the following voice announcement parameters:

- Automatically announce the frequency or not
 - Announce out the frequency in English or Japanese
 - Voice announcement audio level
 - Mute the receive audio during a voice announcement.
1. Press and hold the **[F MENU]** key → **[108 VOICE MEMORY]** → Press the **DIAL** knob
Cannot be selected when the optional FVS-2 is not installed.
 2. Rotate the **DIAL** knob to select **[ANNOUNCE]** then press the **DIAL** knob.
 3. Rotate the **DIAL** knob to select the condition for reading out of the frequency.
OFF: The frequency is not announced.
AUTO: The frequency is announced when changing bands, or when switching between VFO mode and Memory mode.
MANUAL: To announce: **[F MENU]** key → **[114 VOICE GUIDE]** → Press the **DIAL** knob
Factory default value: AUTO
 4. Press the **DIAL** knob.
 5. Rotate the **DIAL** knob to select **[LANGUAGE]** then press the **DIAL** knob.
 6. Rotate the **DIAL** knob to select the language in which the frequency is announced.
ENGLISH / JAPANESE
Factory default value: ENGLISH
 7. Press the **DIAL** knob.
 8. Rotate the **DIAL** knob to select **[VOLUME]** then press the **DIAL** knob.
 9. Rotate the **DIAL** knob to select the announcement volume.
HIGH / MID / LOW
Factory default value: HIGH
-
-  The volume of the announcement voice is linked to the volume of the operation band.
-
10. Press the **DIAL** knob.
 11. Rotate the **DIAL** knob to select **[RX MUTE]** then press the **DIAL** knob.
 12. Rotate the **DIAL** knob to select ON/OFF.
ON: The receive audio will be muted during a voice announcement or replaying recorded audio.
OFF: The receive audio will not be muted during a voice announcement or replaying recorded audio.
Factory default value: ON
 13. Press any key (except Power Switch) or **PTT** switch to finish the setting and return to the original screen.

Voice announcement of the operating frequency

(1) When the voice announcement is set to “AUTO”

The frequency of the operating band will be automatically announced in the following cases:

- When the VFO mode and memory mode are switched.
- When the operating band is changed.


(2) When the voice announcement is set to “MANUAL”

1. Press and hold the [F MENU] key → [114 VOICE GUIDE] → Press the **DIAL** knob
The frequency of the operating band will be announced.

Copying the Radio Data to another Transceiver

The memory channels and settings in the set-up menu can be copied to another **FTM-200DR/DE**. This is convenient when matching the settings of fellow stations that you communicate with frequently.

1. Turn both transceivers OFF.
2. Connect the optional clone cable “CT-166” to the DATA jack on the back of the main bodies.

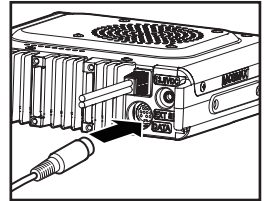

3. Turn both transceivers ON.
4. On the transceiver from which data is to be copied, press and hold the [F MENU] key, rotate the **DIAL** knob to select [116 This → Other], then press the **DIAL** knob. The confirmation screen appears.
5. On the transceiver to which data is to be copied, press and hold the [F MENU] key, rotate the **DIAL** knob to select [117 Other → This], then press the **DIAL** knob. The confirmation screen appears.
6. On the transceiver to which data is to be copied, rotate the **DIAL** knob to select [OK], then press the **DIAL** knob.
7. On the transceiver from which data is to be copied, rotate the **DIAL** knob to select [OK], then press the **DIAL** knob. The data transfer begins. When data transfer is complete, “Completed” appears.
8. Press any key (except Power Switch) or **PTT** switch to finish the setting and return to the original screen.
9. Turn both transceivers OFF, then disconnect the clone cable.




- When “ERROR” appears on the screen during the clone operation, the operation has not completed. Check the clone cable connection, and then repeat the procedure from the beginning.
- If the clone operation is terminated due to a power loss during the data transfer, the transceiver to which the data is copied will be reset automatically. Check the power supply, cables and connections, then repeat the procedure again from the beginning.

Connecting an external device

Using the optional Data cable, the transceiver can be connected to a personal computer as a COM port for the following operations:

- Transfer GPS location data and export route mapping information to computer software
- Packet communication

Use the DATA jack at the back of the main body to connect with the personal computer. The pin assignment of the DATA jack is as follows.

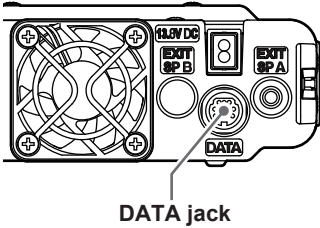

DATA jack




- ① PKD (packet data input)
- ② GND
- ③ PSK (PTT)
- ④ RX 9600 (9600 bps packet data output)
- ⑤ RX 1200 (1200 bps packet data output)
- ⑥ PK SQL (squellch control)
- ⑦ TXD (serial data output [transceiver → PC])
- ⑧ RXD (serial data input [transceiver ← PC])
- ⑨ CTS (data communication control)
- ⑩ RTS (data communication control)


Connecting to a computer

● Preparation

- Computer
- PC connection cable “SCU-20” (Included in optional SCU-40)...(When connecting to the USB jack of the computer.)

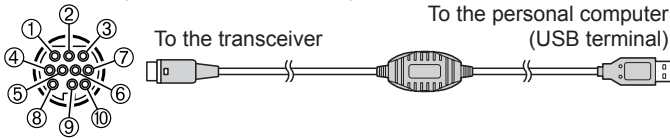

- Data cable “CT-165” (optional)...(When connecting to the RS-232C jack of the computer.)

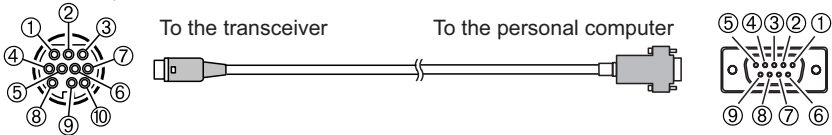

- ① -
- ② GND
- ③ -
- ④ -
- ⑤ -
- ⑥ -
- ⑦ TXD (serial data output [transceiver → PC])
- ⑧ RXD (serial data input [transceiver ← PC])
- ⑨ CTS (data communication control)
- ⑩ RTS (data communication control)

- ① -
- ② TXD (serial data output [transceiver → PC])
- ③ RXD (serial data input [transceiver ← PC])
- ④ -
- ⑤ GND
- ⑥ -
- ⑦ CTS (data communication control)
- ⑧ RTS (data communication control)
- ⑨ -



-
- Make sure to turn the transceiver OFF before connecting any cables.
 - When using the SCU-20 PC connection cable, install the designated driver on the computer. Download the driver and installation manual from the Yaesu website.
-

Transmitting GPS location information

The GPS position data (latitude/longitude) of this station can be output from the serial DATA jack on the rear of the transceiver.

1. Press and hold the [**F MENU**] key → [**66 COM PORT**] → Press the **DIAL** knob
2. Rotate the **DIAL** knob to select [**SPEED**] then press the **DIAL** knob.
3. Rotate the **DIAL** knob to select the desired communication speed then press the **DIAL** knob.

The setting changes in the following order:

4800bps → 9600bps → 19200bps → 38400bps → 57600bps

Factory default value: 9600bps

4. Rotate the **DIAL** knob to select [**OUTPUT**] then press the **DIAL** knob.
5. Rotate the **DIAL** knob to select "**GPS OUT**" then press the **DIAL** knob.

The setting changes in the following order:

OFF → GPS OUT → PACKET → WAYPOINT

Factory default value: OFF

6. Press any key (except Power Switch) or **PTT** switch to finish the setting and return to the original screen.

Transmits the location information data. The location data is output to the computer at about one second intervals.



An operating software using NMEA-0183 standard GGA and RMC sentence is required to use the position information.

Updating the transceiver firmware

When updated firmware is available, the transceiver can be updated by connecting it to a personal computer. Download the latest version of the firmware and the firmware installation manual from the YAESU website.

Using the transceiver for packet communications


A TNC (Terminal Node Controller) may be connected to the transceiver to enable packet communications.

● Preparation

- TNC
- Computer
- Data cable* ... Prepare a cable suitable for the connected device.

*The following optional products are available.


- Data cable “CT-164” (optional)

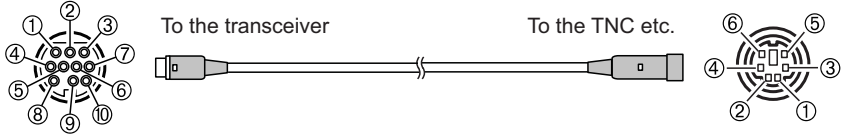

- ① PKD (packet data input)
- ② GND
- ③ PSK (PTT)
- ④ RX 9600 (9600 bps packet data output)
- ⑤ RX 1200 (1200 bps packet data output)
- ⑥ PK SQL (squelch control)
- ⑦ -
- ⑧ -
- ⑨ -
- ⑩ -

- ① PKD (packet data input)
- ② GND
- ③ PSK (PTT)
- ④ RX 9600 (9600 bps packet data output)
- ⑤ RX 1200 (1200 bps packet data output)
- ⑥ PK SQL (squelch control)

- Data cable “CT-163” (optional)

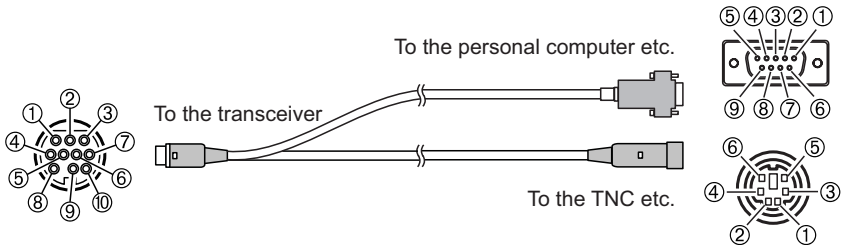

- ① PKD (packet data input)
- ② GND
- ③ PSK (PTT)
- ④ RX 9600 (9600 bps packet data output)
- ⑤ RX 1200 (1200 bps packet data output)
- ⑥ PK SQL (squelch control)
- ⑦ TXD (serial data output [transceiver → PC])
- ⑧ RXD (serial data input [transceiver ← PC])
- ⑨ CTS (data communication control)
- ⑩ RTS (data communication control)


Dsub 9 pin

- ① -
- ② TXD (serial data output [transceiver → PC])
- ③ RXD (serial data input [transceiver ← PC])
- ④ -
- ⑤ GND
- ⑥ -
- ⑦ CTS (data communication control)
- ⑧ RTS (data communication control)
- ⑨ -

DIN 6 pin

- ① PKD (packet data input)
- ② GND
- ③ PSK (PTT)
- ④ RX 9600 (9600 bps packet data output)
- ⑤ RX 1200 (1200 bps packet data output)
- ⑥ PK SQL (squelch control)

- Data cable “CT-167” (optional)

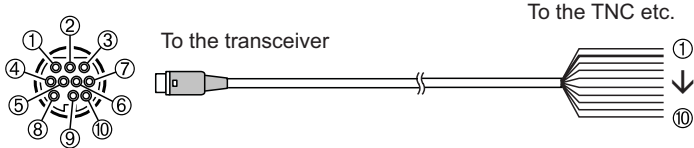

① PKD (packet data input)	① Brown PKD (packet data input)
② GND	② Black thick wire GND
③ PSK (PTT)	③ Red PSK (PTT)
④ RX 9600 (9600 bps packet data output)	④ Orange RX 9600 (9600 bps packet data output)
⑤ RX 1200 (1200 bps packet data output)	⑤ Yellow RX 1200 (1200 bps packet data output)
⑥ PK SQL (squelch control)	⑥ Green PK SQL (squelch control)
⑦ TXD (serial data output [transceiver → PC])	⑦ Blue TXD (serial data output [transceiver → PC])
⑧ RXD (serial data input [transceiver ← PC])	⑧ Grey RXD (serial data input [transceiver ← PC])
⑨ CTS (data communication control)	⑨ White CTS (data communication control)
⑩ RTS (data communication control)	⑩ Black RTS (data communication control)

- Make sure to turn the power to the radio OFF before connecting.
- Refer to the TNC operating manual for instruction on connecting the TNC to a personal computer.
- RF receive interference may occur because of noise occurring in the personal computer. When signals cannot be received normally, keep the personal computer at a distance away from the radio and use a photo-coupler and noise filter to connect.

● Packet communication settings

1. Press and hold the [F MENU] key → [66 COM PORT] → Press the **DIAL** knob
2. Rotate the **DIAL** knob to select [SPEED] then press the **DIAL** knob.
3. Rotate the **DIAL** knob to select the desired communication speed then press the **DIAL** knob.

The setting changes in the following order:

4800bps → 9600bps → 19200bps → 38400bps → 57600bps

Factory default value: 9600bps

4. Rotate the **DIAL** knob to select [OUTPUT] then press the **DIAL** knob.
5. Rotate the **DIAL** knob to select [PACKET] then press the **DIAL** knob.

The setting changes in the following order:

OFF → GPS OUT → PACKET → WAYPOINT

Factory default value: OFF

6. Press the [SQL BACK] key.
7. Rotate the **DIAL** knob to select [67 DATA BAND] then press the **DIAL** knob.
8. Rotate the **DIAL** knob to select [DATA], then press the **DIAL** knob.

9. Rotate the **DIAL** knob to select the band to be used for the packet communication then press the **DIAL** knob.
The setting changes in the following order:
MAIN BAND → SUB BAND → A-BAND FIX → B-BAND FIX → ...
 - Refer to “67 DATA BAND” (page 58) for details.
 - Factory default value: B-BAND FIX
10. Press the [**SQL BACK**] key.
11. Rotate the **DIAL** knob to select [**68 DATA SPEED**] then press the **DIAL** knob.
12. Rotate the **DIAL** knob to select [**DATA**] then press the **DIAL** knob.
13. Rotate the **DIAL** knob to select the packet communication speed.
The setting will switch between “1200 bps” and “9600 bps” then press the **DIAL** knob.
Factory default value: 1200bps
14. Press the [**SQL BACK**] key.
15. Rotate the **DIAL** knob to select [**69 DATA SQL**] then press the **DIAL** knob.
16. Rotate the **DIAL** knob to select the squelch detection method for the packet communication.
The setting switches between “TX OFF” and “TX ON”.
 - Refer to “69 DATA SQL” (page 59) for details.
 - Factory default value: TX ON
17. Press any key (except Power Switch) or **PTT** switch to complete the setting and return to the original screen.
This completes the packet communication settings.



When transmitting a large volume of packet data, the transmission time gets longer, and the transceiver may heat up. When transmission continues for a long period of time, the overheating prevention circuit will act to lower the transmit power output. When transmission is continued further, transmission will be suspended automatically, and the transceiver will go into the receive mode to prevent failure due to overheating. When the overheating prevention circuit is activated and the radio goes into the receive mode, either switch the power OFF, or wait in receive mode until the transceiver cools.

Setup Menu

The Set Mode permits configuring the various functions to accommodate individual operating needs and preferences.


Setup Menu Operation

1. Press and hold the **[F MENU]** key.

The SETUP MENU screen will be displayed.





- Press and hold the **[F MENU]** key on the setup menu screen to register the selected setup menu item to the CFL (Custom Function Menu). Refer to the Operating Manual for details.
- Items registered in the custom function menu can also be called from the function menu.

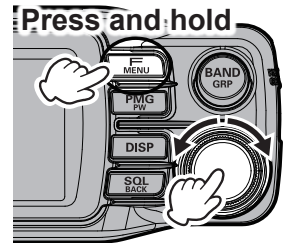

2. Rotate the **DIAL** knob to select the desired item in the Setup Menu, then press the **DIAL** knob.

- Press the **[SQL BACK]** key to return to the previous screen.
- Press the **[UP]** / **[DWN]** key on the microphone to step through the 17 categories in the setup menu below.

□ DISPLAY ↔ (TX) TX ↔ (RX) RX ↔ □ MEMORY ↔
👤 CONFIG ↔ (MIC) AUDIO ↔ 📡 SIGNALING ↔
🔄 SCAN ↔ (DIG) DIGITAL ↔ 👤 GM ↔ 📶 WIRES-X
↔ 📶 DATA ↔ (APRS) APRS ↔ 📁 SD CARD ↔
⚙️ OPTION ↔ → CLONE ↔ ↺ RESET

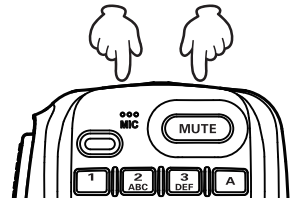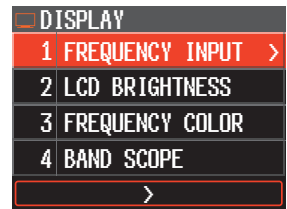

3. Rotate the **DIAL** knob to select the desired item to set.
“>” Is displayed at the right of Sub-menu items that have a deeper level of menu items.

4. [When there is no deeper level of menu items]
Go step 6.

5. [When there is a deeper level of menu items]

The Sub-menu screen will be displayed.

Rotate the **DIAL** knob to select the desired item to set, then press the **DIAL** knob.

6. Press any key (except Power Switch) or **PTT** switch to complete the setting and return to the original screen.

For some setting items, pressing the **PTT** switch does not return to the normal screen. In this case, press the **[SQL BACK]** key to return to the upper layer, and then press the **PTT** switch.

Tables of Setup Menu Operations

Menu Number / Item (Display item name on the function list screen)	Description	Selectable options (Options in bold are the default settings)
---	-------------	--

DISPLAY

1 FREQUENCY INPUT (KEYPAD)	Enter frequency directly or display memory channel list.	-
2 LCD BRIGHTNESS (BRIGHTNESS)	Display and key button brightness.	MIN / MID / MAX
3 FREQUENCY COLOR (DISP COLOR)	Set the font color of the operation band frequency.	WHITE / BLUE / RED
4 BAND SCOPE (SCOPE)	Scope Display width setting.	NARROW / WIDE
5 LOCATION INFO (GPS)	Switch between the compass screen and the latitude/longitude display screen when using the GPS and GM functions.	COMPASS / NUMERIC
6 COMPASS (COMPASS)	Set the compass display of the smart navigation function.	NORTH UP / HEADING UP
7 DISPLAY MODE (DISP MODE)	Back Track, Altitude, Timer/Clock or GPS Information screen display.	BACKTRACK / ALTITUDE / TIMER/CLOCK / GPS INFORMATION

TX

8 TX POWER (TXPWR)	Set the transmit power level.	LOW / MID / HIGH
9 AMS TX MODE (AMS TX)	Set the AMS transmission mode.	AUTO / TX FM FIXED/ TX DN FIXED
10 MIC GAIN (MIC GAIN)	Microphone sensitivity setting.	MIN / LOW / NORMAL / HIGH / MAX
11 VOX (VOX)	VOX function settings.	VOX: OFF / LOW / HIGH DELAY: 0.5s / 1.0s / 1.5s / 2.0s / 2.5s / 3.0s
12 AUTO DIALER (AUTO DIAL)	DTMF code automatic transmit setting.	ON / OFF
13 TOT (TOT)	TX time out setting.	OFF / 1min / 2min / 3min / 5min / 10min / 15min / 20min / 30min (Depends on the transceiver version)
14 DIGITAL VW (DIGITAL VW)	Turn the VW mode selection ON or OFF.	ON / OFF

RX

15 FM BANDWIDTH (BANDWIDTH)	Set the FM transmit modulation level.	WIDE / NARROW
16 RX MODE (RX MODE)	Select the receive mode.	AUTO / FM / AM

MEMORY

17 HOME (HOME)	Recall the home channel.	Depends on the transceiver version.
18 MEMORY LIST (MEMORY LIST)	Displays the Memory channel list screen.	-
19 MEMORY LIST MODE (MLIST MODE)	Displays a list of memory channels in memory mode.	ON / OFF
20 PMG CLEAR (PMG CLEAR)	Cancel the registration of all PMG channels.	-

Menu Number / Item (Display item name on the function list screen)	Description	Selectable options (Options in bold are the default settings)
CONFIG		
21 BEEP (BEEP)	Beep volume setting.	OFF / LOW / HIGH
22 BAND SKIP (BAND SKIP)	Set the frequency bands that can be selected.	AIR: ON / OFF VHF: ON / OFF UHF: ON / OFF OTHER: ON / OFF
23 RPT ARS (ARS)	Repeater auto shift setting.	OFF / AUTO
24 RPT SHIFT (R-SFT)	Repeater shift direction setting.	AUTO / - / +
25 RPT SHIFT FREQ (SHIFT FREQ)	Repeater TX offset setting.	0.00MHz to 99.95MHz
26 RPT REVERSE (RPT-R)	Reverses the transmit and receive frequencies while working through a repeater.	NORMAL / REVERSE
27 MIC PROGRAM KEY (MIC PGMKEY)	Microphone P2 / P3 / P4 buttons programmable settings.	OFF / REC(STOP) / SCAN / HOME / RPT SHIFT / REVERSE / TX POWER / SQL OFF / T-CALL / VOICE* / D_X / WX / STN LIST / MSG LIST / REPLY / MSG EDIT / DW (*requires optional FVS-2) P1: GM (FIX) P2: HOME P3: D_X P4: WX (T-CALL: European version)
28 DATE&TIME ADJUST (DATE ADJ)	Set the date and time.	-
29 DATE&TIME FORMAT (DATE FORM)	Set the date and time display formats.	Date: mmm/dd/yyyy / yyyy/mmm/dd / dd/mmm/yyyy / yyyy/dd/mmm Time: 24hours / 12hours
30 TIME ZONE (TIME ZONE)	Time zone setting.	UTC -14:00 to ±0:00 to +14:00
31 STEP (STEP)	Frequency tuning step.	AUTO / 5.00 kHz / 6.25 kHz / (8.33 kHz) / 10.00 kHz / 12.50 kHz / 15.00kHz / 20.00kHz / 25.00 kHz / 50.00 kHz / 100 kHz
32 CLOCK TYPE (CLOCK TIME)	Clock shift setting.	A / B
33 UNIT (UNIT)	Display unit setting.	METRIC / INCH (Depends on the transceiver version)
34 APO (APO)	Automatic power OFF time setting.	OFF / 0.5hour to 12.0hour (0.5 hour steps)
35 GPS DATUM (GPS DATUM)	GPS function positioning selection.	WGS-84 / TOKYO MEAN
36 GPS DEVICE (GPS DEVICE)	GPS receiver selection.	INTERNAL / EXTERNAL
37 GPS LOG (GPS LOG)	GPS access time setting.	OFF / 1sec / 2sec / 5sec / 10sec / 30sec / 60sec

Menu Number / Item (Display item name on the function list screen)	Description	Selectable options (Options in bold are the default settings)
--	-------------	--

AUDIO

38 RECORDING (RECORDING)	Voice record function settings.	BAND: A / B / A+B MIC: ON / OFF
39 REC/STOP (REC/STOP)	Start and stop recording.	-

SIGNALING

40 DTMF (DTMF)	Sending the registered DTMF code.	-
41 DTMF MEMORY (DTMF MEM)	Set the DTMF auto dialer channel and code (16 characters).	1 to 9
42 SQL TYPE (SQL)	Select a squelch type.	OFF / TONE ENC / TONE SQL / REV TONE / DCS / PR FREQ / PAGER / (DCS ENC) / (TONE DCS) / (DCS TSQL) *The options in the parentheses are available when the SQL expansion is ON.
43 TONE SQL FREQ / DCS CODE (TONE / DCS)	Set the CTCSS Tone Frequency or the DCS code.	CTCSS: 67.0Hz to 254.1Hz (100Hz) DCS: 023 to 754
44 SQL EXPANSION (SQL EXPAND)	Separate squelch type setting for transmit and receive.	ON / OFF
45 PAGER CODE (PAGER CODE)	Pager individual code settings.	RX-CODE 1: 01 - 05 - 50 RX-CODE 2: 01 - 47 - 50 TX-CODE 1: 01 - 05 - 50 TX-CODE 2: 01 - 47 - 50
46 PR FREQUENCY (PR FREQ)	User programmed reverse tone frequency.	300Hz - 1500Hz - 3000Hz
47 BELL RINGER (BELLRINGER)	Recall sound length setting.	OFF / 1 time / 3 times / 5 times / 8 times / CONTINUOUS
48 WX ALERT (WX ALERT)	Weather alert operation setting.	ON / OFF

SCAN

49 SCAN (SCAN)	Engages the Scan operation.	-
50 DUAL RCV MODE (DUAL DCV)	Dual receive operation setting.	OFF / PRIORITY SCAN / A-B DUAL RECEIVE
51 DUAL RX INTRVAL (D-RX INTVL)	Dual receive reception interval setting. (Only enabled when "50 Dual Receive Mode" is set to "PRIORITY SCAN".)	0.5sec / 1sec / 2sec / 3sec / 5sec / 7sec / 10sec
52 PRIORITY REVERT (PRI-REVERT)	The transmission operation during dual receive always transmits on the home channel.	OFF / ON
53 SCAN RESUME (SCAN RESUM)	Set the resume operation after scanning stops on a signal.	BUSY / HOLD / 1sec / 3sec / 5sec (Depends on the transceiver version)

Menu Number / Item (Display item name on the function list screen)	Description	Selectable options (Options in bold are the default settings)
DIGITAL		
54 DIGITAL POPUP (DIGI POPUP)	Information screen popup time.	OFF / 2sec / 4sec / 6sec / 8sec / 10sec / 20sec / 30sec / 60sec / CONTINUE
55 LOCATION SERVICE (LOCATION)	Set whether to send your current location in digital mode.	ON / OFF
56 STANDBY BEEP (STNBY BEEP)	Standby Beep setting.	ON / OFF
GM		
* Refer to the separate Operating Manual GM Edition for details on the functions.		
57 DP-ID LIST (DP-ID LIST)	Displays the DP-ID list screen.	-
58 RANGE RINGER (RANGER RNGR)	Set the bell sound when checking for stations within sphere of communications.	ON / OFF
59 RADIO ID (RADIO ID)	Specific transceiver ID is displayed.	- (Cannot be edited)
60 LOG LIST (LOG LIST)	Display a list of recorded voices, received messages and images.	-
WIRES-X		
* Refer to the separate Operating Manual WIRES-X Edition for details on the functions.		
61 RPT/WIRES FREQ (WIRES FREQ)	Set the frequency to be used for WIRES-X.	FREQUENCY: MANUAL / PRESET PRESET: (Depends on the transceiver version.)
62 SEARCH SETUP (SRCH SETUP)	Set the WIRES ROOM selection method.	HISTORY / ACTIVITY
63 EDIT CATEGORYTAG (EDIT CTGRY)	Edit the category tag.	C1 to C5
64 DELETE ROOM/NODE (DEL RM/ND)	Delete a registered category.	C1 to C5
65 WIRES DG-ID (WIRES DGID)	Set the DG-ID number for WIRES-X.	AUTO / 01 to 99
DATA		
66 COM PORT (COM PORT)	COM port settings	SPEED: 4800bps / 9600bps / 19200bps / 38400bps / 57600bps OUTPUT: OFF / GPS OUT / PACKET /WAYPOINT WP FORMAT: NMEA 6 / NMEA 7 /NMEA 8 / NMEA 9 WP FILTER: ALL / MOBILE / FREQUENCY / OBJECT/ITEM / DIGIPEATER / VoIP / WEATHER /YAESU / CALL RINGER / RANGE RINGER

Menu Number / Item (Display item name on the function list screen)	Description	Selectable options (Options in bold are the default settings)
67 DATA BAND (DATA BAND)	APRS/DATA band selection settings.	APRS: MAIN BAND / SUB BAND / A-BAND FIX / B-BAND FIX / DATA: MAIN BAND / SUB BAND / A-BAND FIX / B-BAND FIX /
68 DATA SPEED (DATA SPEED)	APRS/DATA communication baud rate settings.	APRS: 1200 bps / 9600 bps DATA: 1200 bps / 9600 bps
69 DATA SQL (DATA SQL)	Squelch detection settings.	TX ON / TX OFF

APRS

* Refer to the separate Operation Manual APRS Edition for details on the functions.

70 APRS DESTINATION (APRS DEST)	Model code display Non-editable.	APY200 (FIX)
71 APRS FILTER (APRS FLTR)	Filter function settings.	Mic-E: ON / OFF POSITION: ON / OFF WEATHER: ON / OFF OBJECT: ON / OFF ITEM: ON / OFF STATUS: ON / OFF OTHER: ON / OFF RANGE LIMIT: ON / OFF ALNET: ON / OFF
72 APRS MSG TXT (APRS MSG)	Standard message text input.	1 to 8 channels
73 APRS (APRS)	Set APRS function ON/OFF.	OFF / ON
74 APRS MUTE (APRS DEST)	Set audio mute for APRS band.	OFF / ON
75 APRS POPUP (APRS POPUP)	Beacons and messages Pop-up display time setting.	BEACON: OFF / 3sec / 5sec / 10sec / HOLD MESSAGE: OFF / 3sec / 5sec / 10sec / HOLD MYPACKET: OFF / ON
76 APRS RINGER (APRS RNGR)	Set bell sound when beacons are received.	TX BEACON: ON / OFF TX MESSAGE: ON / OFF RX BEACON: ON / OFF RX MESSAGE: ON / OFF MY PACKET: ON / OFF CALL RINGER: ON / OFF RANGE RINGER: OFF / 1 / 5 / 10 / 50 / 100 (km / mi) MSG VOICE: ON / OFF
77 APRS RINGER (CS) (APRS RNGCS)	Call sign setting for CALL RINGER.	1 - 8 stations
78 APRS TX DELAY (APRS TXDLY)	Data transmit delay time setting.	100ms / 150ms / 200ms / 250ms / 300ms / 400ms / 500ms / 750ms / 1000ms

Menu Number / Item (Display item name on the function list screen)	Description	Selectable options (Options in bold are the default settings)
79 APRS UNITS (APRS UNITS)	APRS display unit settings.	POSITION: dd°mm.mm" / dd°mm'ss" DISTANCE: km / mile SPEED: km/h / mph / knot ALTITUDE: m / ft BARO: hPa / mb / mmHg / inHg TEMP: °C / °F RAIN: mm / inch WIND: m/s / mph / knot
80 BEACON INFO (BCN INFO)	Transmit beacon information settings.	AMBIGUITY: OFF / 1 digit / 2 digits / 3 digits / 4 digits SPEED/COURSE: ON / OFF ALTITUDE: ON / OFF
81 BEACON STATUSTXT (BEACON TXT)	Status text input settings.	SELECT: OFF / TEXT 1 - 5 TX RATE: 1/1 - 1/8 / 1/2(FREQ)- 1/8(FREQ) TEXT 1 - 5: NONE / FREQUENCY / FREQ & SQL & SHIFT
82 BEACON TX SET (BEACON SET)	Beacon automatic transmit / Manual transmit switch.	AUTO: OFF / ON / (SmartBeaconing)* INTERVAL: 30 sec - 5 min - 60 min PROPORTIONAL: ON / OFF DECAY: ON / OFF LOW SPEED: 1 - 3 - 99 (km / mph / knot) RATE LIMIT: 5 sec - 30 sec - 180 sec * The option in the parentheses is available when the "97 SmartBeaconing" is TYPE1, TYPE 2 or TYPE 3, and the "93 MY POSITION SET" is GPS.
83 DIGI PATH (DIGI PATH)	Digital repeater route setting.	OFF / WIDE1-1 / WIDE1-1, WIDE2-1 / PATH 1 / PATH 2 / PATH 3 / PATH 4 / FULL 1 / FULL 2
84 DIGI PATH 1 (DIGI PATH1)	Digital repeater route address setting.	ADDRESS 1: -
85 DIGI PATH 2 (DIGI PATH2)		ADDRESS 2: -
86 DIGI PATH 3 (DIGI PATH3)		
87 DIGI PATH 4 (DIGI PATH4)		
88 DIGI PATH FULL 1 (DIGI FULL1)	Digital repeater route address setting.	ADDRESS 1: - to ADDRESS 8: -
89 DIGI PATH FULL 2 (DIGI FULL2)		
90 CALLSIGN (APRS) (CALL(APRS))	My call sign setting.	***** - **
91 MESSAGE GROUP (MSG GROUP)	Group filter setting for received messages.	GROUP 1: ALL***** GROUP 2: CQ***** GROUP 3: QST***** GROUP 4: YAESU**** GROUP 5: ----- GROUP 6: ----- BULLETIN 1: BLN?***** BULLETIN 2: BLN?----- BULLETIN 3: BLN?-----

Menu Number / Item (Display item name on the function list screen)	Description	Selectable options (Options in bold are the default settings)
92 MESSAGE REPLY (MSG REPLY)	Set automatic response to received messages.	REPLY: OFF / ON CALLSIGN: *****_** REPLY TEXT: -
93 MY POSITION SET (MY POS SET)	My position setting.	GPS / MANUAL
94 MY POSITION (MY POSTION)	My position manual setting.	LAT: N 0°00. 00' (° 00") LON: E 0°00. 00' (° 00")
95 MY SYMBOL (MY SYMBOL)	My symbol setting.	ICON 1: [/>] Car ICON 2: [/R] REC.Vehicle ICON 3: [/ -] House QTH (VHF) USER: [YY] Yaesu Radios
96 POSITION COMMENT (POS COMENT)	Set position comment.	Off Duty / En Route / In Service / Returning / Committed / Special / Priority / Custom 0 to Custom 6 / EMERGENCY!
97 SmartBeaconing (SmartBCN)	Smart beaconing settings.	STATUS: OFF / TYPE1 / TYPE2 / TYPE3 * For details on the following setting items for each type, refer to the APRS Instruction Manual. LOW SPD, HIGH SPD, SLOW RATE, FAST RATE, TURN ANGL, TURN SLOP, TURN TIME
98 SORT FILTER (SORT FLTR)	Sort function / Filter function settings.	SORT: TIME / CALLSIGN / DISTANCE FILTER: ALL / MOBILE / FREQUENCY / OBJECT / ITEM / DIGIPEATER / VoIP / WEATHER / YAESU / OTHER PACKET / CALL RINGER / RANGE RINGER / 1200 bps / 9600 bps
99 VOICE ALERT (VOICE ALT)	Voice alert function settings.	VOICE ALERT: NORMAL / TONE SQL DCS / RX-TSQL / RX-DCS TONE SQL: 67.0Hz - 100.0Hz - 254.1Hz DCS: 023 - 754
100 STATION LIST (STN LIST)	Displays the APRS Station list screen.	-
101 MESSAGE LIST (MSG LIST)	Displays the APRS Message list screen.	-
102 BEACON TX SELECT (BEACON SEL)	Beacon automatic transmit / Manual transmit switch.	MANUAL / AUTO / (SmartBeaconing)* * The option in the parentheses is available when the "97 SmartBeaconing" is TYPE1, TYPE 2 or TYPE 3, and the "93 MY POSITION SET" is GPS.
103 BEACON TX (BEACON TX)	Manual beacon transmission (one time)	-

Menu Number / Item (Display item name on the function list screen)	Description	Selectable options (Options in bold are the default settings)
--	-------------	--

SD CARD

104 BACKUP (BACKUP)		
WRITE TO SD	Saves the transceiver setting information to a microSD memory card.	
ALL MEMORY SETUP	Copies all data. Copies only the memory channels and backtrack position information. Copies only the set-up menu settings.	
READ FROM SD	Loads the information to the transceiver from a microSD memory card.	
ALL MEMORY SETUP	Copies all data. Copies only the memory channels and backtrack position information. Copies only the set-up menu settings.	
105 MEMORY INFO (MEMORY INFO)	Displays the total capacity and free space of the MicroSD Card.	-
106 FORMAT (FORMAT)	Initializing the micro-SD card.	-

OPTION

107 Bluetooth (Requires optional Bluetooth® Unit BU-4) (Bluetooth)		
Bluetooth	Bluetooth headset setting.	OFF / ON
DEVICE	Bluetooth device list.	-
SAVE	Turn the Bluetooth save function ON or OFF.	OFF / ON
AUDIO	Set whether received audio is heard from both the Bluetooth® headset and the transceiver speaker, or only from the connected Bluetooth® device.	AUTO / FIX
108 VOICE MEMORY (Requires optional Voice Guide Unit FVS-2) (VOICE MEM)		
PLAY/REC	Recording operation settings.	FREE 5min / LAST 30sec
ANNOUNCE	Setting conditions for frequency announcement.	AUTO / OFF / MANUAL
LANGUAGE	Setting the language to announce.	ENGLISH / JAPANESE
VOLUME	Setting the announcement volume.	HIGH / MID / LOW
RX MUTE	Setting to mute received audio during announcements and playback.	ON / OFF
109 FVS REC (STN LST)	Start recording the received audio.	-
110 TRACK SELECT (TRACK SEL)	Selecting the audio track to play.	ALL / 1 - 8
111 PLAY (PLAY)	Start playing the recorded sound	-
112 STOP (STOP)	Stop recording / playing	-
113 CLEAR (CLEAR)	Erase all recorded audio	-
114 VOICE GUIDE (FVS GUIDE)	The frequency of the operating band will be announced.	-
115 USB CAMERA (Requires optional Microphone with Snapshot Camera MH-85A11U) (USB CAMERA)		
SIZE	Picture size setting.	160×120 / 320×240
QUALITY	Picture quality setting.	LOW / NORMAL / HIGH

Menu Number / Item (Display item name on the function list screen)	Description	Selectable options (Options in bold are the default settings)
---	-------------	--

→ CLONE

116 This → Other (CLONE TX)	Send all settings to other FTM-200D	-
117 Other → This (CLONE RX)	Receive all settings from other FTM-200D	-

↺ RESET

118 CALLSIGN (CALLSIGN)	My call sign setting. (10 characters)	*****
119 MEMORY CH RESET (MCH RESET)	Erase registered memory channels.	-
120 APRS RESET (APRS RESET)	Return APRS settings to default.	-
121 CONFIG SET (CONFIG SET)	Save configuration.	-
122 CONFIG RECALL (CONFIG RCL)	Recall configuration.	-
123 SOFTWARE VERSION (SOFT VER)	Display the software version.	Main Ver. / Sub Ver. / DSP Ver.
124 FACTORY RESET (FCTRY RST)	Return all settings to factory default.	-

Setup Menu Operations

DISPLAY

1 FREQUENCY INPUT

In VFO mode, the screen for direct input of frequency is displayed, and in memory mode, the screen for direct input of Memory Channel number is displayed. Select the [MEMORY CH LIST] button on this screen and press DIAL knob to open the memory channel list screen.

1. Press and hold the [F MENU] key → [1 FREQUENCY INPUT] → Press the **DIAL** knob
2. Rotate the **DIAL** knob to select a number and press the **DIAL** knob to enter.

NOTE: This item is registered in the custom function menu by factory setting.

2 LCD BRIGHTNESS

The brightness of the display and key buttons can be changed.

1. Press and hold the [F MENU] key → [2 LCD BRIGHTNESS] → Press the **DIAL** knob
2. Rotate the **DIAL** knob to select the brightness from the following 3 levels:
MIN / MID / **MAX**

3 FREQUENCY COLOR

The display color of the frequency of the operation band can be changed.

1. Press and hold the [F MENU] key → [3 FREQUENCY COLOR] → Press the **DIAL** knob
2. Rotate the **DIAL** knob to select the display color:
WHITE / BLUE / RED

4 BAND SCOPE

Set the number of channels to be displayed when the BAND SCOPE function is used.

1. Press and hold the [F MENU] key → [4 BAND SCOPE] → Press the **DIAL** knob
2. Rotate the **DIAL** knob to select the number of channels to search.

WIDE	61 channels (VFO mode), 21 channels (Memory mode)
NARROW	31 channels (VFO mode), 11 channels (Memory mode)

Refer to the Operating Manual for details.

5 LOCATION INFO

Set the display presentation on the smart navigation screen.

1. Press and hold the [F MENU] key → [5 LOCATION INFO] → Press the **DIAL** knob
2. Rotate the **DIAL** knob to select what is displayed on the screen.

COMPASS	Displays the compass.
NUMERIC	Displays the latitude and longitude.

6 COMPASS

Set the compass display.

1. Press and hold the [F MENU] key → [6 COMPASS] → Press the DIAL knob
2. Rotate the DIAL knob to select the desired setting.

HEADING UP	The heading direction is indicated at the top of the compass.
NORTH UP	The north direction is indicated at the top of the compass.

The default setting: HEADING UP

7 DISPLAY MODE

Displays screens for additional functions.

1. Press and hold the [F MENU] key → [7 DISPLAY MODE] → Press the DIAL knob
2. Rotate the DIAL knob to select the function to be displayed then press the DIAL knob.
BACKTRACK : Backtrack screen (Page 18)
ALTITUDE : Altitude screen (Page 22)
TIMER/CLOCK : Timer/Clock screen (Page 23)
GPS INFORMATION : GPS Information screen (Page 21)




TX

8 TX POWER

Set the transmit power output.

1. Press and hold the [F MENU] key → [8 TX POWER] → Press the DIAL knob
2. Rotate the DIAL knob to select the TX power output.

“LOW” ↔ “MID” ↔ “HIGH”

HIGH  50 W	MID  25 W	LOW  5 W
--	---	--

NOTE: This item is registered in the custom function menu by factory setting.

9 AMS TX MODE

When operating in the AMS function, the transmit mode may be selected:

1. Press and hold the [F MENU] key → [9 AMS TX MODE] → Press the DIAL knob
2. Rotate the DIAL knob to select the AMS transmit mode.

Transmit Mode	Transmit	Receive
AUTO (default)	Automatically transmits in the communication mode selected by the AMS function.	Automatically selects the receive mode corresponding to the received signal.
TX FM FIXED	Always transmits in the analog FM mode.	
TX DN FIXED (TX DIGITAL)	Always transmits in the DN mode.	

Refer to the Operating Manual for details.

10 MIC GAIN

The sensitivity (gain) of the microphone can be adjusted.

1. Press and hold the [F MENU] key → [10 MIC GAIN] → Press the **DIAL** knob
2. Rotate the **DIAL** knob to select the desired setting.

The sensitivity can be selected from the following 5 levels.

MIN / LOW / **NORMAL** / HIGH / MAX

11 VOX

Set the VOX (Voice Operated Transmit) function ON/OFF, and VOX delay time.

1. Press and hold the [F MENU] key → [11 VOX] → Press the **DIAL** knob

Refer to the Operating Manual for details.

12 AUTO DIALER

Set method (Auto or Manual) to transmit the registered DTMF code.

1. Press and hold the [F MENU] key → [12 AUTO DIALER] → Press the **DIAL** knob
2. Rotate the **DIAL** knob to select the desired setting.

ON	The auto dialer function is enabled.
OFF	The auto dialer function is disabled.

For details, see “Setting the auto dialer function” (page 16).

13 TOT

The transceiver will automatically return to receive after transmitting continuously for a specified time.

1. Press and hold the [F MENU] key → [13 TOT] → Press the **DIAL** knob
2. Rotate the **DIAL** knob to select the desired setting.

OFF / 1 min / 2 min / 3 min / 5 min / 10 min / 15 min / 20 min / 30 min



When the time-out-timer is active, a beep is sounded when a continuous transmission nears the set time. About 10 seconds later, the transceiver returns to the receive mode.

The default settings depend on the transceiver version.

14 DIGITAL VW

Set the digital voice VW (Voice FR) mode selection.

1. Press and hold the [F MENU] key → [14 DIGITAL VW] → Press the **DIAL** knob
2. Rotate the **DIAL** knob to select the desired setting.

ON	The digital voice VW (Voice FR) mode may be selected.
OFF	The digital voice VW (Voice FR) mode may not be selected.

RX

15 FM BANDWIDTH

The modulation can be set to half of its usual level.

Select "WIDE" for normal amateur radio operation.

1. Press and hold the [F MENU] key → [15 FM BANDWIDTH] → Press the **DIAL** knob
2. Rotate the **DIAL** knob to select the desired setting.

WIDE	Normal transmit modulation level.
NARROW	Modulation is half of the normal level.

16 RX MODE

Manually switch to a suitable mode (radio wave type) for the operating frequency band.

1. Press and hold the [F MENU] key → [16 RX MODE] → Press the **DIAL** knob
2. Rotate the **DIAL** knob to select the mode.

AUTO	Automatically switches the modulation mode to match the frequency band.
FM	Switches to the FM mode.
AM	Switches to the AM mode.

MEMORY

17 HOME

Recalls the home channel of the current band.

1. Press and hold the [F MENU] key → [17 HOME] → Press the **DIAL** knob

NOTE: This item is registered in the custom function menu by factory setting.

18 MEMORY LIST

Displays the Memory channel list screen.

1. Press and hold the [F MENU] key → [18 MEMORY LIST] → Press the **DIAL** knob

19 MEMORY LIST MODE

Set the memory channel list to be displayed by rotating the **DIAL** knob, confirming the contents of the memory, and then press **DIAL** knob to recall the memory channel.

1. Press and hold the [F MENU] key → [19 MEMORY LIST MODE] → Press the **DIAL** knob
Refer to the Operating Manual for details.

20 PMG CLEAR

Cancel the registration of all PMG channels.

1. Press and hold the [F MENU] key → [20 PMG CLEAR] → Press the **DIAL** knob
The memory channel list appears.

Refer to the Operating Manual for details.

CONFIG

21 BEEP

Adjust the volume of the beep that sounds when a key is pressed.

1. Press and hold the [F MENU] key → [21 BEEP] → Press the **DIAL** knob
2. Rotate the **DIAL** knob to select the desired setting.
The Beep volume can be selected from 3 levels.
OFF / **LOW** / HIGH

22 BAND SKIP

Set the band selected when the [BAND GRP] key is pressed.

1. Press and hold the [F MENU] key → [22 BAND SKIP] → Press the **DIAL** knob
2. Rotate the **DIAL** knob to select the band to be set with a press the **DIAL** knob.
3. Rotate the **DIAL** knob to set "ON" (selectable) or "OFF" (not selectable).
AIR: OFF / **ON** (108MHz - 137MHz)
VHF: OFF / **ON** (137MHz - 174MHz)
UHF: OFF / **ON** (400MHz - 480MHz)
OTHER: OFF / **ON** (174MHz - 400MHz, 480MHz - 999.995MHz)

23 RPT ARS

Set the auto repeater shift function.

1. Press and hold the [F MENU] key → [23 RPT ARS] → Press the **DIAL** knob
2. Rotate the **DIAL** knob to select the desired setting.

AUTO	The auto repeater shift function is enabled.
OFF	The auto repeater shift function is disabled.

NOTE: This item is registered in the custom function menu by factory setting.

24 RPT SHIFT

Set the direction of the repeater transmit shift setting.

1. Press and hold the [F MENU] key → [24 RPT SHIFT] → Press the **DIAL** knob
2. Rotate the **DIAL** knob to select the shift direction setting.

OFF	The transmit frequency will not shift.
-	The transmit frequency will shift down.
+	The transmit frequency will shift up.

25 RPT SHIFT FREQ

Set the repeater transmit shift offset frequency.

1. Press and hold the [F MENU] key → [25 RPT SHIFT FREQ] → Press the **DIAL** knob
2. Rotate the **DIAL** knob to select the desired repeater transmit shift offset frequency.
The offset can be set at 0.05 MHz intervals between 0.00 MHz and 99.95 MHz.
The default setting differs depending on frequency.

26 RPT REVERSE

The “reverse” operation temporarily reverses the transmit and receive frequencies. This permits checking to find if direct communication with the other station is possible.

1. Press and hold the [F MENU] key → [26 RPT REVERSE] → Press the **DIAL** knob
 - The transmit and receive frequencies are temporarily reversed (“reverse” state).
 - In the “reverse” state, the “-” or “+” blinks on the display.
2. To release the reverse state, repeat the above steps again.

NOTE: This item is registered in the custom function menu by factory setting.

27 MIC PROGRAM KEY

Functions can be assigned to the program keys (P2 to P4) on the provided microphone (SSM-85D).

1. Press and hold the [F MENU] key → [27 MIC PROGRAM KEY] → Press the **DIAL** knob
Refer to the Operating Manual for details.

28 DATE&TIME ADJUST

Set the date and time of the **FTM-200DR/DE** clock. In the factory default, the date and time are automatically set when acquiring the GPS signals, so in this case no manual setting is necessary.

1. Press and hold the [F MENU] key → [28 DATE&TIME ADJUST] → Press the **DIAL** knob
2. Press the **DIAL** knob to change the year → month → day → hour → minute.
3. Rotate the **DIAL** knob to change the setting.
4. When “minute” is set and the **DIAL** knob is pressed, the time becomes “00” and the date and time settings are confirmed.

Please note that the setting values will not be saved if the setup menu is exited during setting.

29 DATE&TIME FORMAT

1. Press and hold the [F MENU] key → [29 DATE&TIME FORMAT] → Press the **DIAL** knob
2. Rotate the **DIAL** knob to select [DATE] or [TIME].
3. Rotate the **DIAL** knob to change the setting.

DATE	yyyy/mmm/dd, dd/mmm/yyyy, yyyy/dd/mmm, mmm/dd/yyyy
TIME	24 hour / 12 hour

30 TIME ZONE

The FTM-200DR/DE clock time can be synchronized for the time zone with the time data (Coordinated Universal Time) from the GPS.

1. Press and hold the [F MENU] key → [30 TIME ZONE] → Press the **DIAL** knob
2. Rotate the **DIAL** knob to select the desired setting.

The time zone can be set at 0.5 hour intervals up to ±14 hours.

The default setting: UTC ±0:00

31 STEP

Set the frequency step when the tuning knob is turned, or when the key is pressed.

1. Press and hold the [F MENU] key → [31 STEP] → Press the DIAL knob

Refer to the Operating Manual for details.

32 CLOCK TYPE

The CPU clock signal can be changed so that an internal spurious signal is not heard by the receiver. Select "A" during normal operation.

1. Press and hold the [F MENU] key → [32 CLOCK TYPE] → Press the DIAL knob
2. Rotate the DIAL knob to select the desired setting.

A	The clock shift operation will automatically switch ON and OFF.
B	The clock shift will always be kept in operation.

33 UNIT

Set the units of measure to display the altitude, distance, and speed.

1. Press and hold the [F MENU] key → [33 UNIT] → Press the DIAL knob
2. Rotate the DIAL knob to select the desired setting.

INCH	Display units in the Imperial/USA system.
METRIC	Display units in the Metric system.

The default settings depend on the transceiver version.

34 APO

The transceiver can be set to automatically power OFF when there is no operation for a period.

1. Press and hold the [F MENU] key → [34 APO] → Press the DIAL knob
2. Rotate the DIAL knob to select the desired setting.

OFF	Does not turn the power OFF automatically.
0.5 hour to 12 hour	Turns the power OFF when no operation is performed for a specified time.

35 GPS DATUM

Set the geodetic GPS positioning standard reference system.

1. Press and hold the [F MENU] key → [35 GPS DATUM] → Press the DIAL knob
2. Rotate the DIAL knob to select the desired setting.

WGS-84	Positions using the global geodetic reference system. This is being used as a standard all around the world.
TOKYO MEAN	Positions using the Japanese geodetic reference system. When positioning in Japan (Tokyo), the error can be made smaller.



Select "WGS-84" for the normal operation.

36 GPS DEVICE

Choose whether to use the built-in GPS or an external GPS device.

1. Press and hold the [F MENU] key → [36 GPS DEVICE] → Press the **DIAL** knob
2. Rotate the **DIAL** knob to select the desired setting.

INTERNAL	Uses built-in GPS.
EXTERNAL	Uses GPS data from an external GPS device connected to the EXT GPS jack on the front panel.



The data transmission speed of the EXT GPS jack is 9600bps and cannot be changed.

37 GPS LOG

Set the time interval for recording GPS position information to the microSD card.

1. Press and hold the [F MENU] key → [37 GPS LOG] → Press the **DIAL** knob
2. Rotate the **DIAL** knob to select the time interval

OFF / 1 sec / 2 sec / 5 sec / 10 sec / 30 sec / 60 sec

If “OFF” is selected, no GPS Information is saved to the microSD memory card.



- Data saved to the microSD memory card is saved in yymmddhhmmss.log format.
 - Saved data may be viewed by using OEM PC applications*.
- *Yaesu does not provide technical support for PC applications.
-

AUDIO

38 RECORDING

Set the voice recording function.

1. Press and hold the [F MENU] key → [38 RECORDING] → Press the **DIAL** knob
- Refer to the Operating Manual for details.

39 REC/STOP

Starts or stops voice recording.

1. Press and hold the [F MENU] key → [39 REC/STOP] → Press the **DIAL** knob
- Refer to the Operating Manual for details.

SIGNALING

40 DTMF

Select the registered DTMF memory 0 to 9 and press **PTT** to automatically send the DTMF code.

1. Press and hold the [F MENU] key → [40 DTMF] → Press the **DIAL** knob
2. Rotate the **DIAL** knob to select the desired DTMF memory (1 to 9).
3. Press **PTT**.

For details, see “Transmitting DTMF code automatically using DTMF memory” (page 16).

NOTE: This item is registered in the custom function menu by factory setting.

41 DTMF MEMORY

Register the DTMF memory (maximum 16 digits, 9 channels) for automatic transmission with the auto dialer.

1. Press and hold the [F MENU] key → [41 DTMF MEMORY] → Press the **DIAL** knob
For details, see “Registering the DTMF memory” (page 16).

42 SQL TYPE

Selecting the squelch type in the analog FM mode.

1. Press and hold the [F MENU] key → [42 SQL TYPE] → Press the **DIAL** knob
For details, see “Selecting the squelch type in the analog FM mode” (page 9).

NOTE: This item is registered in the custom function menu by factory setting.

43 TONE SQL FREQ / DCS CODE

Set the tone frequency or DCS code.

1. Press and hold the [F MENU] key → [43 TONE SQL FREQ]* or [43 DCS CODE]* → Press the **DIAL** knob

*The item name changes automatically depending on the setting of “42 SQL TYPE”.

NOTE: This item is registered in the custom function menu by factory setting.

44 SQL EXPANSION

The squelch type can be set separately for transmit and receive.

1. Press and hold the [F MENU] key → [44 SQL EXPANSION] → Press the **DIAL** knob
2. Rotate the **DIAL** knob to select the desired setting.

ON	Add squelch types for signaling.
OFF	Does not add squelch types for signaling.

45 PAGER CODE

The new pager code permits calls to specific stations only.

1. Press and hold the [F MENU] key → [45 PAGER CODE] → Press the **DIAL** knob
For details, see “Setting the Code for this Station” (page 12).

46 PR FREQUENCY

Set a no-communication squelch CTCSS tone from 300 Hz to 3000 Hz in 100 Hz steps.

1. Press and hold the [F MENU] key → [46 PR FREQUENCY] → Press the **DIAL** knob
2. Rotate the **DIAL** knob to select the desired CTCSS tone frequency.
300Hz to 3000Hz (100Hz steps)

47 BELL RINGER

The beep may be set to sound an alert when a call is received from another station.

1. Press and hold the [F MENU] key → [47 BELL RINGER] → Press the **DIAL** knob
For details, see “Notification of a Call from a Remote Station by the Bell Function” (page 13).

48 WX ALERT

Setting the weather Alert Feature, to notify of storms and hurricanes, ON or OFF.

1. Press and hold the [F MENU] key → [48 WX ALERT] → Press the **DIAL** knob
2. Press the **DIAL** knob to select the desired setting.

ON	Enables the Weather Alert Feature.
OFF	Disables the Weather Alert Feature.

SCAN

49 SCAN

Start or stop scanning for channels in VFO mode or Memory mode.

1. Press and hold the [F MENU] key → [49 SCAN] → Press the **DIAL** knob
Refer to the Operating Manual for details.

NOTE: This item is registered in the custom function menu by factory setting.

50 DUAL RCV MODE

Activate the Priority Scan function or A-B Dual Receive function.

1. Press and hold the [F MENU] key → [50 DUAL RCV MODE] → Press the **DIAL** knob
2. Rotate the **DIAL** knob to select the desired setting.

OFF / PRIORITY SCAN / A-B DUAL RECEIVE



To transmit and receive APRS or DATA communication on the Sub Band (lower side), it is necessary to set [A-B DUAL RECEIVE] in "50 DUAL RCV MODE".

Refer to the Operating Manual for details.

51 DUAL RX INTERVAL

Set the time interval to check for a signal on the priority channel (HOME channel) during the priority scan.

1. Press and hold the [F MENU] key → [51 DUAL RX INTERVAL] → Press the **DIAL** knob
2. Rotate the **DIAL** knob to select the desired setting.

0.5sec / 1.0sec / 2.0sec / 3.0sec / **5.0sec** / 7.0sec / 10sec

Refer to the Operating Manual for details.

52 PRIORITY REVERT

Set to always Transmit on the priority channel (HOME channel) when PTT is pressed during dual receive operation.

1. Press and hold the [F MENU] key → [52 PRIORITY REVERT] → Press the **DIAL** knob
2. Rotate the **DIAL** knob to select the desired setting.

ON	Always send on the priority channel (HOME channel).
OFF	Sends at the currently displayed frequency.

53 SCAN RESUME

Set the time interval to resume scanning after a received signal ends during scanning.

1. Press and hold the [F MENU] key → [53 SCAN RESUME] → Press the **DIAL** knob
2. Rotate the **DIAL** knob to select the desired setting.

BUSY	Continue receiving the frequency until the signal disappears.
HOLD	Stop scanning and receive that frequency.
1 sec / 3 sec / 5 sec	Restart scanning after receiving the frequency for the set amount of time.

The default settings depend on the transceiver version.

DIGITAL

54 DIGITAL POPUP

Set the time duration to display the remote station information (such as the call sign) on the LCD.

1. Press and hold the [F MENU] key → [54 DIGITAL POPUP] → Press the **DIAL** knob
2. Rotate the **DIAL** knob to select the desired setting.

OFF	The remote station information is not displayed.
2 sec - 10 sec - 60 sec	Set the time duration to display the remote station information.
CONTINUE	The remote station information is continuously displayed.

55 LOCATION SERVICE

Set whether to transmit this station position in digital mode.

1. Press and hold the [F MENU] key → [55 LOCATION SERVICE] → Press the **DIAL** knob
2. Rotate the **DIAL** knob to select the desired setting.

ON	Send the location information of this station.
OFF	Do not send the location information of this station.

56 STANDBY BEEP

Set whether to emit the standby beep sound when the remote station completes transmission.

1. Press and hold the [F MENU] key → [56 STANDBY BEEP] → Press the **DIAL** knob
2. Rotate the **DIAL** knob to select the desired setting.

ON	Emits the standby beep sound.
OFF	Does not emit the standby beep sound.

GM

For details on setting each item, refer to "FTM-200DR/DE GM Function Instruction Manual" which is available on Yaesu website.

WIRES-X

For details on setting each item, refer to “FTM-200DR/DE WIRES-X Instruction Manual” which is available on Yaesu website.

DATA

66 COM PORT

Set the communication speed and parameters for the COM port DATA jack on the rear panel of the transceiver.

1. Press and hold the [F MENU] key → [66 COM PORT] → Press the **DIAL** knob
The parameter settings screen appears.

SPEED

Setting the communication speed.

1. Rotate the **DIAL** knob to select [SPEED] then press the **DIAL** knob.
2. Rotate the **DIAL** to select the desired communication speed then press the **DIAL** knob.

The setting switches as follows:

4800bps / **9600bps** / 19200bps / 38400bps / 57600bps

OUTPUT

Select the function of COM port output.

1. Rotate the **DIAL** knob to select [OUTPUT] then press the **DIAL** knob.
2. Rotate the **DIAL** to select the data output type then press the **DIAL** knob.

OFF	The COM port is deactivated.
GPS OUT	Outputs the GPS receiver satellite data.
PACKET	Outputs the AX.25 packet data from the internal modem.
WAYPOINT	Outputs the APRS packet WAYPOINT beacon information of other stations acquired from the received data.

WP FORMAT

Set the number of digits for CALLSIGN information of APRS BEACON stations, attached to various data, when WAYPOINT is selected for OUTPUT.

1. Rotate the **DIAL** knob to select [WP FORMAT] then press the **DIAL** knob.
2. Press the **DIAL** to select the number of digits of the APRS beacon station call sign information which is added to each data.

NMEA 9	Displays the last 9 digits of the call sign (Example: JA1YOE-14 is output as “JA1YOE-14”).
NEMA 8	Displays the last 8 digits of the call sign (Example: JA1YOE-14 is shortened to “A1YOE-14”).
NMEA 7	Displays the last 7 digits of the call sign (Example: JA1YOE-14 is shortened to “1YOE-14”).
NMEA 6	Displays the last 6 digits of the call sign (Example: JA1YOE-14 is shortened to “YOE-14”).

WP FILTER

Sets the type of beacon to be output when “WAYPOINT” is selected in “OUTPUT”.

1. Rotate the **DIAL** knob to select [**WP FILTER**] then press the **DIAL** knob.
2. Rotate the **DIAL** to select the beacon type you want to output then press the **DIAL** knob.

ALL	Outputs all the received beacons.
MOBILE	Outputs only mobile station beacons.
FREQUENCY	Outputs only the beacons of stations with frequency information.
OBJECT/ITEM	Outputs only the beacons of object stations or item stations.
DIGIPEATER	Outputs only the beacons of digital repeater stations.
VoIP	Outputs only beacons of VoIP stations such as WIRES.
WEATHER	Outputs only beacons of the weather stations.
YAESU	Outputs only beacons of stations using Yaesu transceivers.
CALL RINGER	Outputs only the information of call sign ringer stations which are set from [77 APRS RINGER (CS)] in the APRS Setup menu.
RANGE RINGER	Outputs only the information of stations recognized as an approaching station by the [76 APRS RINGER] range ringer function in the APRS Setup menu.

67 DATA BAND

Set the operating band of the APRS (internal modem) and data communication (when using the DATA jack at the back of the main body).

1. Press and hold the [**F MENU**] key → [**67 DATA BAND**] → Press the **DIAL** knob



To transmit and receive APRS or DATA communication on the sub band side (lower side), it is necessary to set [A-B DUAL RECEIVE] in “50 DUAL RCV MODE”.

APRS

Sets the APRS operating band.

1. Rotate the **DIAL** knob to select [**APRS**] then press the **DIAL** knob.
2. Rotate the **DIAL** to select the APRS operating band, then press the **DIAL** knob.

MAIN BAND	The main band will be selected.
SUB BAND	The sub-band will be selected.
A-BAND FIX	The upper band will be selected.
B-BAND FIX	The lower band will be selected.

DATA

Sets the data transmission operating band.

1. Rotate the **DIAL** knob to select [**DATA**] then press the **DIAL** knob.
2. Rotate the **DIAL** to select the DATA communication operating band, then press the **DIAL** knob.

MAIN BAND	The main band will be selected.
SUB BAND	The sub-band will be selected.
A-BAND FIX	The upper band will be selected.
B-BAND FIX	The lower band will be selected.

68 DATA SPEED

Set the baud rate of the APRS (internal modem), and the data communication (when using the DATA jack at the back of the main body).

1. Press and hold the [F MENU] key → [68 DATA SPEED] → Press the **DIAL** knob
The screen for the detailed settings will be displayed.

APRS

Sets the APRS packet communication speed.

1. Rotate the **DIAL** knob to select [APRS] then press the **DIAL** knob.
2. Rotate the **DIAL** to select the APRS communication speed, then press the **DIAL** knob.

The setting switches as follows:

1200 bps / 9600 bps

DATA

Sets the APRS data communication speed.

1. Rotate the **DIAL** knob to select [DATA] then press the **DIAL** knob.
2. Rotate the **DIAL** to select the data communication speed, then press the **DIAL** knob.

The setting switches as follows:

1200 bps / 9600 bps

69 DATA SQL

Sets the output status (during transmission) of the PK SQL (squench control) terminal (6 pin) on the DATA Jack.

1. Press and hold the [F MENU] key → [69 DATA SQL] → Press the **DIAL** knob
2. Rotate the **DIAL** knob to select the desired setting.

TX ON	The SQL terminal becomes active during transmission.
TX OFF	The SQL terminal does not become active during transmission.

- The action to be taken when the receive band specified using [DATA] under “67 DATA BAND” in the DATA set-up menu is ready to transmit is set here.
- When this is set to ON, transmissions of external devices such as TNC can be suppressed.

APRS

The APRS of the transceiver is a communication system for data such as messages and station positions using the APRS format. Refer to the separate Operating Manual APRS Edition for details (download the manual from the YAESU website).

SD CARD

104 BACKUP

The transceiver settings information can be saved to a microSD memory card, also the saved information can be loaded to the transceiver.

1. Press and hold the **[F MENU]** key → **[104 BACKUP]** → Press the **DIAL** knob
2. Rotate the **DIAL** knob to select the operation to be performed.

WRITE TO SD	Saves the transceiver setting information to a microSD memory card.
READ FROM SD	Loads the information to the transceiver from a microSD memory card.

3. Press the **DIAL** knob.
The copy direction selection screen will be displayed.
4. Rotate the **DIAL** knob to select the file to be copied, then press the **DIAL** knob.
The confirmation screen will be displayed.

ALL	Copies all data.
MEMORY	Copies only the memory channels and backtrack position information.
SETUP	Copies only the set-up Menu settings.

5. Rotate the **DIAL** knob to select **[OK]**, then press the **DIAL** knob.
“Completed” will be displayed when the copying is completed.


105 MEMORY INFO

Display information from SD Memory Card.

1. Press and hold the **[F MENU]** key → **[105 MEMORY INFO]** → Press the **DIAL** knob
The bar graph and the following information will be displayed:
Used space : xx,xxx MB
Free space : xx,xxx MB
Capacity : xx,xxx MB

106 FORMAT

Initialize a new micro-SD memory card.

 Formatting a microSD memory card erases all data saved on it. Before formatting the card, be sure to check for data and save it before formatting.

1. Press and hold the **[F MENU]** key → **[106 FORMAT]** → Press the **DIAL** knob
The confirmation screen will be displayed.
2. To format the microSD card, turn the **DIAL** knob to select **[ON]** and then press the **DIAL** knob.

Refer to the Operating Manual for details.

OPTION

107 Bluetooth

Make Bluetooth® settings and connect to the optional Bluetooth Headset SSM-BT10 (Requires optional Bluetooth® UNIT BU-4).

1. Press and hold the [F MENU] key → [107 Bluetooth] → Press the **DIAL** knob
Refer to the Operating Manual for details.

108 VOICE MEMORY

Make settings related to the (optional) FVS-2 voice guide unit attached to the transceiver.

1. Press and hold the [F MENU] key → [108 VOICE MEMORY] → Press the **DIAL** knob
Refer to “Using the voice memory” (page 26) for details.

109 FVS REC

Start recording the received audio using the (optional) FVS-2 voice guide unit.

1. Press and hold the [F MENU] key → [109 FVS REC] → Press the **DIAL** knob
Refer to “Recording the receive audio” (page 27) for details.

110 TRACK SELECT

Select the track to play on the (optional) FVS-2 voice guide unit.

1. Press and hold the [F MENU] key → [110 TRACK SELECT] → Press the **DIAL** knob
Refer to “Selecting the track” (page 27) for details.

111 PLAY

Plays the audio recorded of the (optional) FVS-2 voice guide unit.

1. Press and hold the [F MENU] key → [111 PLAY] → Press the **DIAL** knob
Refer to “Replaying the recorded audio” (page 27) for details.

112 STOP

Stops playback or recording of the (optional) FVS-2 voice guide unit.

1. Press and hold the [F MENU] key → [112 STOP] → Press the **DIAL** knob

113 CLEAR

All audio recorded using the (optional) FVS-2 voice guide unit is erased at once.

1. Press and hold the [F MENU] key → [113 CLEAR] → Press the **DIAL** knob
Refer to “Erasing the recorded audio” (page 27) for details.

114 VOICE GUIDE

Use the (optional) FVS-2 voice guide unit to announce the operating frequency by voice.

1. Press and hold the [F MENU] key → [114 VOICE GUIDE] → Press the **DIAL** knob
Refer to “Voice announcement of the operating frequency” (page 28) for details.

115 USB CAMERA

Set the image size and quality for the optional microphone with camera MH-85A11U.

1. Press and hold the [F MENU] key → [115 USB CAMERA] → Press the **DIAL** knob
Refer to the Operating Manual for details.

CLONE

All the data saved on the transceiver directory may be copied (Cloned) to other FTM-200DR/DE transceivers.

For details, see “Copying the Radio Data to another Transceiver” (page 30).

RESET

You can restore the settings and memory contents of the transceiver to the factory default settings, and use the preset functions.

118 CALLSIGN

The call sign ID registered to the transceiver may be changed using the set menu.

1. Press and hold the **[F MENU]** key → **[118 CALLSIGN]** → Press the **DIAL** knob
2. Press the **DIAL** knob.
The first letter of the call sign ID blinks.
3. Rotate the **DIAL** knob to select the desired letter then press the **DIAL** knob.
The cursor moves to the right.
 - Up to 10 alphanumeric characters including hyphen and slash may be input.
4. Repeat step 3 to complete to inputting the new call sign.
5. Press and hold the **DIAL** knob.
The new call sign is displayed.
6. Press the **[DISP]** key.
Sets the call sign and returns the display to the previously viewed operating screen.

119 MEMORY CH RESET

Delete the registered data from the memory channels.

1. Press and hold the **[F MENU]** key → **[119 MEMORY CH RESET]**
2. Press the **DIAL** knob.
The confirmation screen will be displayed.
3. Rotate the **DIAL** knob to select **[OK]**, then press the **DIAL** knob.
Erase all memory channels and the transceiver will restart.

120 APRS RESET

Reset the APRS setting.

1. Press and hold the **[F MENU]** key → **[120 APRS RESET]** → Press the **DIAL** knob
2. Press the **DIAL** knob.
The confirmation screen will be displayed.
3. Rotate the **DIAL** knob to select **[OK]**, then press the **DIAL** knob.
Erase all APRS settings and it will restart automatically.

121 CONFIG SET

Current all settings can be registered to the preset.

1. Press and hold the **[F MENU]** key → **[121 CONFIG SET]** → Press the **DIAL** knob
2. Press the **DIAL** knob.
The confirmation screen will be displayed.
3. Rotate the **DIAL** knob to select **[OK]**, then press the **DIAL** knob.
“Completed” will be displayed when the preset registration is completed.

122 CONFIG RECALL

Recalls all settings registered in the preset.

1. Press and hold the **[F MENU]** key → **[122 CONFIG RECALL]** → Press the **DIAL** knob
2. Press the **DIAL** knob.
The confirmation screen will be displayed.
3. Rotate the **DIAL** knob to select **[OK]**, then press the **DIAL** knob.
The registered presets will be recalled, “Completed” will be displayed, and then the transceiver will automatically restart.

123 SOFTWARE VERSION

Display the software versions.

1. Press and hold the **[F MENU]** key → **[123 SOFTWARE VERSION]** → Press the **DIAL** knob
The software versions of “Main”, “Sub” and “DSP” are shown.


124 FACTORY RESET

To restore all transceiver settings and memory content to the factory defaults.

1. Press and hold the **[F MENU]** key → **[124 FACTORY RESET]** → Press the **DIAL** knob
The confirmation screen will be displayed.
2. Rotate the **DIAL** knob to select **[OK]** then press the **DIAL** knob.
When all information is erased, the transceiver will automatically restart, and the call sign input screen will be displayed.

The folder configuration of the micro-SD card

A commercially available microSD memory card may be inserted into the FTM-200DR/DE to save various data files. The parameters of each function are stored in the following folders.

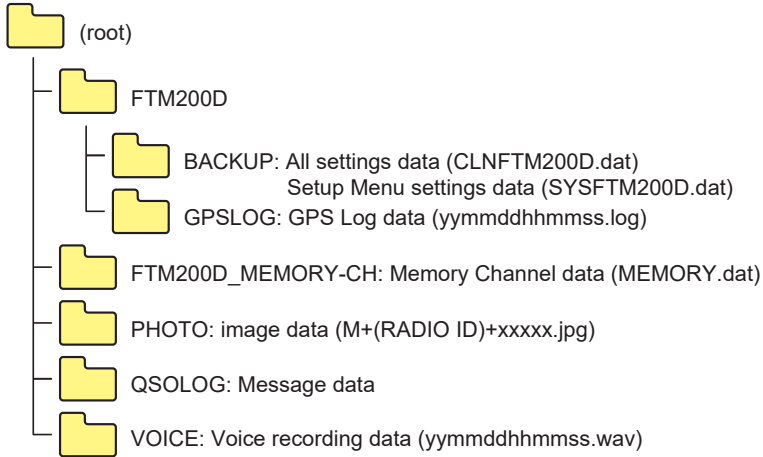

The [yymmddhhmmss] part of the file name consists of year (yy), month (mm), day (dd), hour (hh), minute (mm), and second (ss).

Care and maintenance

Turn the power OFF before wiping away any dust and stains on the transceiver with a dry soft cloth. For stubborn stains, slightly moisten a soft cloth and wring it out before using it to wipe away the stains.



Never use washing detergents and organic solvents (thinner, benzene, etc.). Doing so may result in paint flaking or damage to the transceiver finish.

Replacing the fuse

When the fuse of the DC power supply cable blows and the transceiver becomes inoperable, correct the cause of the problem, and then replace the fuse with a new one of the correct (15 Amp) rating.



When replacing the fuse, be sure to disconnect the power supply cable from the transceiver and from the external DC power supply.

● Replacing the fuse of the DC power supply cable


1. Prepare a new fuse.

Use a fuse with a rating of 15A.




Never attempt to use a fuse that is not of the specified rating


3. Open the fuse holder as shown in the diagram on the right.

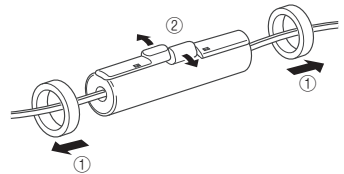

4. Remove the blown fuse.

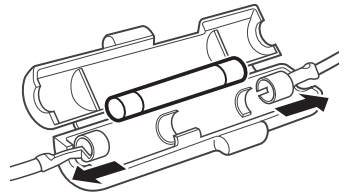

5. Attach the new fuse.
6. Close the fuse holder.

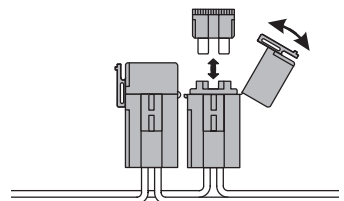

European version

Troubleshooting

Check the following before requesting repair services.

There is no power

- Is the external power supply connected correctly?

Connect the black wire to the negative (-) terminal and the red wire to the positive (+) terminal.

- Is the voltage and current capacity of the external power supply sufficient?

Check the voltage and current capacity of the external power supply.

Voltage: 13.8 V

Current capacity: 20 A or higher

- Is the fuse blown?

Replace the fuse.

There is no sound

- Is the squelch level or setting too high?

Adjust the squelch level when receiving weak signals.

- Is the volume low?

Increase the volume by turning the VOL knob in the clockwise direction.

- Is the tone squelch or DCS set to on?

When the tone squelch or DCS is turned on, no sound will be heard until signals containing the set tone frequency or DCS code corresponding to the set code are received.

- Is the C4FM digital mode on?

When the AMS function is on, the sound is not output until the transceiver receives an Analog FM mode signal. Also, when the DG-ID function is ON, and the DG-ID number to other than "00", the sound is not output until the transceiver receives a signal with a corresponding DG-ID number.

- Is the external speaker connected?

Properly connect a speaker with an impedance of 4 to 16 Ω .

- Is the Bluetooth® headset in use?

Turn OFF the power of the Bluetooth® headset, or turn OFF the Bluetooth® function using "OPTION" in the setup menu.

There is no transmission

- Is the PTT button pressed properly?

- Is the microphone connected correctly?

Plug the connector all the way into the MIC jack.

- Is the transmit frequency set to the amateur band?

Transmission outside the amateur band is not possible.

- Is the antenna or co-axial cable broken?

Replace the antenna or co-axial cable.

- Is the voltage of the external power supply normal?

When the voltage of the power supply drops during transmission, the transceiver may not run at full performance. Use a stable DC power supply with a voltage of 13.8 V and a current capacity of 15 A.

The keys or knobs do not operate

- Is the lock function activated?

Cancel the lock by briefly pressing the Power switch.



Copyright 2022
YAESU MUSEN CO., LTD.
All rights reserved.

No portion of this manual may be
reproduced without the permission of
YAESU MUSEN CO., LTD.

YAESU MUSEN CO., LTD.

Tennozu Parkside Building
2-5-8 Higashi-Shinagawa, Shinagawa-ku, Tokyo 140-0002 Japan

YAESU USA

6125 Phyllis Drive, Cypress, CA 90630, U.S.A.

YAESU UK

Unit 12, Sun Valley Business Park, Winnall Close
Winchester, Hampshire, SO23 0LB, U.K.